

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

[Manuals.plus](#) /

> [MYHGRC](#) /

> MYHGRC Universal Remote Control Instruction Manual for Smart TVs (Model: 811c6d99-5863-4193-bbcf-8b737a460dfe)

MYHGRC 811c6d99-5863-4193-bbcf-8b737a460dfe

MYHGRC Universal Remote Control Instruction Manual

Model: 811c6d99-5863-4193-bbcf-8b737a460dfe

Brand: MYHGRC

INTRODUCTION

This manual provides comprehensive instructions for the MYHGRC Universal Remote Control, designed for use with a wide range of Smart TVs including Samsung, TCL, Sharp, LG, Sony, Hitachi, Toshiba, Sanyo, and Hisense. Please read this manual carefully to ensure proper setup and operation of your new remote control.



Image: Front view of the MYHGRC Universal Remote Control, displaying all buttons and the brand logo.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image: Close-up view of the remote control's battery compartment with AAA batteries inserted, showing correct polarity.

2. Initial Use

This universal remote control is designed for immediate use with most compatible Smart TVs. After installing the batteries, point the remote control towards your TV and attempt to use basic functions such as Power, Volume, and Channel. If the remote does not respond, proceed to the troubleshooting section.

OPERATING INSTRUCTIONS

The MYHGRC Universal Remote Control features a standard layout for intuitive operation. Below is a guide to its primary functions:



Image: The remote control held in a hand, illustrating the ergonomic design and button accessibility.

Basic Functions

- **Power ():** Turns the TV on or off.
- **Source:** Cycles through input sources (HDMI, AV, etc.).
- **Set:** Used for advanced setup or programming (refer to troubleshooting if needed).
- **Number Buttons (0-9):** Direct channel selection.
- **Volume (+/-):** Adjusts the TV volume.
- **Channel (P+/P-):** Changes TV channels.
- **Mute:** Silences the TV audio.

Navigation and Menu Controls

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **Menu:** Opens the TV's main menu.
- **Exit:** Exits the current menu or screen.
- **Info:** Displays information about the current program or input.

Smart TV and Shortcut Buttons

This remote includes dedicated shortcut buttons for popular streaming services:

- **Netflix:** Direct access to Netflix.
- **YouTube:** Direct access to YouTube.
- **Prime Video:** Direct access to Amazon Prime Video.
- **Rakuten TV:** Direct access to Rakuten TV.
- **Hulu:** Direct access to Hulu.
- **Disney+:** Direct access to Disney+.

Note: Availability and functionality of these shortcut buttons may vary depending on your TV model and installed applications.

Additional Functions

- **Guide:** Opens the electronic program guide (EPG).
- **Fav:** Accesses favorite channels.
- **Sleep:** Sets a sleep timer for the TV.
- **Apps:** Opens the TV's application menu.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

MAINTENANCE

To ensure the longevity and optimal performance of your MYHGRC Universal Remote Control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your MYHGRC Universal Remote Control, try the following solutions:

- **Remote Not Responding:** Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary. Ensure there is a clear line of sight between the remote's infrared emitter and the TV's IR receiver.
- **Specific Buttons Not Working:** If only certain buttons are unresponsive, ensure the remote is pointed directly at the TV. If the issue persists, the remote may require a reset (remove batteries for 30 seconds, then reinsert).
- **TV Not Responding to Any Commands:** Verify that your TV is powered on. If the remote still does not work, it might not be fully compatible with your specific TV model, or there might be an issue with the TV's IR receiver.
- **Shortcut Buttons Not Launching Apps:** Ensure your Smart TV is connected to the internet and the respective applications are installed and updated. Some TV models may require initial setup or mapping for these buttons.

If these steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

| Feature | Detail |
|-------------------------|---|
| Brand | MYHGRC |
| Model Number | 811c6d99-5863-4193-bbcf-8b737a460dfe |
| Compatible Devices | Samsung, TCL, Sharp, LG, Sony, Hitachi, Toshiba, Sanyo, Hisense, Haier, Smart TVs |
| Special Features | Universal |
| Number of Items | 1 |
| Batteries Required | Yes (2 x AAA) |
| Batteries Included | No |
| Connector Type | Infrared |
| Connectivity Technology | Infrared |
| Number of Buttons | Approximately 20 (excluding number pad) |
| Controller Type | Button Control |
| Maximum Range | 10 Meters |
| Item Weight | 0.06 Kilograms |
| Color | Black |
| Package Dimensions | 17.9 x 4.8 x 2.3 cm |

WARRANTY AND SUPPORT

For warranty information and specific support inquiries, please refer to the documentation provided at the time of purchase or contact the seller directly. If you encounter quality problems during use, the manufacturer recommends contacting them for assistance.

Please retain your proof of purchase for any warranty claims.