

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Betty Crocker](#) /
- › [Betty Crocker BC-4325W 3.7-Qt Electric Stand Mixer Instruction Manual](#)

Betty Crocker BC-4325W

Betty Crocker BC-4325W 3.7-Qt Electric Stand Mixer Instruction Manual

Model: BC-4325W

INTRODUCTION

Thank you for purchasing the Betty Crocker 3.7-Qt Electric Stand Mixer. This appliance is designed to simplify your baking and cooking tasks with its powerful motor and versatile attachments. Please read this manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the mixer.
- Do not immerse the motor unit in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always operate the mixer on a dry, stable, and level surface.
- Ensure the mixer head is locked down before operation.

PRODUCT OVERVIEW AND COMPONENTS

The Betty Crocker Stand Mixer is designed for ease of use and efficient mixing. Familiarize yourself with its main components:



Image Description: A white Betty Crocker stand mixer shown with its stainless steel bowl, clear splash guard, and three attachments (flat beater with scraper, whipping whisk, and dough hook) displayed separately above the mixer. A wooden rolling pin, a bowl of flour, and two eggs are placed in front of the mixer, suggesting its use in baking.

Stylish and ergonomic design with tilting head



Image Description: A white Betty Crocker stand mixer with its head tilted back, revealing the hinge mechanism. A red arrow indicates the tilting motion, and text highlights the 'Stylish and ergonomic design with tilting head' and 'Easy To Use' features.

10 Speed Stand Mixer

with Variable Control



Image Description: A close-up of the Betty Crocker stand mixer's speed control dial, showing settings from 0 to 10. A red arrow indicates the direction of rotation for increasing speed, emphasizing the '10 Speed Stand Mixer with Variable Control'.

3.7 Quart Stainless Steel Bowl

Dishwasher Safe



Image Description: A stainless steel mixing bowl with a dashed red line indicating its 3.7-quart capacity. A 'Dishwasher Safe' icon is also visible, highlighting the bowl's features.

Included Accessories:

Flat Beater with Scraper,
Whipping Whisk and Dough Hook



Flat Beater
with Scraper



salad



mashed potato



meat



Whipping Whisk



cake



cream puff



cheese cake



Dough Hook



pizza



bread



pasta

Image Description: An illustration detailing the three included attachments: the flat beater with scraper, the whipping whisk, and the dough hook. Each attachment is paired with example food items (salad, mashed potato, meat for flat beater; cake, cream puff, cheesecake for whisk; pizza, bread, pasta for dough hook) to demonstrate their intended uses.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Betty Crocker Stand Mixer Motor Unit
- 3.7-Quart Stainless Steel Mixing Bowl
- Clear Anti-Splash Cover
- Flat Beater with Scraper
- Whipping Whisk

- Dough Hook
- Instruction Manual

SETUP

1. **Placement:** Place the mixer on a clean, dry, stable, and level surface. The suction pads on the base will help secure the mixer during operation.
2. **Lift Mixer Head:** Press the head-release button (usually located on the side or back of the mixer) and lift the mixer head until it locks into the tilted position.
3. **Attach Mixing Bowl:** Place the stainless steel mixing bowl onto the base, aligning the bowl's locking tabs with the slots on the base. Rotate the bowl clockwise until it locks securely in place.
4. **Attach Accessory:** Select the desired attachment (flat beater, whisk, or dough hook). Insert the shaft of the attachment into the accessory port on the mixer head. Rotate and push upwards until it clicks into place.
5. **Lower Mixer Head:** Press the head-release button again and gently lower the mixer head until it locks into the operating position.
6. **Attach Splash Guard:** If desired, slide the clear anti-splash cover onto the mixing bowl. Ensure the pouring chute is positioned conveniently.

OPERATING INSTRUCTIONS

The Betty Crocker Stand Mixer features a 300-watt motor and 10 adjustable speeds for various mixing tasks.

1. **Add Ingredients:** Place your ingredients into the mixing bowl.
2. **Plug In:** Ensure the mixer is properly assembled and the speed dial is set to '0' (OFF) before plugging the power cord into a standard electrical outlet.
3. **Select Speed:** Turn the speed control dial to the desired setting. Start with a lower speed and gradually increase as needed to prevent splashing and ensure thorough mixing. The planetary mixing action ensures ingredients are evenly combined.
4. **Recommended Speeds for Attachments:**
 - **Dough Hook (Speeds 1-6):** Ideal for kneading heavy doughs like bread, pizza, and pasta. Start slow and increase as the dough forms.
 - **Flat Beater with Scraper (Speeds 2-7):** Suitable for mixing batters, combining ingredients for salads, mashing potatoes, or creaming butter and sugar.
 - **Whipping Whisk (Speeds 8-10):** Best for aerating ingredients such as whipping cream, egg whites, and light batters for soufflés.
5. **Monitor Mixing:** Use the clear splash guard to observe the mixing process and add ingredients through the pouring chute if necessary.
6. **Turn Off:** When mixing is complete, turn the speed dial back to '0' (OFF) and unplug the mixer from the outlet.
7. **Remove Bowl and Attachment:** Lift the mixer head, remove the attachment by pushing up and rotating, then unlock and remove the mixing bowl.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your stand mixer.

- **Before Cleaning:** Always unplug the mixer from the power outlet before cleaning.
- **Attachments and Bowl:** The stainless steel mixing bowl, flat beater with scraper, whipping whisk, and dough hook are all dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive cloth, then rinsed and dried thoroughly.
- **Mixer Body:** Wipe the exterior of the motor unit with a damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
- **Splash Guard:** Wash the clear splash guard with warm, soapy water and dry thoroughly.
- **Storage:** Store the mixer and its accessories in a clean, dry place.

TROUBLESHOOTING

If you encounter issues with your Betty Crocker Stand Mixer, refer to the following common problems and solutions:

- **Mixer does not turn on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check that the speed dial is turned to a setting other than '0'.
 - Verify that the mixer head is fully locked down into the operating position.
- **Attachments are difficult to install or remove:**
 - Ensure the mixer head is in the tilted-back position when attaching or removing accessories.
 - Make sure the attachment shaft is aligned correctly with the accessory port.
- **Ingredients are not mixing evenly:**
 - Ensure the correct attachment is being used for the type of ingredients.
 - Scrape down the sides of the bowl with a spatula periodically, especially when mixing thicker batters.
 - Adjust the speed setting to allow for better incorporation of ingredients.
- **Mixer is noisy or vibrating excessively:**
 - Ensure the mixer is placed on a stable, level surface.
 - Verify that the mixing bowl and attachment are securely locked in place.
 - Heavy or stiff doughs may cause more vibration; this is normal.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand	Betty Crocker
Model Name	Betty Crocker Stand Mixer, 3.7-Qt Electric Mixer with 10 Speeds
Item Model Number	BC-4325W
Color	White
Product Dimensions	8"D x 14"W x 12.6"H
Item Weight	5.7 pounds
Special Feature	Adjustable Speed Control

Capacity	3.7 Quarts
Controls Type	Knob
Is Dishwasher Safe	Yes (Bowl and Attachments)
Manufacturer	Betty Crocker
UPC	623287043258

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact Betty Crocker customer support directly. Details regarding specific warranty periods and terms are provided by the manufacturer.

If you require technical assistance or have questions not covered in this manual, please contact the manufacturer's customer service department or the retailer from whom you purchased the product.