

WsrrLun WQP4-6204

WsrrLun Countertop Dishwasher

MODEL: WQP4-6204 USER MANUAL

1. Introduction

Thank you for choosing the WsrrLun Countertop Dishwasher. This compact and efficient appliance is designed to provide convenient dishwashing solutions for apartments, small kitchens, snack bars, and other spaces where a full-sized dishwasher is not feasible. With its user-friendly touch controls and powerful cleaning capabilities, it ensures your dishes, cups, and cutlery are thoroughly cleaned.



Figure 1.1: WsrriLun Countertop Dishwasher in a kitchen setting.

This image shows the compact WsrriLun Countertop Dishwasher placed on a kitchen counter, demonstrating its small footprint and suitability for limited spaces.

2. Safety Precautions

Please read all instructions carefully before using the appliance. Retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the dishwasher is placed on a stable, level surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children away from the dishwasher during operation.
- Unplug the dishwasher from the power outlet when not in use or before cleaning.
- Do not operate the dishwasher if the power cord or plug is damaged.
- Ensure proper ventilation around the unit during operation.
- Avoid touching hot surfaces immediately after a wash cycle.
- Use only detergents specifically designed for dishwashers.

3. Product Components

The following components are included with your WsrrLun Countertop Dishwasher:

- 1 x Countertop Dishwasher Unit
- 1 x Drainage Pipe
- 1 x Water Inlet Pipe with Connector
- 1 x Pipe Clamp



Figure 3.1: Dishwasher unit and included accessories.

This image displays the WsrrLun Countertop Dishwasher alongside its essential accessories: the drainage pipe, water inlet pipe with connector, and a pipe clamp, all necessary for installation and operation.

4. Setup and Installation

The WsrrLun Countertop Dishwasher is designed for easy countertop installation. Follow these steps for proper setup:

1. **Placement:** Place the dishwasher on a flat, stable, and heat-resistant surface near a water source and drain. Ensure there is adequate space for ventilation.
2. **Drainage Pipe Connection:** Connect the drainage pipe to the drain outlet on the rear of the dishwasher. Secure it with the provided pipe clamp. Ensure the other end of the drainage pipe is directed into a sink or a suitable drain.
3. **Water Inlet Connection:** Connect the water inlet pipe to the water inlet port on the rear of the dishwasher. Connect the other end to a water faucet. For direct water injection, ensure any suction points are securely sealed to prevent leakage.
4. **Power Connection:** Plug the US standard power cord into a grounded 120V/60Hz electrical outlet.



Figure 4.1: Rear view with drainage and water inlet connections.

This image provides a rear view of the dishwasher, highlighting the connection points for the drainage pipe and water inlet pipe, crucial for proper setup.





Figure 4.2: US standard power plug.

A close-up view of the US standard power plug, indicating the type of electrical connection required for the dishwasher.

5. Operating Instructions

The dishwasher features user-friendly touch controls for easy operation.

1. **Loading Dishes:** Open the dishwasher door and pull out the dish rack. Load dishes, cups, and cutlery, ensuring they do not block the spray arms. The dishwasher has a generous capacity suitable for most household needs.
2. **Add Detergent:** Place the recommended amount of dishwasher detergent into the dispenser.
3. **Power On:** Press the **Power** button on the touch control panel to turn on the dishwasher.
4. **Select Program:** Use the **Program** button to cycle through available wash programs. Refer to the display for program indicators.
5. **Start Cycle:** Press the **Start/Pause** button to begin the selected wash cycle. The display will show the remaining time.

6. **Delay Start (Optional):** If desired, press the **Delay Start** button to set a delayed start time before pressing Start/Pause.



Figure 5.1: Front view and control panel.

This image displays the front of the dishwasher, highlighting the intuitive touch control panel with clearly marked buttons for Power, Delay Start, Program selection, and Start/Pause.



Figure 5.2: Dishwasher loaded with dishes.

The image shows the interior of the dishwasher with the door open, demonstrating how dishes, plates, and cutlery can be efficiently loaded into the rack for washing.

6. Maintenance and Care

Regular maintenance ensures optimal performance and longevity of your dishwasher.

- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Interior Cleaning:** Periodically clean the interior of the dishwasher, including the spray arms and filter, to remove any food debris or residue.
- **Drying Method:** This dishwasher utilizes a condensation drying method. After the high-temperature wash, residual heat in the appliance causes water vapor to condense on the cooler inner walls, allowing water droplets to fall into the sink and dry the tableware. This is a normal and efficient drying process.
- **Filter Cleaning:** The filter should be cleaned regularly to prevent blockages and ensure efficient drainage. Refer to the internal diagrams for filter location and removal.

7. Troubleshooting

If you encounter any issues with your dishwasher, please refer to the following common problems and solutions:

- **Dishwasher Not Drying Properly:** This model uses condensation drying. Ensure the wash cycle has completed fully. For best results, open the door slightly after the cycle to allow steam to escape and aid in drying.
- **Water Leakage:** Check all pipe connections (drainage and water inlet) to ensure they are securely fastened and there are no kinks or damage to the hoses. Verify that any water injection points are properly sealed.

- **Dishwasher Not Starting:** Ensure the power cord is securely plugged into a working outlet. Check if the door is fully closed and latched.
- **Unusual Noise:** Check for any foreign objects inside the dishwasher, such as cutlery or small dishes, that might be obstructing the spray arms.

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Feature	Specification
Model No.	WQP4-6204
Material	Engineering Plastic, Steel
Color	White
Control Method	Touch
Plug Type	US Standard
Installation Type	Countertop
Voltage/Frequency	120V/60Hz
Power	785W
Water Pressure	5.8~145 PSI
Waterproof Grade	IPX1
Power Consumption	0.53kW.h
Water Consumption	5.5L (232.47oz)
Noise Level	58dB
Product Size (L*W*H)	44*41.27*42.4cm (17.32*16.25*16.69in)
Net Weight	16kg (35.27lbs)
Country of Origin	China
UPC	756804721329

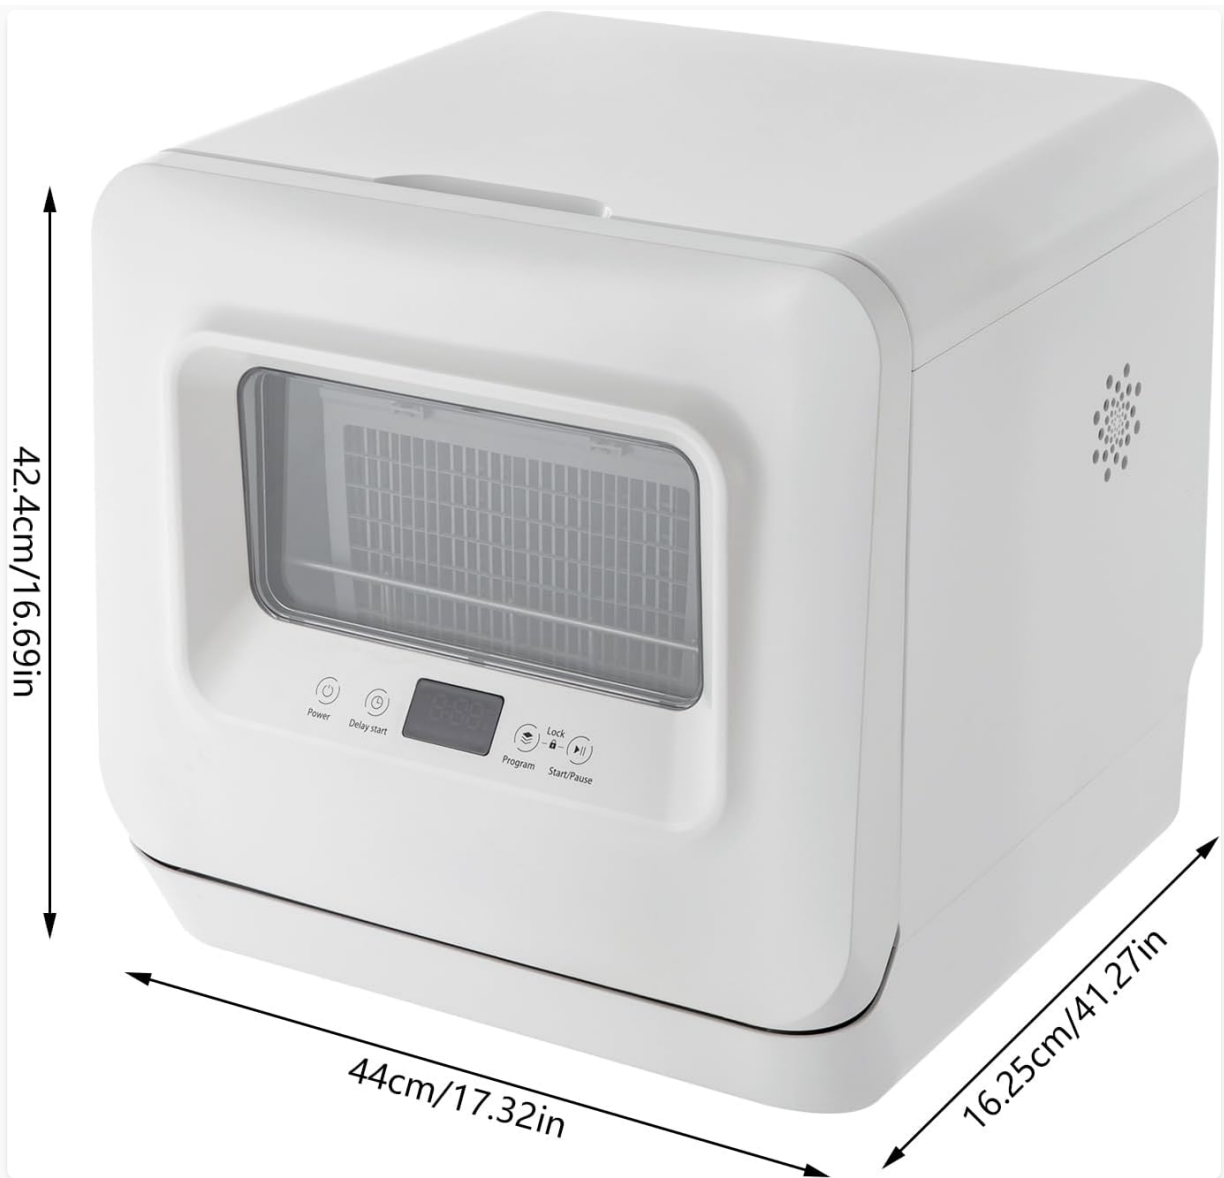


Figure 8.1: Product dimensions.

This image illustrates the key dimensions of the WsrrLun Countertop Dishwasher, including its length (44cm/17.32in), width (41.27cm/16.25in), and height (42.4cm/16.69in).

9. Warranty and Support

For warranty information, please refer to the purchase documentation or contact your retailer. If you require technical support or have questions not covered in this manual, please contact WsrrLun customer service through the retailer's platform or the official brand website.

No official product videos were available for inclusion in this manual.