Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- > Logitech POP ICON Combo Bluetooth Keyboard and Mouse User Manual

Logitech 920-013104

Logitech POP ICON Combo Bluetooth Keyboard and Mouse User Manual

Model: 920-013104

1. Introduction

Welcome to the user manual for your Logitech POP ICON Combo. This compact wireless keyboard and mouse set is designed for comfortable typing and efficient navigation across multiple devices. It features a stylish design, customizable keys, and quiet operation, making it suitable for various computing environments.



Image: The Logitech POP ICON Combo, featuring the keyboard and mouse in an off-white and orange color scheme.

2. KEY FEATURES

- **Multi-Device Connectivity:** Connects via Bluetooth to up to 3 devices (Windows, macOS, iPadOS, iOS, ChromeOS, Android) and switches between them with ease.
- Customizable Action Keys and Buttons: Personalize keyboard keys and mouse buttons using the Logi Options+ App for shortcuts and quick access functions.
- **Quiet Typing and Clicking:** Contoured, low-profile keyboard keys and Silent Touch Technology in the mouse ensure a quiet user experience.
- Extended Battery Life: The keyboard offers up to 3 years of battery life, and the mouse up to 2 years, with power-saving auto-sleep modes.
- Sustainable Design: Made with recycled plastic (37% to 70% depending on color) and packaged with FSC-certified paper.

3. PACKAGE CONTENTS

The Logitech POP ICON Combo package includes the following items:

· Logitech POP ICON Keyboard

- Logitech POP Mouse
- 2 AAA batteries (for keyboard)
- 1 AA battery (for mouse)
- User Documentation

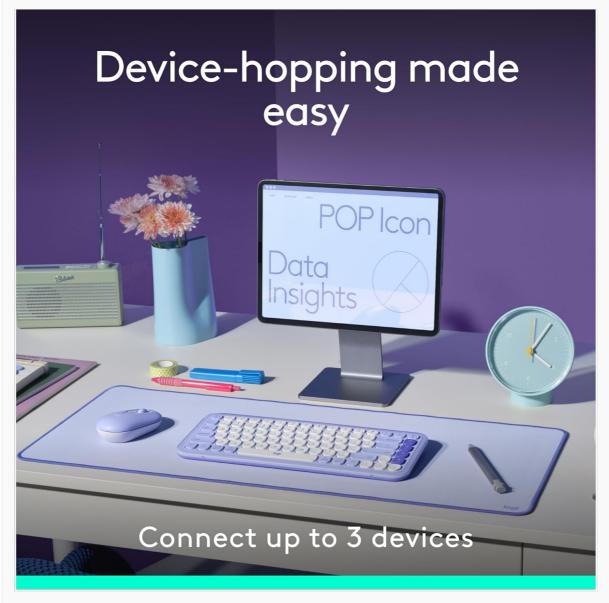


Image: Diagram showing the Logitech POP ICON Keyboard, Mouse, and included AAA and AA batteries, along with dimensions.

4. SETUP GUIDE

4.1. Inserting Batteries

The keyboard requires 2 AAA batteries and the mouse requires 1 AA battery. These are typically pre-installed or included in the package.

- 1. Locate the battery compartment on the underside of the keyboard and mouse.
- 2. Open the compartment cover.
- 3. Insert the batteries, ensuring correct polarity (+/-).
- 4. Close the compartment cover securely.

4.2. Bluetooth Pairing (Keyboard)

The POP ICON Keyboard can connect to up to three devices. Follow these steps to pair:

- 1. Turn on the keyboard using the power switch, usually located on the side or back.
- 2. Press and hold one of the Easy-Switch keys (F1, F2, or F3) for 3 seconds until the LED indicator above the key starts blinking rapidly. This indicates pairing mode.
- 3. On your device (computer, tablet, smartphone), open Bluetooth settings.
- 4. Select "POP ICON Keyboard" from the list of available devices.
- 5. If prompted, enter the displayed code on your keyboard and press Enter.
- 6. The LED will glow solid for 5 seconds, then turn off, indicating successful pairing.

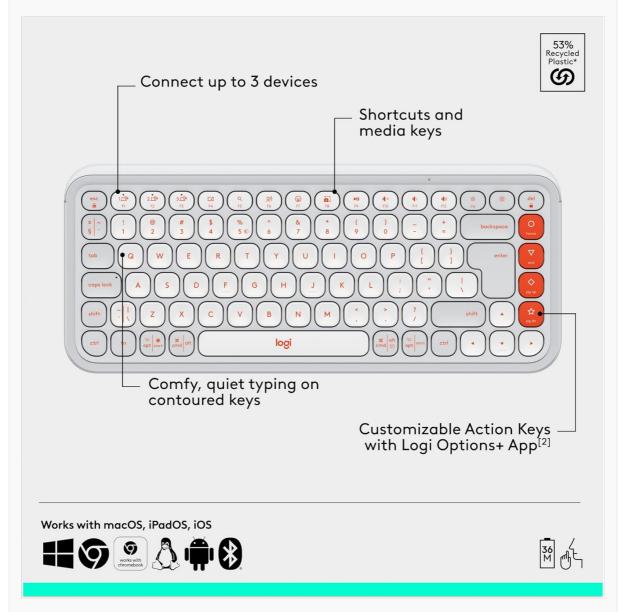


Image: Detailed view of the Logitech POP ICON Keyboard, highlighting the Easy-Switch keys (F1, F2, F3) and customizable Action Keys.

4.3. Bluetooth Pairing (Mouse)

The POP Mouse also supports multi-device connectivity. Follow these steps to pair:

- 1. Turn on the mouse using the power switch on its underside.
- 2. Press the Easy-Switch button on the bottom of the mouse for 3 seconds until the LED indicator starts blinking rapidly.
- 3. On your device, open Bluetooth settings.
- 4. Select "POP Mouse" from the list of available devices.
- 5. The LED will glow solid for 5 seconds, then turn off, indicating successful pairing.

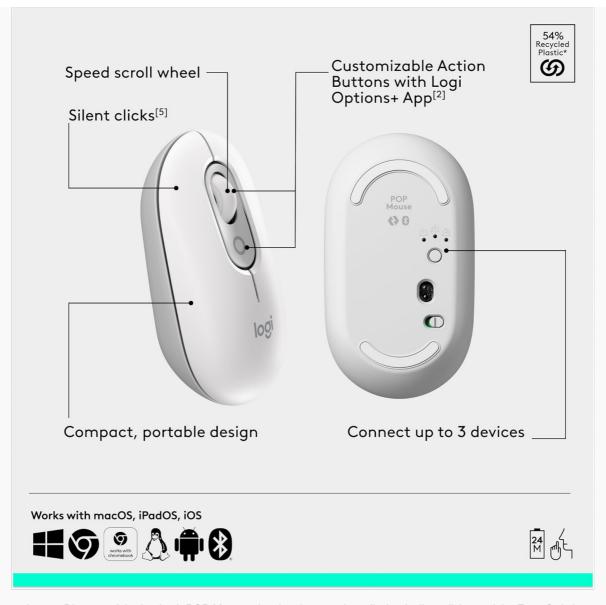


Image: Diagram of the Logitech POP Mouse, showing the speed scroll wheel, silent clicks, and the Easy-Switch button on the underside.

5. OPERATION

5.1. Switching Between Devices

To switch between paired devices, simply press the corresponding Easy-Switch key (F1, F2, or F3) on the keyboard or the Easy-Switch button on the bottom of the mouse. The active device's LED will illuminate briefly.



5.2. Customizing Keys and Buttons (Logi Options+ App)

Enhance your productivity by customizing the Action Keys on your keyboard and the top button on your mouse using the Logi Options+ App. This application allows you to assign specific functions, shortcuts, or even application-specific actions.

- Download and install the Logi Options+ App from the official Logitech website.
- Launch the app and select your POP ICON Keyboard or Mouse.
- Follow the on-screen instructions to customize the desired keys or buttons.



Image: Screenshot of the Logi Options+ App interface, showing options for customizing keyboard keys.

5.3. Smartwheel Functionality (Mouse)

The POP Mouse features a Smartwheel that automatically switches between line-by-line precision scrolling and super-fast free-spin scrolling. This allows for quick navigation through long documents or web pages.

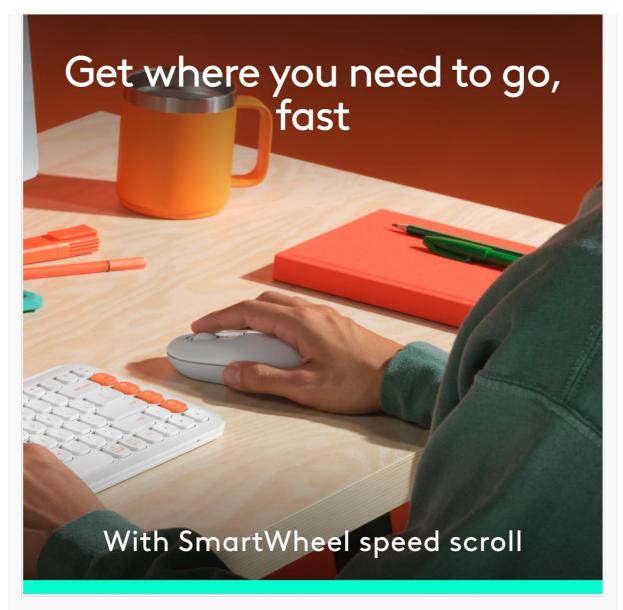


Image: A hand operating the Logitech POP Mouse, demonstrating the use of the Smartwheel for efficient scrolling.

6. MAINTENANCE

6.1. Battery Replacement

When the battery indicator light on your keyboard or mouse signals low power, or if performance degrades, replace the batteries.

- Keyboard: Replace with 2 new AAA alkaline batteries.
- Mouse: Replace with 1 new AA alkaline battery.

Refer to section 4.1 for instructions on opening the battery compartments and inserting new batteries.

6.2. Cleaning

To maintain optimal performance and appearance, clean your POP ICON Combo regularly.

- · Turn off both the keyboard and mouse before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild, non-abrasive cleaning solution.
- · Avoid spraying liquids directly onto the devices.
- Do not use harsh chemicals, solvents, or abrasive cleaners.

7. TROUBLESHOOTING

7.1. Device Not Connecting

- Ensure the keyboard/mouse is turned on and has fresh batteries.
- Verify that Bluetooth is enabled on your device.
- Make sure the keyboard/mouse is in pairing mode (blinking LED).
- Try re-pairing the device by removing it from your device's Bluetooth list and following the pairing steps again.
- Ensure your device's operating system is compatible (refer to Specifications).

7.2. Lag or Intermittent Connection

- Move the keyboard/mouse closer to your device.
- Avoid using the devices near strong interference sources (e.g., Wi-Fi routers, other wireless devices).
- Check for and install any available firmware updates for your keyboard/mouse via the Logi Options+ App.

7.3. Customizable Keys Not Working

- Ensure the Logi Options+ App is installed and running on your device.
- Verify that the keyboard/mouse is selected within the app.
- Check the assigned functions within the app to ensure they are correctly configured.

8. SPECIFICATIONS

Feature	Detail
Brand	Logitech
Model Number	920-013104
Connectivity Technology	Bluetooth
Compatible Devices	Laptop, Personal Computer, Smartphone, Tablet
Operating System Compatibility	Chrome OS, Linux, Windows 10, 11 or later, iPadOS 15 or later, iOS 15 or later, Android 12 or later, macOS 12 or later
Keyboard Battery Type	2 AAA batteries (included)
Keyboard Battery Life	Up to 3 years (may vary based on usage)
Mouse Battery Type	1 AA battery (included)
Mouse Battery Life	Up to 2 years (may vary based on usage)

Feature	Detail
Keyboard Dimensions (L x W x H)	12.77 in (324.51 mm) x 5.39 in (136.96 mm) x 0.86 in (22 mm)
Keyboard Weight (with batteries)	18.69 oz (530 g)
Mouse Dimensions (L x W x H)	4.13 in (104.8 mm) x 2.34 in (59.4 mm) x 1.37 in (34.7 mm)
Mouse Weight (with battery)	2.89 oz (82 g)
Special Features	Lightweight, Portable, Programmable Keys, Quiet Clicks, Smartwheel
Material	Plastic parts include 37% to 70% recycled plastic (color dependent)

9. WARRANTY AND SUPPORT

Logitech products are manufactured to high quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official Logitech support website.

For technical assistance, troubleshooting, or to download the latest version of the Logi Options+ App, please visit:www.logitech.com/support

You can also find FAQs and community forums on the Logitech support page.

© 2025 Logitech. All rights reserved.

Related Documents - 920-013104

