

## YISENCE 806

# YISENCE 4K Digital Camera Instruction Manual

Model: 806  
Brand: YISENCE

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the YISENCE 4K Digital Camera (Model 806). This camera is designed for capturing high-quality photos and videos, especially in underwater environments. It features 4K video recording, 56MP photo resolution, autofocus, and a dual-screen design for convenient selfies. Please read this manual thoroughly before using your camera to ensure proper operation and longevity.

## 2. WHAT'S IN THE BOX

---

- Camera Body
- Accessories (including a 32GB Micro SD card and USB-C charging cable)



Image: The YISENCE 4K Digital Camera in light blue, shown with an included 32GB Micro SD card, highlighting its compact design and dual screens.

### 3. KEY FEATURES

- **4K UHD Video & 56MP Photo Resolution:** Captures crisp, breathtaking detail for both aquatic and terrestrial adventures.
- **Autofocus Function:** Simplifies photo capture; half-press the shutter to activate autofocus. The focus frame on the screen will turn green when focus is achieved.
- **11FT Waterproof Design:** Ideal for snorkeling and underwater exploration, ensuring durability up to 11 feet depth.
- **Dual-Screen Selfie Capability:** Features front and rear screens for easy self-portraits and group photos.
- **High-Capacity 1250mAh Battery:** Provides approximately 70 minutes of continuous operation at 11FT underwater on a single charge.
- **Lightweight and Compact:** Easy to carry and operate, suitable for all ages.
- **Expandable Storage:** Supports Micro SD cards up to 128GB (32GB card included).

### 4. SETUP

## 4.1 Battery and SD Card Installation

1. Locate the battery compartment on the side of the camera.
2. To open the battery door, firmly press the cover lock with one hand while pushing out the battery cover with the other. The compartment is expertly sealed for waterproof protection.
3. Insert the provided 1250mAh battery into the battery slot, ensuring correct orientation.
4. Insert the Micro SD card (up to 128GB supported) into its designated slot next to the battery.
5. Close the battery cover securely until it clicks into place, ensuring the waterproof seal is maintained.

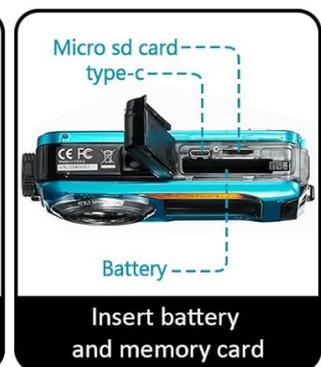


Image: A visual guide demonstrating the process of opening the battery compartment, inserting the battery, and inserting the Micro SD card into the camera.

## 4.2 Charging the Camera

The camera comes with a USB-C charging cable. Plug the USB-C end into the camera's port located within the battery compartment, and the other end into a compatible USB power adapter (not included) or computer USB port. A charging indicator light will illuminate during charging.

Your browser does not support the video tag.

Video: An unboxing and setup guide for the YISENCE 4K Digital Camera, demonstrating how to install the battery and SD

card, and how to charge the device. This video is provided by the seller.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

Press and hold the power button (located on the top of the camera) to turn the camera on or off. The screen will display "Welcome" upon startup.

### 5.2 Taking Photos and Recording Videos

- **Switching Modes:** Use the 'Mode' button to switch between photo and video recording modes.
- **Autofocus:** In photo mode, half-press the shutter button to activate autofocus. The focus frame on the screen will turn green when focus is achieved.
- **Capture:** Fully press the shutter button to take a photo or start/stop video recording.
- **Zoom:** Use the 'T' (Telephoto) and 'W' (Wide) buttons to adjust the 16x digital zoom.



Image: A demonstration of the camera's autofocus feature, showing the green focus frame on the screen when an object is in focus.

# 4K Video Recording



Image: The camera displaying a scene being recorded in 4K video mode, highlighting its video capabilities.

## 5.3 Dual-Screen Operation (Selfie Mode)

The camera features a front screen for easy selfies. When in selfie mode, you can see yourself on the front LCD to compose your shot perfectly. This is ideal for self-portraits or group photos where you want to be in the frame.

# Dual-Screen Selfie 11FT and IP68



Image: A person using the camera's dual-screen feature to take a selfie, showing both the front and back screens in action.

## 5.4 Underwater Usage

The YISENCE 4K Digital Camera is waterproof up to 11 feet. Ensure the battery compartment is securely closed and sealed before submerging the camera. The camera is also floatable, reducing the risk of loss in water.

# Lightweight and Compact

Can float on water  
Easy for kids to use



Image: The YISENCE 4K Digital Camera shown floating on the surface of water, demonstrating its floatable design.

## 6. MAINTENANCE

- **Waterproof Seal:** After each underwater use, inspect the waterproof seal around the battery compartment for any debris or damage. Clean gently with a soft, damp cloth if necessary. Ensure no sand or particles are present before closing the compartment.
- **Cleaning:** Wipe the camera body with a soft, dry cloth. For stubborn smudges, use a slightly damp cloth and then dry thoroughly. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the battery regularly, even if the camera is not in use for extended periods.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

### 7.1 Camera Not Turning On

- Ensure the battery is correctly inserted and fully charged.

- Press and hold the power button for a few seconds.

## 7.2 Poor Image/Video Quality

- Check if the lens is clean and free from smudges or water droplets.
- Ensure adequate lighting conditions, especially underwater.
- Verify that the camera is in the correct mode (photo/video) and settings are appropriate for the environment.

## 7.3 Water Leakage

- Immediately remove the camera from water.
- Open the battery compartment and remove the battery and SD card. Allow the camera to dry completely in a well-ventilated area.
- Inspect the waterproof seal for any signs of damage, cracks, or foreign objects before future use.

## 7.4 SD Card Error

- Ensure the SD card is properly inserted.
- Try reformatting the SD card (this will erase all data, so back up important files first).
- If the issue persists, try a different compatible Micro SD card.

## 8. SPECIFICATIONS


Feature	Detail
Brand	YISENCE
Model Name	806
Maximum Webcam Image Resolution	56 MP
Video Resolution	2160p (4K)
Water Resistance Level	Waterproof (up to 11FT)
Battery Capacity	1250 mAh Lithium Ion
Battery Average Life	70 minutes (underwater)
Digital Zoom	16x
Screen Size	2.7 inches (LCD)
Supported File Format	AVI (Video), JPEG (Image)
Flash Memory Type	Micro SD (up to 128GB)
Connectivity Technology	USB
Item Weight	4.58 Ounces

## 9. WARRANTY AND SUPPORT

**Warranty Description:** This product comes with a 1-year warranty from the manufacturer, YISENCE. For technical support, troubleshooting assistance, or warranty claims, please contact YISENCE customer

service through the retailer's platform or the official YISENCE website. Please have your product model number (806) and purchase details ready when contacting support.

## Related Documents - 806

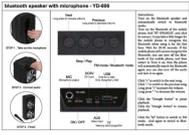 <p><b>ÅRSTID</b></p>	<p><a href="#">ÅRSTID Table Lamp Assembly Instructions - IKEA</a></p> <p>Detailed assembly guide for the IKEA ÅRSTID table lamp. Learn how to safely assemble and set up your lamp with step-by-step instructions and important safety information.</p>
	<p><a href="#">Xantrex Inverter and Battery Charger Selector Guide   Find Your Power Solution</a></p> <p>Comprehensive guide to selecting the right Xantrex inverter, inverter/charger, and battery charger for your needs. Compare models, features, and applications for 110VAC and 230VAC systems.</p>
	<p><a href="#">YD-806 Bluetooth Speaker with Microphone User Manual</a></p> <p>Instructions and specifications for the YD-806 Bluetooth speaker with microphone by Shenzhen Nuozhe Technology Co., Ltd. Learn how to connect, operate, and troubleshoot.</p>
	<p><a href="#">Bluetooth Headphones AH-806 User Manual and Instructions</a></p> <p>Comprehensive user manual for the AH-806 Bluetooth Headphones by Shenzhen Fei Wo De Electronics Co., Ltd, covering product parameters, button operations, pairing, playback modes (Bluetooth, Micro SD, FM Radio, AUX-in), and FCC compliance information.</p>
	<p><a href="#">Sakura Comfort Plus 806 Massagestol Bruksanvisning   Activeshop</a></p> <p>Detaljerad bruksanvisning för Activeshop Sakura Comfort Plus 806 massagestol, inklusive säkerhetsinstruktioner, användning, installation, funktioner och underhåll.</p>
	<p><a href="#">AZZA PYRAMID MINI 806 PC Case User Manual</a></p> <p>User manual for the AZZA PYRAMID MINI 806 PC case, detailing specifications, chassis parts, and installation instructions for components like motherboards, power supplies, SSDs, and fans.</p>

