

[Manuals.plus](#) /

› [Lefant](#) /

› Lefant M210P Robot Vacuum User Manual

Lefant M210P-3 Gray

Lefant M210P Robot Vacuum User Manual

Model: M210P-3 Gray

INTRODUCTION

Thank you for choosing the Lefant M210P Robot Vacuum. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new robot vacuum cleaner. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INSTRUCTIONS

To reduce the risk of injury or damage, read these safety instructions carefully and keep them accessible when setting up, using, and maintaining your robot vacuum.

- Ensure the charging base is placed against a wall on a level surface, free from obstacles.
- Do not operate the robot in areas with standing water or excessive moisture.
- Keep loose cables, curtains, and other objects that could entangle the robot out of its path.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Only use the original charging adapter and battery pack provided by the manufacturer.
- Do not use the robot to pick up large debris, sharp objects, or liquids.
- Regularly clean the dustbin and filters to maintain optimal performance.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Lefant M210P Robot Vacuum.



Image: The Lefant M210P Robot Vacuum, showcasing its compact design, side brushes, and the included HEPA filter. A smartphone displaying the Lefant app interface is also visible, highlighting the smart control capabilities.

Key Features:

- **Compact Design:** 11-inch diameter, 2.9-inch height for cleaning under furniture.
- **Powerful Suction:** 2200Pa suction power with brushless nozzle and two side brushes.
- **Long Runtime:** Up to 120 minutes of cleaning on a single charge.
- **FreeMove 3.0 Technology:** Enhanced navigation with 13 electronic sensors for anti-collision and anti-drop.
- **App & Voice Control:** Compatible with Lefant app, Alexa, and Google Assistant.
- **Carpet Boost:** Automatically increases suction on carpets.

No Entanglement Any More



Image: A comparison illustrating the Lefant M210P's design, which minimizes hair entanglement, versus a traditional robot vacuum that can get tangled. The image also highlights the 2200Pa suction power of the M210P as it cleans debris.

SETUP

1. Unboxing and Preparation:

- Remove all packaging materials and protective films from the robot and charging base.
- Ensure all accessories are present: robot vacuum, charging base, power adapter, side brushes, HEPA filter, cleaning tool, and user manual.
- Attach the side brushes by pressing them onto the square posts on the bottom of the robot until they click into place.

2. Charging Base Placement:

Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters (1.6 feet) of clear space on both sides of the charging base and 1.5 meters (4.9 feet) in front of it. Plug the power adapter into the charging base and then into a wall outlet.

3. Initial Charging:

Place the robot onto the charging base, ensuring the charging contacts on the robot align with those on the base. The robot will begin charging automatically. For first-time use, fully charge the robot for at least 5-6 hours.

4. App Download and Connection:

Download the "Lefant" app from the App Store (iOS) or Google Play Store (Android). Follow the in-app instructions to connect your robot vacuum to your home Wi-Fi network. **Note:** The robot only supports 2.4GHz Wi-Fi networks.



Image: A smartphone displaying the Lefant app, illustrating various control options such as scheduling, suction adjustment, manual control, and recharge functions. The Lefant robot vacuum is shown nearby, emphasizing app-based operation.

OPERATING INSTRUCTIONS

1. Starting/Pausing Cleaning:

- **Manual Start:** Press the power button on the robot once to start cleaning in Auto mode. Press again to pause.

- **App Control:** Open the Lefant app and tap "Start" to begin cleaning. Use the app to pause or send the robot back to the charging base.

2. Cleaning Modes:

The Lefant M210P offers multiple cleaning modes accessible via the Lefant app:

- **Auto Cleaning:** The robot intelligently navigates and cleans the entire floor area.
- **Spot Cleaning:** The robot cleans a specific area in a spiral pattern, ideal for concentrated dirt.
- **Edge Cleaning:** The robot cleans along walls and furniture edges.
- **Scheduled Cleaning:** Set daily cleaning times through the app.

3. Manual Control:

Use the directional controls within the Lefant app to manually steer the robot to specific areas for cleaning.

4. Voice Control:

Integrate your Lefant M210P with Amazon Alexa or Google Assistant for convenient voice commands. Follow the instructions in the Lefant app to link your accounts.

Smart Voice Control

"Hey Google, Turn on the M210P"

"Alexa, Turn on the M210P"

Lefant

Connect Quicker & Easier



WORKS WITH THE
Google Assistant



WORKS WITH
Amazon Alexa

Image: The Lefant M210P Robot Vacuum positioned near an Amazon Echo Dot and a Google Home Mini, illustrating its compatibility with smart voice assistants. Speech bubbles show example commands like "Hey Google, Turn on the M210P" and "Alexa, Turn on the M210P."

5. Carpet Boost Function:

The robot automatically detects carpets and increases its suction power to maximum for deeper cleaning on carpeted surfaces. This function activates automatically and does not require manual intervention.

Long Running Time

Get up to 120mins runtime,enjoy a completely clean home on one charge

120mins
1300sqft



Image: An illustration highlighting the Lefant M210P's long running time, indicating it can clean for up to 120 minutes and cover an area of 1300 square feet on a single charge. The robot is shown cleaning a floor with a house layout overlay.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

1. Emptying the Dustbin:

- Press the dustbin release button and pull out the dustbin.
- Open the dustbin cover and empty its contents into a trash can.

2. Cleaning the Filters:

- Remove the HEPA filter and sponge filter from the dustbin.
- Tap the filters gently to remove dust. Do not wash the HEPA filter with water.
- The sponge filter can be rinsed with water; ensure it is completely dry before reinserting.

- Replace filters every 3-6 months depending on usage.

3. Cleaning the Side Brushes:

- Periodically remove hair and debris tangled around the side brushes.
- If brushes are worn or damaged, replace them.

4. Cleaning Sensors and Charging Contacts:

- Wipe the anti-drop sensors (located on the bottom of the robot) and anti-collision sensors (on the bumper) with a clean, dry cloth.
- Clean the charging contacts on both the robot and the charging base with a dry cloth.

TROUBLESHOOTING

If your robot vacuum encounters an issue, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; power switch off.	Charge the robot; ensure power switch is on.
Robot cannot return to charging base.	Charging base obstructed; robot too far.	Clear obstacles around base; manually place robot near base.
Suction power is weak.	Dustbin full; filters clogged.	Empty dustbin; clean/replace filters.
Robot gets stuck frequently.	Loose cables; small obstacles.	Clear floor of obstacles; clean sensors.
Cannot connect to Wi-Fi/App.	Incorrect Wi-Fi band (not 2.4GHz); wrong password.	Ensure 2.4GHz Wi-Fi; re-enter password; restart router/robot.

SPECIFICATIONS

Feature	Detail
Brand	Lefant
Model Name	M210P-3 Gray
Product Dimensions	11"L x 11"W x 2.99"H
Item Weight	7 pounds
Suction Power	2200Pa
Battery Life	120 minutes
Filter Type	Sponge, HEPA Filtration
Control Method	App, Voice (Alexa, Google Assistant)
Compatible Devices	Smartphones
Voltage	19 Volts (DC)
Dustbin Capacity	500 Milliliters

WARRANTY AND SUPPORT

Lefant provides a standard warranty for its products. Please refer to the warranty card included in your product packaging for specific terms and conditions, or visit the official Lefant website for detailed warranty information.

For technical support, troubleshooting assistance, or warranty claims, please contact Lefant Customer Service through the following channels:

- **Lefant Official Website:** www.lefant.com (Note: This is a placeholder URL as no specific support URL was provided in the input.)
- **Email Support:** Refer to your product packaging or the Lefant website for the most current email address.
- **In-App Support:** Some support features may be available directly within the Lefant app.

When contacting support, please have your product model number (M210P-3 Gray) and purchase information ready.

© 2024 Lefant. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question