

AULCMEET DX-RC02A-12

AULCMEET DX-RC02A-12 Remote Control User Manual for Dynex Televisions

Model: DX-RC02A-12

INTRODUCTION

This manual provides instructions for the AULCMEET DX-RC02A-12 replacement remote control, designed for use with various Dynex LCD, LED, and HDTV televisions. This remote offers direct functionality without the need for programming, ensuring a straightforward user experience.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Figure 1: Back of the remote control with the battery compartment. Ensure correct battery polarity when installing.

2. Initial Use (No Programming Required)

This AULCMEET DX-RC02A-12 remote control is designed to work directly with compatible Dynex televisions without any programming or setup. Once batteries are installed, it is ready for use.



Figure 2: The remote control is ready for immediate use after battery installation, requiring no programming.

OPERATING INSTRUCTIONS

The AULCMEET DX-RC02A-12 remote control features a standard layout for easy navigation and control of your Dynex television. Refer to the image below for button identification.





Figure 3: Front view of the AULCMEET DX-RC02A-12 remote control with all buttons labeled.

Basic Functions

- **POWER** (●): Turns the television on or off.
- **INPUT**: Selects the video input source (e.g., HDMI, Video, TV).
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the television channel.
- **MUTE**: Silences or restores the television audio.

- **0-9 Number Buttons:** Directly select channels or input numerical values.

Navigation and Menu Controls

- **MENU:** Opens the television's main menu.
- **Arrow Buttons (▲ ◀ ▼ ▶):** Navigate through menu options.
- **ENTER:** Confirms a selection in the menu.
- **EXIT:** Closes the current menu or on-screen display.
- **INFO:** Displays information about the current program or input.
- **GUIDE:** Accesses the electronic program guide (if available).
- **RECALL:** Switches between the current and previously viewed channel.

Specific Function Buttons

- **VIDEO:** Selects the composite video input.
- **HDMI:** Selects the HDMI input.
- **TV:** Switches to TV tuner mode.
- **COMP:** Selects the component video input.
- **MTS/SAP:** Cycles through Multi-channel Television Sound/Secondary Audio Program options.
- **VGA:** Selects the VGA input.
- **ZOOM:** Adjusts the screen zoom level.
- **SLEEP:** Sets the sleep timer.
- **CH-LIST:** Displays the channel list.
- **PICTURE:** Accesses picture settings.
- **AUDIO:** Accesses audio settings.
- **CCD:** Activates Closed Captioning.
- **FAVORITE:** Accesses favorite channels list.

COMPATIBILITY

The AULCMEET DX-RC02A-12 remote control is compatible with a wide range of Dynex LCD, LED, and HDTV television models. This includes, but is not limited to, the following models:



Figure 4: The remote control is designed as a direct replacement for Dynex TVs.

- DX-24L200A12, DX-32L100A11, DX-32E150A11, DX-24L150A11, DX-22L150A11, DX-32L150A11, DX-26E150A11, DX-19L150A11, DX-26L150A11, DX-32L150A11, DX-32L152A11, DX-32L153A11, DX-32L151A11, DX-L32-10A, DX-32E250A12, DX-32L221A12, DX-32L100A13, DX-26L100A13, DX-32L200A12, DX-32L220A12, DX-24L150A11, DX-24L200A12, DX-L19-10A, DX-19E220A12, DX-15E220A12, DX-40L130A11, DX-32L151A11, DX-55L150A11, DX-15E220A12, DX-55L150A11, DX-46L150A11, DX-46L262A12, DX-42E250A12, DX-40L260A12, DX-40L261A12, DX-37L200A12, DX-42E250A12, DX-37L200A12, DX-46L261A12, DX-19L200A12, DX-32L221A12, DX-32L200A12, DX-15L150A11, 32E250A12, DX-40L261A12, DX-32L200A12, DX-46L262A12, DX-32L230A12, DX-46L260A12, DX-24L230A12, DX-19E220A12, DX-40L260A12, DX-40L150A11, DX-46L150A11, DX-24E150A11, DX-37L130A11.

This remote also replaces several other Dynex remote models, including DX-RC01A-12, DX-RC01A-13, DX-RC03A-13, RC-201-0B, RC-701-0A, RC-801-0A, and ZRC400.

MAINTENANCE

Cleaning

To maintain the remote control's functionality and appearance:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.


Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

- **Remote is not responding or has limited range:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
 - Ensure there are no obstructions between the remote control and the television's infrared sensor.
 - Make sure you are within the effective operating range and angle of the television's IR receiver (typically up to 30 feet and a wide angle).
- **Specific buttons are not working:**
 - Verify that the remote is pointed directly at the television.
 - Clean the remote control's surface and buttons to ensure no debris is interfering with button presses.
 - If only certain buttons are unresponsive after checking batteries and line of sight, the remote may require replacement.
- **Television does not respond to any remote commands:**
 - Confirm the television is powered on and not in standby mode.
 - Try using the physical buttons on the television itself to rule out a TV issue.
 - Ensure the remote is compatible with your specific Dynex TV model (refer to the Compatibility section).

SPECIFICATIONS

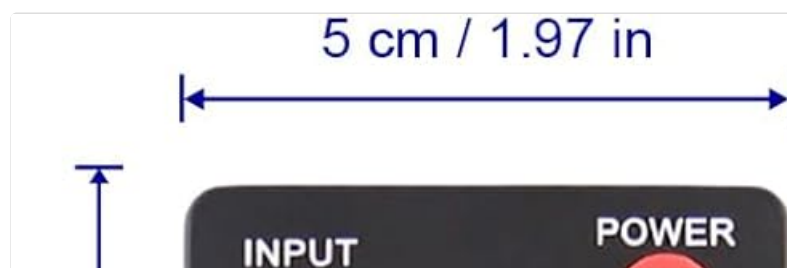

18 cm / 7.09 in





Figure 5: Dimensions of the AULCMEET DX-RC02A-12 remote control.

Feature	Detail
Model Number	DX-RC02A-12
Brand	AULCMEET
Product Dimensions	6 x 2 x 0.5 inches (approximately 15.2 x 5.1 x 1.3 cm)
Item Weight	1.9 ounces (approximately 54 grams)
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic design
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Dynex Televisions (LCD, LED, HDTV)

WARRANTY AND SUPPORT

For warranty information or technical support regarding your AULCMEET DX-RC02A-12 remote control, please refer to the documentation provided at the time of purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.