

[Manuals.plus](#) /

› [The G-Lab](#) /

› The G-Lab K-Pad Helium Wired PC Gaming Controller User Manual

The G-Lab K-Pad Helium

The G-Lab K-Pad Helium Wired PC Gaming Controller User Manual

Model: K-Pad Helium

INTRODUCTION

Thank you for choosing the G-Lab K-Pad Helium Wired PC Gaming Controller. This controller is designed to provide a stable, latency-free, and immersive gaming experience on PC and PS3. Its ergonomic design ensures comfort during extended play, while customizable features offer enhanced control. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to help you get the most out of your new controller.



Front view of the G-Lab K-Pad Helium Wired PC Gaming Controller, showcasing its ergonomic design and button layout.

WHAT'S IN THE BOX

- G-Lab K-Pad Helium Wired PC Controller
- User Manual (this document)

SETUP AND INSTALLATION

The K-Pad Helium controller features a Plug and Play design, making installation straightforward.

1. **Connect to PC:** Plug the USB connector of the K-Pad Helium controller into an available USB port on your computer.
2. **System Recognition:** Your operating system (Windows 10, Windows 11, etc.) will automatically detect and install the necessary drivers. This process may take a few moments.
3. **Ready to Play:** Once the drivers are installed, the controller is ready for use. The controller supports both Direct-Input and X-Input modes, ensuring compatibility with most PC games.

4. **Connect to PS3:** Plug the USB connector into an available USB port on your PlayStation 3 console. The system will recognize the controller automatically.



The K-Pad Helium controller connected via its wired USB cable, illustrating its stable and responsive connection.

OPERATING INSTRUCTIONS

Button Layout

The K-Pad Helium features a standard button layout with 12 action buttons, 2 analog sticks, a D-pad, and 4 triggers, including 2 customizable rear triggers.

- **Face Buttons:** A, B, X, Y
- **Shoulder Buttons:** LB, RB
- **Triggers:** LT, RT
- **Analog Sticks:** Left Stick, Right Stick (clickable)

- **D-Pad:** Up, Down, Left, Right
- **Function Buttons:** Start, Select, Home/Mode button
- **Customizable Rear Triggers:** LM, RM (located on the back of the controller)

Vibration Feedback

The controller includes integrated vibration motors that provide haptic feedback, enhancing immersion by making you feel in-game actions such as impacts and explosions. The vibration intensity can be adjusted.



Illustration of the four vibration levels (0%, 30%, 70%, 100%) for customizable haptic feedback.

Customizable Rear Triggers (LM/RM)

The K-Pad Helium features two customizable triggers (LM and RM) on the back, allowing you to map specific actions for quick access and improved gameplay.

4 GACHETTES DONT 2 PERSONNALISABLES

CONÇUES POUR BOOSTER TES PERFORMANCES ET T'OFFRIR UN
GAMEPLAY 100 % ADAPTÉ À TON STYLE !



12 BOUTONS
BOUTONS TURBO & AUTO



4 GACHETTES
2 PERSONNALISABLES



FONCTION MACRO
POUR PLUS DE PERFORMANCE

Rear view of the controller, indicating the position of the two customizable triggers (LM and RM).

Macro Programming

Program complex actions to a single button press using the macro function.

1. **To Program a Macro:** Simultaneously press and hold the **T button** and either the **LM** or **RM** button for 3 seconds.
The LED indicator will change to confirm entry into programming mode.
2. Press any action button you wish to record.
3. Press the **LM** or **RM** button again to save the programmed action.

Turbo Mode Activation

Activate Turbo mode for rapid, repeated button presses.

1. **To Activate Turbo:** Hold down the button you wish to assign Turbo to, then press the **T button** once.
2. **To Set Auto-Turbo:** Press the **T button** twice.
3. **To Clear Turbo Function:** Press the **T button** three times.

MACROS PROGRAMMABLES

EXECUTE DES ACTIONS COMPLEXES EN UN SEUL GESTE ET PREND L'AVANTAGE SUR TES ADVERSAIRES !



PROGRAMMATION DES MACROS

APPUYEZ SIMULTANÉMENT SUR LE BOUTON **T** MACRO ET SUR LE BOUTON **LM** OU **RM** PENDANT 3 SECONDES.
APPUYEZ SUR N'IMPORTE QUEL BOUTON D'ACTION POUR ENREGISTRER L'ACTION DU BOUTON.
APPUYEZ SUR LE BOUTON **LM** OU **RM** POUR ENREGISTRER L'ACTION PROGRAMMÉE.



ACTIVER LE MODE TURBO

MAINTENIR ENFONCÉ ET APPUYEZ SUR LE BOUTON AUQUEL VOUS VOULEZ L'ATTRIBUER.
APPUYEZ 1 FOIS SUR LE BOUTON **T** POUR TERMINER LE RÉGLAGE DU TURBO.
APPUYEZ 2 FOIS SUR LE BOUTON **T** POUR TERMINER LE RÉGLAGE AUTO.
APPUYEZ 3 FOIS SUR LE BOUTON **T** POUR EFFACER LA FONCTION.



Detailed instructions for programming macros and activating turbo mode on the controller.

MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use abrasive cleaners or solvents.
- **Storage:** Store the controller in a dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the controller or exposing it to excessive force, which can damage internal components.
- **Cable Care:** Do not sharply bend or pull the USB cable. Always grasp the plug when disconnecting.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Controller not recognized by PC/PS3.	Loose USB connection, faulty USB port, driver issue.	◦ Ensure the USB cable is securely plugged into both the controller and the device. ◦ Try a different USB port. ◦ Restart your PC/PS3. ◦ On PC, check Device Manager for driver issues and update if necessary.
Buttons or analog sticks are unresponsive.	Software glitch, physical damage, dirt/debris.	◦ Restart the game or system. ◦ Ensure no debris is lodged around the buttons or sticks. ◦ Test the controller on another game or device to isolate the issue.
Vibration feedback is not working.	Game settings, driver issue, vibration motor fault.	◦ Check in-game settings to ensure vibration is enabled. ◦ Verify controller drivers are up to date. ◦ Some games may not support vibration.

SPECIFICATIONS

- **Model Name:** K-Pad Helium
- **Model Number:** 3760162050394
- **Connection:** Wired USB
- **Compatibility:** PC (Windows 10, Windows 11), PlayStation 3
- **Input Modes:** Direct-Input, X-Input
- **Buttons:** 12 action buttons, 4 triggers (2 customizable rear triggers)
- **Feedback:** Integrated vibration motors (4 levels)
- **Special Features:** Turbo mode, Macro programming
- **Dimensions (L x W x H):** 15.5 x 10.4 x 6.1 cm (6.1 x 4.1 x 2.4 inches)
- **Weight:** 246 grams (0.54 lbs)
- **Origin:** China
- **First Available Date:** July 23, 2024
- **Spare Parts Availability:** Information unavailable
- **Software Updates Guaranteed Until:** Information unavailable

GRIPS ANTI-GLISSE & PRISE EN MAIN ERGONOMIQUE



OFFRE UN CONFORT OPTIMAL &
RÉDUIT LA FATIGUE PENDANT LES
LONGUES SESSIONS DE JEU



PLUG & PLAY
POUR PC



The ergonomic design of the K-Pad Helium ensures comfortable handling during long gaming sessions.

WARRANTY AND SUPPORT

The G-Lab K-Pad Helium controller comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable performance.

For technical support, warranty claims, or any questions regarding your product, please contact The G-Lab customer service. Refer to the official G-Lab website or your purchase documentation for contact details.

Note: Keep your proof of purchase for warranty purposes.

© 2024 The G-Lab. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question