

[Manuals.plus](#) /

> [DBEIXIWEI](#) /

> DBEIXIWEI Smart TV Remote Control Instruction Manual for Samsung 4K Curved TV BN59-01220E RMCTPJ1AP2

DBEIXIWEI BN59-01220E RMCTPJ1AP2

DBEIXIWEI Smart TV Remote Control Instruction Manual

MODEL: BN59-01220E RMCTPJ1AP2

Introduction

This manual provides instructions for the setup, operation, and maintenance of your DBEIXIWEI Smart TV Remote Control, model BN59-01220E RMCTPJ1AP2. This remote is designed as a replacement for compatible Samsung 4K Curved TVs. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

Product Overview

The DBEIXIWEI Smart TV Remote Control is a replacement remote designed for ease of use with compatible Samsung 4K Curved TVs. It includes essential functions for navigating your television and supports a mouse function via a USB receiver.



Image 1: The DBEIXIWEI Smart TV Remote Control shown alongside its USB receiver. The remote features a black finish with clearly labeled buttons for power, source, keypad, volume, channel, navigation, mouse function, return/exit, play/pause, and guide/channel list.

The remote is constructed from durable ABS material, offering a comfortable grip and robust design.





Image 2: A side profile view of the remote control, highlighting its ergonomic curved design for comfortable handling.

Setup

1. **Battery Installation:**

Locate the battery compartment on the back of the remote control. Slide the cover off. Insert two AAA batteries (not included) according to the polarity indicators (+ and -) inside the compartment. Replace the battery cover securely.



Image 3: The back of the remote control with the battery cover removed, showing the compartment for two AAA batteries.

2. **USB Receiver Connection:**

This remote control operates via a USB receiver. Plug the provided USB receiver into an available USB port on your Samsung 4K Curved TV. Ensure your TV has a USB player function for the remote to operate correctly.

3. **Pairing (Automatic):**

The remote control should automatically pair with the USB receiver once both are powered on and connected. No manual pairing process is typically required. If the remote does not respond, ensure batteries are correctly installed and the USB receiver is firmly plugged into the TV.

Operating Instructions

The remote control provides various functions for your Samsung 4K Curved TV. Below is a general guide to its buttons and features:



Image 4: A clear top-down view of the remote control, detailing the layout and labels of its various buttons.

- **Power Button ()**: Turns the TV on or off.
- **SOURCE**: Selects input sources (e.g., HDMI 1, HDMI 2, TV).
- **KEYPAD**: Accesses the on-screen numeric keypad.
- **Volume (+/-)**: Adjusts the TV volume.
- **Channel (P ▲/▼)**: Changes TV channels.
- **Navigation Pad (◀ ▲ ▼ ▶)**: Navigates through menus and selections.
- **MOUSE (Center Button)**: Activates or deactivates the on-screen mouse pointer function. Use the navigation pad to move the pointer.
- **RETURN - EXIT**: Returns to the previous screen or exits the current menu.
- **Play/Pause (▶)**: Controls media playback.
- **GUIDE CH.LIST**: Displays the TV program guide or channel list.

Note: This remote control does not support voice control functionality.

Maintenance

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's performance degrades. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal components.

Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. USB receiver not connected or faulty.	Replace batteries with new AAA batteries, ensuring correct polarity. Ensure the USB receiver is firmly plugged into a working USB port on the TV. Try a different USB port if available.
Mouse function not working.	Mouse function not activated. TV does not support USB player/mouse function.	Press the MOUSE button to activate the function. Verify that your TV model supports USB player functionality, as this is required for the mouse feature.
Limited range or intermittent response.	Low batteries. Obstruction between remote and TV/receiver. Interference.	Replace batteries. Ensure a clear line of sight between the remote and the TV/USB receiver. Minimize other wireless devices nearby that might cause interference.

Specifications

- **Model**: BN59-01220E RMCTPJ1AP2
- **Brand**: DBEIXIWEI
- **Compatibility**: Samsung 4K Curved TV (BN59-01220E, BN5901220E, RMCTPJ1AP2 compatible)

models)

- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** ABS
- **Connectivity:** Wireless (via USB receiver)
- **Special Features:** Mouse function (requires TV USB player), Lightweight design.
- **Dimensions:** Approximately 1.18 x 1.18 x 1.18 inches (Package Dimensions, actual remote dimensions not specified but implied by images)
- **Weight:** Approximately 2.36 ounces (Item Weight)

Warranty and Support

For any questions or assistance regarding your DBEIXIWEI Smart TV Remote Control, please refer to the retailer or manufacturer's support channels. Specific warranty details may vary by region and retailer. Please retain your purchase receipt for warranty claims.