

HADEN 75148

Haden Countertop 6 Slice Toaster Oven Air Fryer Combo

MODEL: 75148

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven.
- Do not place cardboard, plastic, paper, or similar materials in the oven.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when removing tray or disposing of hot grease.
- This appliance is for household use only.

Product Overview

The Haden Countertop 6 Slice Toaster Oven Air Fryer Combo is a versatile kitchen appliance designed for various cooking tasks. It features multiple cooking functions and comes with essential accessories.

Components and Accessories

- **Main Unit:** The primary toaster oven and air fryer appliance.
- **Air Fry Basket:** Used for air frying foods to achieve crispy results.
- **Bake Pan:** Suitable for baking various dishes.
- **Broil Rack:** For broiling and grilling.
- **Slide-out Crumb Tray:** Collects crumbs and drips for easy cleaning.



Image: Front view of the Haden Countertop 6 Slice Toaster Oven Air Fryer Combo, showing the main unit, control panel, and interior with accessories.

Control Panel


The appliance features an intuitive control panel with an LCD display and digital controls for precise adjustments. Two mechanical knobs allow for setting time and temperature, and selecting cooking functions.



Compact, sleek, and vintage design fits on any kitchen space.



Easily controlled via LCD display and digital controls for precise timing adjustments.

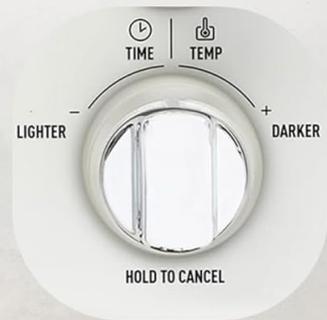

Simple operation with an adjustable mechanical knob.



Comes with an air-fry basket, bake pan, broil rack, and slide-out crumb tray for easier cooking and cleanup.

Image: Close-up of the control panel, highlighting the LCD display, function buttons (AIR FRY, LIGHT, START/PAUSE), SELECT button, and TIME/TEMP knobs.

Setup

- Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Retain packaging for future storage or transport.
- Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the air fry basket, bake pan, broil rack, and crumb tray in warm, soapy water. Rinse thoroughly and dry completely.
- Placement:** Place the toaster oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the appliance for proper ventilation. Do not place near flammable materials.
- Power Connection:** Ensure the power cord is not damaged. Plug the appliance into a grounded electrical outlet.
- First Use Burn-Off:** It is recommended to run the oven empty for approximately 15 minutes at 400°F (200°C) on the 'Bake' setting before first use. This helps to burn off any manufacturing residues and odors. Some smoke or odor is normal during this process. Ensure the area is well-ventilated.

Operating Instructions

The Haden Toaster Oven offers ten cooking settings, including air frying, baking, broiling, and toasting, all controlled via the LCD display and digital interface.



Image: The toaster oven with an overlay highlighting its 10 cooking functions: Toast, Bagel, Pizza, Bake, Broil, Roast, Air Fry, Warm, Reheat, and Defrost.

General Operation

1. **Power On:** Plug the appliance into a power outlet. The LCD display will illuminate.
2. **Select Function:** Turn the top knob (SELECT) to cycle through the available cooking functions displayed on the LCD. Press the SELECT knob to confirm your choice.
3. **Adjust Time/Temperature:** Once a function is selected, the display will show default time and temperature settings. Use the bottom knob (TIME/TEMP) to adjust these values. Turn clockwise to increase, counter-clockwise to decrease. Press the TIME/TEMP knob to switch between adjusting time and temperature.
4. **Start Cooking:** Press the START/PAUSE button to begin the cooking cycle.
5. **Pause/Cancel:** Press the START/PAUSE button to pause cooking. Press and hold the bottom knob (HOLD TO CANCEL) to cancel the current cooking cycle and turn off the heating elements. The display may remain lit while the oven cools.
6. **Interior Light:** Press the LIGHT button to turn the interior oven light on or off.

Specific Cooking Functions

- **Air Fry:** Place food in the air fry basket. Insert the basket into the oven, typically on the middle rack position. Select 'Air Fry' function, adjust time and temperature (e.g., 375°F for 15-20 minutes for fries), then press START.
- **Bake:** Place food in the bake pan or an oven-safe dish on the wire rack. Select 'Bake' function, set desired temperature (150-450°F) and time, then press START.
- **Broil:** Position the broil rack closer to the top heating elements. Place food on the broil rack. Select 'Broil' function, set time, and press START. Monitor food closely to prevent burning.
- **Toast:** Place bread slices directly on the wire rack. Select 'Toast' function. The display will show toast levels (e.g., 1-7). Adjust the bottom knob to select desired darkness. Press START.
- **Other Functions (Bagel, Pizza, Roast, Warm, Reheat, Defrost):** Follow similar steps: select the function, adjust time and temperature as needed, and press START. Refer to specific recipes or food packaging for recommended settings.



Image: The toaster oven interior showing a bake pan filled with roasted vegetables and chicken, demonstrating its cooking capacity.

Care and Cleaning

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the toaster oven and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the finish.
- **Interior:** After each use, remove the crumb tray and empty it. Wipe the interior walls with a damp cloth and mild detergent if necessary. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used, but ensure it is safe for toaster ovens and rinse thoroughly.
- **Accessories:** The air fry basket, bake pan, broil rack, and crumb tray can be washed in warm, soapy water. They are generally not dishwasher safe unless specified. Rinse and dry thoroughly before storing or reinserting.
- **Heating Elements:** Do not attempt to clean the heating elements directly. Any food residue on them will typically burn off during operation.
- **Storage:** Ensure the appliance is clean and dry before storing. Store in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure plug is securely in outlet; check household power; reset circuit breaker.
Food cooks unevenly.	Incorrect rack position; overcrowding; food not rotated.	Adjust rack position; avoid overcrowding; rotate food halfway through cooking.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for initial use. Ensure good ventilation. It should dissipate after a few uses.
Display is difficult to read.	Poor lighting; display issue.	Ensure adequate room lighting. If issue persists, contact customer support.
Oven not heating to set temperature.	Incorrect setting; faulty thermostat.	Double-check temperature setting. If problem continues, contact customer support.

Product Specifications

- **Brand:** HADEN
- **Model Name:** HADEN 6- Slice Toaster Oven 25L Combo Air Fry, Bake, Broil, Toast Functions
- **Item Model Number:** 75148
- **Color:** Ivory / Chrome
- **Product Dimensions:** 12.5"D x 18.25"W x 11.75"H
- **Capacity:** 25 Liter (fits up to six slices of toast or a 12-inch pizza)
- **Power:** 1500 Watts
- **Temperature Range:** 150 – 450 Degrees Fahrenheit (depending on program chosen)
- **Control Type:** Knob Control with LCD Display
- **Special Features:** Automatic Shut-Off, Broiler Option, Programmable
- **Material:** Glass, Plastic, Stainless Steel
- **Door Material Type:** Tempered Glass
- **Included Components:** Air Fry Basket, Bake Pan, Broil Rack, Crumb Tray
- **Power Source:** AC
- **UPC:** 017342751460



Image: The toaster oven with its height (11.75"H), width (18.25"W), and depth (12.5"D) clearly labeled.

Warranty and Support

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and limitations.

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact HADEN customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.