

HADEN 75148

Haden Countertop 6 Slice Toaster Oven Air Fryer Combo

Model: 75148

INTRODUCTION

Thank you for choosing the Haden Countertop 6 Slice Toaster Oven Air Fryer Combo. This appliance is designed to provide versatile cooking options, including toasting, baking, air frying, and broiling, all in a compact countertop design. To ensure safe and optimal performance, please read this instruction manual thoroughly before using the appliance and retain it for future reference.

IMPORTANT SAFEGUARDS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or pot holders when handling hot materials.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place paper, cardboard, plastic, or other flammable materials in the oven.

- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Exercise extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- This appliance is for household use only.

PRODUCT OVERVIEW

Components and Accessories

The Haden Countertop Toaster Oven Air Fryer Combo comes with the following components and accessories:

- Main Toaster Oven Unit
- Metal Air-Fry Basket
- Bake Pan
- Broil Rack
- Slide-Out Crumb Tray



Figure 1: Front view of the Haden Toaster Oven Air Fryer Combo, showing the interior with the air-fry basket, bake pan, and broil rack in place.

Specifications

Feature	Specification
Brand	HADEN
Model Name	HADEN 6- Slice Toaster Oven 25L Combo Air Fry, Bake, Broil, Toast Functions
Model Number	75148
Product Dimensions	12.5"D x 18.25"W x 11.75"H
Item Weight	17 pounds
Capacity	25 Liters (fits 6 slices of toast or a 12-inch pizza)
Power Output	1500 Watts

Feature	Specification
Temperature Range	150°F – 450°F (depending on program chosen)
Control Type	Knob Control with LCD Display
Door Material	Tempered Glass
Special Features	Broiler Option, Automatic Shut-Off, Programmable



Figure 2: Product dimensions for proper placement and space planning.

SETUP AND INSTALLATION

Unpacking

1. Carefully remove the toaster oven and all accessories from the packaging.
2. Remove any protective film, stickers, or packing materials from the appliance and its accessories.
3. Inspect the appliance for any signs of damage. Do not use if damaged.

Placement

- Place the toaster oven on a stable, level, and heat-resistant surface.
- Ensure there is adequate clearance (at least 4 inches) on all sides and above the appliance for proper ventilation. Do not place directly under cabinets.
- Keep the appliance away from walls, curtains, and other flammable materials.

Initial Cleaning

1. Before first use, wipe the exterior of the oven with a damp cloth.
2. Wash the air-fry basket, bake pan, broil rack, and crumb tray in warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the interior of the oven with a damp cloth. Do not use abrasive cleaners or scouring pads.

First Use (Burn-Off)

It is recommended to run the oven empty for approximately 15 minutes on the 'Bake' setting at 400°F (200°C) before first use. This helps to burn off any manufacturing residues and odors. A slight odor or smoke may be present during this process; this is normal and will dissipate.

OPERATING INSTRUCTIONS

Control Panel Overview



Compact, sleek, and vintage design fits on any kitchen space.



Easily controlled via LCD display and digital controls for precise timing adjustments.



Simple operation with an adjustable mechanical knob.



Comes with an air-fry basket, bake pan, broil rack, and slide-out crumb tray for easier cooking and cleanup.

Figure 3: Detailed view of the digital control panel and knobs.

- **LCD Display:** Shows selected function, time, temperature, and toast shade.
- **Time/Temp Knob:** Used to adjust cooking time and temperature.
- **Lighter/Darker Knob:** Used to adjust toast shade or specific settings for certain functions.
- **SELECT Button:** Cycles through cooking functions (Toast, Bake, Broil, Air Fry, Warm, Defrost, Reheat, Cookie, Pizza, Bagel).
- **LIGHT Button:** Turns the interior oven light on or off.
- **START/PAUSE Button:** Starts or pauses the cooking cycle.
- **HOLD TO CANCEL:** Press and hold the Lighter/Darker knob to cancel the current operation.

Cooking Functions

The Haden Toaster Oven offers ten versatile cooking functions:

1. **Toast:** Ideal for bread, bagels, and frozen waffles. Use the Lighter/Darker knob to select desired toast shade.

2. **Bake:** For baking cakes, cookies, casseroles, and other dishes. Set desired temperature and time.
3. **Air Fry:** Circulates hot air for crispy results with little to no oil. Perfect for fries, chicken wings, and vegetables.
4. **Broil:** For grilling and browning food quickly. Use with the broil rack.
5. **Warm:** Keeps cooked food warm without further cooking.
6. **Defrost:** Thaws frozen items before cooking.
7. **Reheat:** Warms up leftovers.
8. **Cookie:** Preset for baking cookies.
9. **Pizza:** Preset for cooking pizzas up to 12 inches.
10. **Bagel:** Toasts bagels, typically toasting the cut side and warming the crust side.



Figure 4: The oven's spacious interior comfortably accommodates a 12-inch pizza.



Figure 5: Multiple items can be cooked simultaneously using different rack positions.

General Operation Steps

- 1. Place Food:** Place food on the appropriate accessory (bake pan, air-fry basket, or broil rack) and slide it into the desired rack position inside the oven.
- 2. Select Function:** Press the **SELECT** button repeatedly to cycle through the cooking functions until the desired function is highlighted on the LCD display.
- 3. Adjust Settings:**
 - For functions like Bake, Air Fry, Broil, Warm, Defrost, Reheat, Cookie, Pizza, Bagel: Use the **Time/Temp Knob** to set the desired temperature and then press the knob to switch to time adjustment, using the same knob to set the cooking time.
 - For Toast function: Use the **Lighter/Darker Knob** to select the desired toast shade.
- 4. Start Cooking:** Press the **START/PAUSE** button to begin the cooking cycle. The oven will preheat if necessary for certain functions.
- 5. Monitor Cooking:** Use the **LIGHT** button to illuminate the interior and check on your food.

6. **Pause/Cancel:** Press **START/PAUSE** to temporarily stop cooking. Press and hold the **Lighter/Darker Knob** to cancel the current operation and return to standby mode.
7. **End of Cycle:** The oven will beep when the cooking cycle is complete. Carefully remove food using oven mitts.

CLEANING AND MAINTENANCE

Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.

Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- For stubborn stains, use a mild, non-abrasive cleaner.
- Do not use metal scouring pads or abrasive cleaners, as they can scratch the finish.

Interior Cleaning

- Wipe the interior walls with a damp cloth and mild detergent.
- For baked-on food, a small amount of baking soda paste can be applied, left for a few minutes, then wiped clean.
- Ensure the interior is completely dry before next use.

Accessory Cleaning

- The air-fry basket, bake pan, broil rack, and crumb tray can be washed in warm, soapy water.
- Rinse thoroughly and dry completely before returning them to the oven.
- The crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.

Storage

When not in use, store the toaster oven in a clean, dry place. Ensure all accessories are clean and stored inside the oven or nearby.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food is cooking unevenly.	Improper rack position; oven not preheated; food too crowded.	Refer to recipe for recommended rack position. Allow oven to fully preheat. Avoid overcrowding the oven; cook in batches if necessary. Rotate food halfway through cooking.

Problem	Possible Cause	Solution
Excessive smoke or odor during cooking.	Food residue on heating elements or interior; first use burn-off.	For first use, this is normal. For subsequent uses, ensure the oven interior and accessories are clean. Remove any food debris. Reduce fat content if cooking greasy foods.
LCD display is dim or unresponsive.	Temporary electrical glitch.	Unplug the oven from the power outlet for a few minutes, then plug it back in.
Toast is too light or too dark.	Incorrect shade setting.	Adjust the Lighter/Darker knob to a higher setting for darker toast or a lower setting for lighter toast.

WARRANTY INFORMATION

This Haden product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific details regarding coverage, duration, and terms and conditions. Retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or general inquiries about your Haden Countertop Toaster Oven Air Fryer Combo, please contact HADEN customer support.

You can typically find contact information, including phone numbers and email addresses, on the official HADEN website or within the product packaging and warranty documentation.

Please have your model number (75148) and proof of purchase ready when contacting support.