

HOMCOM 001-005

HOMCOM 4:3 Electric Projector Screen - Model 001-005

Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your HOMCOM 4:3 Electric Projector Screen, Model 001-005. Please read these instructions thoroughly before use and retain them for future reference.

The HOMCOM electric projector screen is designed for both home cinema and professional presentation environments, offering a high-quality viewing experience with convenient remote control operation.

2. SAFETY INSTRUCTIONS

- Ensure the power supply voltage matches the specifications of the projector screen (230V).
- Do not expose the screen or its electrical components to moisture or extreme temperatures.
- Keep the remote control and screen away from children.
- Always disconnect the power supply before cleaning or performing any maintenance.
- Do not attempt to disassemble or repair the screen yourself. Contact qualified service personnel for assistance.
- Ensure the mounting surface is strong enough to support the weight of the screen.
- Avoid obstructing the screen's movement path during operation.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking:

- 1 x Electric Projector Screen (Model 001-005)
- 1 x Remote Control (with 1 x 12V battery included)
- 1 x Wired Control Panel
- Mounting Hardware (screws, anchors)

- 1 x Instruction Manual

4. SETUP AND INSTALLATION

The projector screen can be mounted on a wall or ceiling. Choose a suitable location that allows for optimal viewing and clear projection.

4.1 Mounting Options

The screen offers flexible installation. Ensure the mounting points are level and securely fastened to a structural element.



Figure 1: Wall and Ceiling Mounting Options. The screen can be installed directly onto a wall or suspended from a ceiling.

4.2 Electrical Connection

Connect the screen's power cable to a standard 230V electrical outlet. Ensure the connection is secure and free from obstruction.

4.3 Screen Dimensions

The screen provides a 100-inch diagonal viewing area with a 4:3 aspect ratio. The total dimensions are 203 cm (width) x 152 cm (height) for the viewing surface.



 


Figure 2: Screen Dimensions. The viewing area measures 203 cm by 152 cm, with a 100-inch diagonal.

5. OPERATING INSTRUCTIONS

The projector screen can be operated using the included wireless remote control or the wired control panel.

5.1 Wireless Remote Control

The wireless remote control allows you to operate the screen from up to 30 meters away. It features 'Up', 'Down', and 'Stop' buttons.

OPTIMALER SICHTBEREICH CH 170°

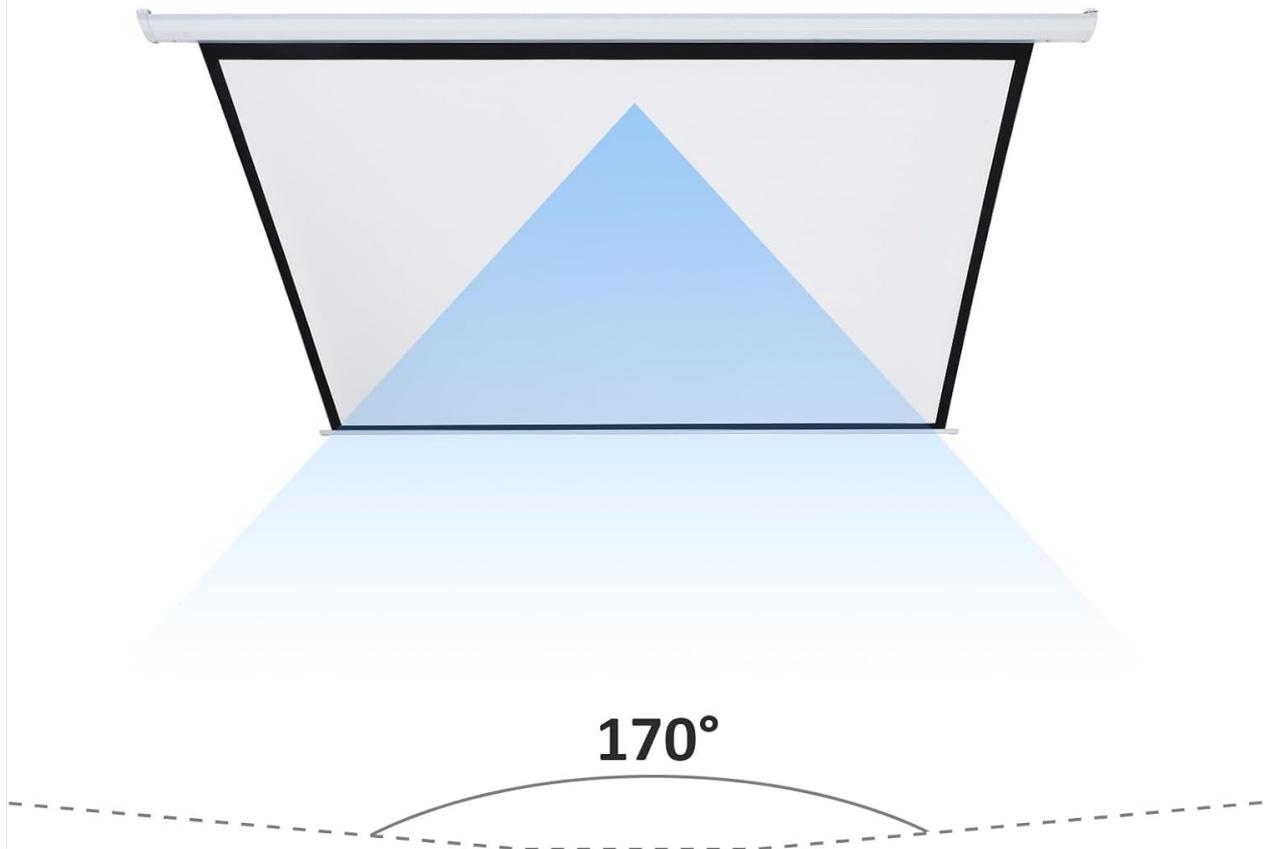


Figure 3: Wireless Remote Control. Use the 'Up' button to retract the screen, 'Down' to extend it, and 'Stop' to pause movement.

- Press the **UP** button to retract the screen into its casing.
- Press the **DOWN** button to extend the screen.
- Press the **STOP** button to pause the screen at any desired position.

5.2 Wired Control Panel

The wired control panel offers an alternative method of operation, typically mounted near the screen.



Figure 4: Wired Control Panel. Functions identically to the wireless remote for screen movement.

5.3 Optimal Viewing

The screen features a 170° viewing angle, ensuring a clear image from various positions within the room.

ANWENDUNG KLASSENZIMMER

BESPRECHUNGSRAUM KONFERENZRAUM WOHNZIMMER



Figure 5: Optimal Viewing Area. The screen provides a wide 170-degree viewing angle for comfortable viewing.

6. MAINTENANCE

6.1 Cleaning the Screen Surface

To clean the screen surface, gently wipe it with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the screen material. Allow the screen to air dry completely before retracting.

6.2 Cleaning the Casing

Wipe the metal and plastic casing with a soft, dry cloth. If necessary, a slightly damp cloth can be used, followed by immediate drying.

6.3 Remote Control Battery Replacement

If the remote control's range or responsiveness decreases, replace the 12V battery. Refer to the remote control's compartment for specific battery type and replacement instructions.

7. TROUBLESHOOTING

- **Screen does not move:** Check if the power cable is securely plugged into a working outlet. Ensure the remote control battery is not depleted. Try using the wired control panel.
- **Remote control not responding:** Replace the 12V battery in the remote control. Ensure there are no obstructions between the remote and the screen's receiver.
- **Screen retracts/extends partially:** Disconnect power for a few minutes, then reconnect. This may reset the motor. If the issue persists, contact customer support.
- **Unusual noise during operation:** Discontinue use and contact customer support. Do not attempt to force the screen's movement.

8. SPECIFICATIONS

Feature	Specification
Brand	HOMCOM
Model Number	001-005
Display Dimensions (W x H)	203 cm x 152 cm
Diagonal Size	100 inches
Aspect Ratio	4:3
Viewing Angle	170°
Material	Metal, Plastic (Casing); Matte White Fabric (Screen)
Power	25 W
Voltage	230V
Mounting Type	Wall or Ceiling
Remote Control Range	Up to 30 meters
Item Weight	7.2 kg
Batteries Required	1 x 12V (included for remote)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.