

Amazon Basics LSREADER24

Amazon Basics Micro SD Card Reader USB-C 3.0 Instruction Manual

Model: LSREADER24 | Brand: Amazon Basics

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Amazon Basics Micro SD Card Reader USB-C 3.0. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PRODUCT OVERVIEW

The Amazon Basics Micro SD Card Reader is a compact device designed for high-speed data transfer between Micro SD cards and USB-C enabled devices. It supports various Micro SD card capacities and offers plug-and-play functionality.



Figure 1: Amazon Basics Micro SD Card Reader USB-C 3.0. This image displays the compact, black card reader with its USB-C connector and Micro SD card slot.

Key Features:

- Compact design with USB-C 3.0 male plug.
- High-speed data transfer up to 200MB per second.
- Plug-and-play functionality; no software required.
- Compatible with a wide range of USB-C devices including smartphones, tablets, laptops, and desktop computers.
- Backwards-compatible with USB 2.0.

SETUP

1. **Insert Micro SD Card:** Locate the Micro SD card slot on the card reader. Gently push your Micro SD card into the slot until you hear a click, indicating it is securely seated.



Figure 2: Micro SD card inserted into the reader. The reader is compact and compatible with USB 3.0 Type-C, offering fast transfers up to 200MB/second for use with PCs, laptops, and tablets, and is USB 2.0 backward compatible.

2. **Connect to Device:** Plug the USB-C male connector of the card reader into a compatible USB-C port on your

smartphone, tablet, laptop, or desktop computer.



Figure 3: The Amazon Basics Micro SD Card Reader connected to a laptop's USB-C port. The compact design allows for easy integration with various devices.

Note: For tightly spaced USB-C ports, it may be necessary to unplug nearby devices first to ensure proper connection.

3. **Device Recognition:** Your operating system (Windows, Mac OS, Linux) should automatically recognize the card reader and the inserted Micro SD card as a removable storage device. No additional drivers or software installation is typically required.

OPERATING INSTRUCTIONS

Once the card reader is connected and recognized by your device:

1. **Accessing Files:** Open your device's file explorer (e.g., File Explorer on Windows, Finder on Mac) and locate the newly mounted drive corresponding to your Micro SD card.
2. **Transferring Data:** You can now drag and drop files between your device's internal storage and the Micro SD card, or copy and paste as you would with any other storage device. The card reader supports data transfer speeds up to 200MB/s, depending on your Micro SD card and host device capabilities.



Figure 4: The Amazon Basics Micro SD Card Reader connected to a smartphone, enabling direct file access and transfer.

3. **Ejecting the Card Reader:** Before disconnecting the card reader, always safely eject it from your operating system to prevent data corruption. This is typically done by right-clicking the drive icon and selecting "Eject" or using the "Safely Remove Hardware" option.

COMPATIBILITY

The Amazon Basics Micro SD Card Reader is compatible with:

- **Devices:** Smartphones, Tablets, Laptops, Desktop Computers, Gaming Consoles, and any other USB-C enabled device compatible with Micro SD Cards.
- **Operating Systems:** Windows, Mac OS, Linux.
- **Micro SD Card Capacities:** 128GB, 256GB, 512GB, 1TB Amazon Basics Micro SD Cards, and other compatible Micro SD cards.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	LSREADER24
Special Feature	Compact
Read Speed	Up to 200 Megabytes Per Second
Item Weight	0.16 ounces
Hardware Interface	USB 3.0 Type C
Product Dimensions (LxWxH)	2.83 x 2.58 x 0.61 inches
Compatible Devices	Desktop, Laptop, Smartphone, Tablet
Operating System	Windows/Mac OS/Linux

TROUBLESHOOTING

- Device not recognized:**

Ensure the card reader is fully inserted into the USB-C port. Try a different USB-C port or a different device to rule out port-specific issues. Verify the Micro SD card is correctly inserted into the card reader.
- Slow transfer speeds:**

Transfer speeds can be affected by the quality and speed class of your Micro SD card, the USB-C port version on your device (USB 3.0 offers faster speeds than USB 2.0), and other active processes on your computer. Ensure you are using a high-speed Micro SD card and a USB 3.0 compatible port for optimal performance.
- Cannot write to Micro SD card:**

Check if the Micro SD card has a physical write-protection switch (though less common on Micro SD cards themselves, some adapters have them). Ensure the card is not full or corrupted. Try formatting the card (this will erase all data).

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the card reader. Avoid using liquid cleaners or solvents.
- Storage:** Store the card reader in a cool, dry place away from direct sunlight and extreme temperatures.
- Handling:** Avoid dropping the device or exposing it to excessive force, which could damage internal components or the USB-C connector.

WARRANTY AND SUPPORT

The Amazon Basics Micro SD Card Reader USB-C 3.0 comes with a limited warranty. For detailed warranty information and customer support, please refer to the official Amazon Basics website or contact Amazon customer service directly.

Manufacturer: Amazon
UPC: 195515054881
Online Support: amazon.com/pbhelp

Related Documents - LSREADER24

[illegible]

