

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hoxida](#) /

› [Hoxida Cordless Electric Nail Drill \(Model NailDrills-004\) User Manual](#)

## Hoxida NailDrills-004

# Hoxida Cordless Electric Nail Drill

MODEL: NAILDRILLS-004 USER MANUAL

## 1. Introduction

---

Thank you for choosing the Hoxida Cordless Electric Nail Drill. This device is designed for comprehensive hand and foot care, offering a professional solution for shaping, buffing, grinding, polishing, and removing cuticles, hard skin, and calluses. Its cordless design, integrated LED light, and adjustable speeds make it suitable for both natural and artificial nails.

### Package Contents:

- 1 x Cordless Electric Nail Drill
- 9 x Interchangeable Drill Bits
- 100 x Sanding Bands (various grits)
- 1 x Type-C Charging Cable
- 1 x Storage Bag

# Electric Manicure And Pedicure Kit

Your nail salon at home



Figure 1: Contents of the Hoxida Electric Nail Drill Kit.

## 2. Safety Information

Please read all safety instructions before using the device to prevent injury and ensure proper operation.

- Always use the appropriate speed and rotation direction for your specific needs.
- Exercise caution during use, as the device can generate heat and may cause injury if not handled properly.
- Avoid direct contact with the rotating bit or motor during operation.
- Do not use the device on damaged or weakened nails to prevent further injury or complications.
- Keep out of reach of children.
- Ensure the device is fully charged before initial use.

## 3. Product Overview

The Hoxida Electric Nail Drill features an ergonomic design for comfortable holding and precise control. It includes an integrated 360° LED light for enhanced visibility and an LCD display to show speed level and battery status.

# Electric Nail Drill With **360° LED Light**

Without Dark Corners More Clear, Effective Grinding



Figure 2: Device features including 360° LED light and various applications.

## Key Components:

- **Drill Bit Slot:** For inserting and securing various grinding bits.
- **360° LED Light:** Illuminates the working area for clear visibility.
- **Power Button:** Turns the device ON/OFF.
- **Mode Button (M):** Cycles through speed settings.
- **Rotation Direction Button:** Changes between clockwise and anti-clockwise rotation.
- **LCD Display:** Shows current speed level and battery charge.
- **Type-C Charging Port:** For recharging the internal battery.

Your browser does not support the video tag.

Video 1: Overview of the Professional Manicure Pedicure Kit, demonstrating its features and accessories.

## 4. Setup

### 4.1 Charging the Device

Before first use, fully charge the nail drill. Connect the provided Type-C USB cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., wall adapter, power bank,

laptop). The LCD display will indicate the charging status. A full charge takes approximately 4 hours and provides up to 6 hours of runtime.



Figure 3: Charging the cordless nail drill.

#### 4.2 Attaching Drill Bits

Select the appropriate drill bit for your desired task. Gently push the stem of the drill bit into the drill bit slot until it is securely seated. To remove, simply pull the bit out. Ensure the device is OFF before changing bits.

# 10Pcs Professional

## Manicure Pedicure Kit



Figure 4: Selection of interchangeable drill bits.

## 5. Operating Instructions

### 5.1 Power ON/OFF

Press and hold the Power button (usually indicated by a universal power symbol) to turn the device ON or OFF.

### 5.2 Adjusting Speed

The device offers 10 adjustable speed levels, ranging from 2700 to 20,000 RPM. Press the Mode button (M) to cycle through the speed settings. The current speed level will be displayed on the LCD screen. The device features a memory mode, which will recall the last used speed setting upon restart.

# Memory Function

Remember the last speed mode you used  
No need to cycle through all speeds



Figure 5: Adjustable speeds and memory function.

## 5.3 Changing Rotation Direction

Press the Rotation Direction button to switch between clockwise and anti-clockwise rotation. This feature allows for comfortable use by both left and right-handed individuals and for different nail care techniques.



Figure 6: Rotation direction options.

## 5.4 Using the LED Light

Press the LED Light button (light bulb icon) to turn the 360° LED light ON or OFF. The light provides clear illumination of the grinding area, improving precision and visibility.

## 5.5 Application Tips

- **For Manicure & Pedicure:** Use various bits for shaping, buffing, and polishing natural nails.
- **For Thick Nails & Toenails:** Select a coarser grit sanding band or a specialized bit to effectively thin and shape thick nails.
- **For Cuticle & Hard Skin Removal:** Use appropriate bits for gentle and precise removal of dead skin and cuticles.
- **For Gel/Dip Powder Nail Removal:** The powerful motor and suitable bits can efficiently remove gel or dip powder nail applications.

**Important: Do not use on non-nail objects.**

## 6. Maintenance

### 6.1 Cleaning

After each use, gently brush off any nail dust or debris from the drill bits and the device body. You may use a soft, dry cloth. Do not immerse the device in water or use harsh chemicals for cleaning.

## 6.2 Storage

Store the nail drill and its accessories in the provided storage bag in a cool, dry place, away from direct sunlight and moisture. Keep out of reach of children.

## 7. Troubleshooting

---

- **Device not turning ON:** Ensure the device is fully charged. Check the charging cable connection.
- **Weak performance:** The battery might be low. Recharge the device. Ensure the drill bit is securely attached.
- **Excessive heat:** If the device becomes unusually hot, turn it off and allow it to cool down. Ensure proper ventilation and avoid prolonged continuous use.
- **Bit not rotating smoothly:** Check if the bit is correctly inserted and not damaged. Replace if necessary.

## 8. Specifications

---

Feature	Detail
Model Number	NailDrills-004
Power Source	Battery Powered
Battery Average Life	3 Hours (up to 6 hours runtime on a single charge)
Maximum Rotational Speed	20,000 RPM (10 adjustable speeds)
Charging Type	Type-C USB
Material Type	Metal, Plastic
Item Weight	0.3 Kilograms (10.58 ounces)
Package Dimensions	7.83 x 5.87 x 1.73 inches

## 9. Warranty and Support

---

For warranty information or technical support, please refer to the product packaging or contact Hoxida customer service directly. Keep your purchase receipt for warranty claims.