

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SGIN](#) /

› [SGIN Tablet 10.1 inch, Android 12 User Manual](#)

SGIN 8183

SGIN 10.1-inch Android 12 Tablet User Manual

Model: 8183

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your SGIN 10.1-inch Android 12 Tablet. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

The SGIN 10.1-inch Android 12 Tablet features an Octa-Core processor, 4GB RAM, 64GB internal storage (expandable up to 512GB via TF card), a 10.1-inch HD IPS display, 5G/2.4G Wi-Fi, Bluetooth 5.0, and a 6000mAh battery.

WHAT'S IN THE Box

- SGIN 10.1-inch Android 12 Tablet
- Power Adapter

Note: A TF card for storage expansion is not included and must be purchased separately.

PRODUCT OVERVIEW

Familiarize yourself with the physical components of your SGIN Tablet.

Latest Android 12

Equipped with the latest running system Android 12, capable of running most of the APPs on the market, so that you can be unimpeded both in the office and in entertainment and leisure.



Image Description: This diagram illustrates the SGIN Tablet from multiple angles. The front view shows the screen and front camera. The rear view highlights the rear camera and flash. The side views indicate the location of the power button, volume buttons, 3.5mm headset jack, TF card slot, and USB-C port, along with the dual speakers.

- **Front Camera:** Located above the screen, used for video calls and selfies.
- **Rear Camera/Flash Light:** Located on the back, used for taking photos and videos.
- **Power Button:** Used to turn the tablet on/off or put it to sleep/wake it up.
- **Volume Buttons:** Used to adjust the audio volume.
- **3.5mm Headset Jack:** For connecting headphones or external audio devices.
- **USB-C Port:** For charging the tablet and connecting to a computer for data transfer.
- **TF Card Slot:** For inserting a MicroSD (TF) card to expand storage.
- **Speakers:** Dual stereo speakers for audio output.

SETUP

1. **Charge the Tablet:** Before first use, connect the tablet to the power adapter and charge it fully. The charging indicator will typically show progress.
2. **Power On:** Press and hold the Power Button until the SGIN logo appears on the screen.

- Initial Setup:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, set up your Google account, and configure basic settings.
- Insert TF Card (Optional):** If you wish to expand storage, carefully insert a TF (MicroSD) card into the designated slot. Ensure the tablet is powered off before inserting or removing the card.

OPERATING INSTRUCTIONS

Your SGIN Tablet runs on Android 12, offering a user-friendly interface and access to a wide range of applications.



Image Description: This image displays the SGIN Tablet screen running Android 12, with various application icons scattered across the interface, indicating the tablet's capability to run diverse apps.

- Navigation:** Use touch gestures to navigate the interface. Swipe up from the bottom for the app drawer, swipe down from the top for notifications and quick settings.
- Applications:** Download and install applications from the Google Play Store.
- Multitasking:** Android 12 allows for efficient multitasking. Use the recent apps button to switch between open applications.
- Settings:** Access the Settings app to customize your tablet's preferences, including display, sound, network, and security.

CONNECTIVITY

Wi-Fi Connection

The tablet supports dual-band Wi-Fi (2.4G and 5G) for stable and fast internet access.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.

Bluetooth Connection

Connect to Bluetooth devices such as headphones, speakers, or keyboards.

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Toggle Bluetooth **On**.

3. Ensure your Bluetooth device is in pairing mode.
4. Tap **Pair new device** and select your device from the list.
5. Confirm the pairing code if prompted.

CAMERA USAGE

The tablet is equipped with a 2MP front camera and a 5MP rear camera for capturing photos and videos.



Image Description: This image highlights the tablet's dual camera system, featuring a 2MP front camera and a 5MP rear camera. It includes example photos demonstrating the camera's use for selfies, video calls, and capturing moments with family.

1. Open the **Camera** application.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.
4. Access various camera modes and settings within the app for different effects and adjustments.

STORAGE MANAGEMENT

Your tablet comes with 64GB of internal storage and supports expansion up to 512GB using a TF (MicroSD) card.

4GB RAM+64GB ROM

Efficiently multitask with 4GB of RAM. 64GB of storage and a TF slot expansion of up to 512GB provide plenty of space for your personal data.

 **4GB RAM**
Memory

 **64GB ROM**
Space

 **TF Card**
UP TO 512GB



Image Description: This image illustrates the tablet's memory specifications, highlighting 4GB RAM, 64GB internal storage (ROM), and the capability for TF card expansion up to 512GB, allowing for ample space for applications and media.

- **Internal Storage:** The 64GB internal storage is used for the operating system, pre-installed apps, and user data.
- **TF Card:** Insert a TF card to store additional photos, videos, music, and documents. This helps free up internal storage for optimal tablet performance.
- **Managing Storage:** Go to **Settings > Storage** to view storage usage and manage files. You can move certain apps or media to the TF card if configured as portable storage.

BATTERY MANAGEMENT

The tablet is powered by a 6000mAh battery, providing up to 8 hours of usage under normal conditions.

- **Charging:** Use the provided power adapter and USB-C cable to charge the tablet. Avoid using unapproved chargers to prevent damage.
- **Battery Life:** To maximize battery life, reduce screen brightness, disable Wi-Fi/Bluetooth when not in use, and close unnecessary background applications.

- **Power Saving Mode:** Activate power-saving mode via **Settings > Battery** to extend usage time when the battery is low.
- **Battery Health:** Avoid completely draining the battery frequently. Charge the tablet before it reaches critically low levels.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals.
- **Protection:** Consider using a protective case and screen protector to guard against scratches and accidental damage.
- **Software Updates:** Regularly check for and install system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.
- **Environmental Conditions:** Avoid exposing the tablet to extreme temperatures, direct sunlight, or excessive moisture.

TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes, then try powering on again. If it still doesn't turn on, perform a hard reset by holding the power button for 10-15 seconds.
Applications crash frequently.	Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage & cache > Clear cache). Ensure the app is updated to its latest version. If the issue persists, uninstall and reinstall the app. Check for system updates.
Wi-Fi connection issues.	Restart your Wi-Fi router and the tablet. Forget the network (Settings > Network & internet > Wi-Fi > [Network Name] > Forget) and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance.	Close unnecessary background applications. Clear cached data (Settings > Storage > Cached data). Consider uninstalling unused apps. Restart the tablet periodically.
Tablet shuts down unexpectedly.	Ensure the battery is not critically low. Check for system updates. If the issue persists, a factory reset might be necessary (backup data first). Contact customer support if the problem continues.

SPECIFICATIONS

Feature	Detail
Model Number	8183 (T10 Series)
Operating System	Android 12
Processor	Octa-Core, 2 GHz (MediaTek MTK8183)
RAM	4 GB

Feature	Detail
Internal Storage (ROM)	64 GB
Expandable Storage	Up to 512 GB via TF (MicroSD) card (not included)
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (HD IPS)
Wireless Connectivity	802.11ac (5G/2.4G Wi-Fi), Bluetooth 5.0
Front Camera	2 MP
Rear Camera	5 MP
Battery Capacity	6000 mAh Lithium Ion
Average Battery Life	8 Hours (usage)
Item Weight	1.16 pounds
Color	Black

WARRANTY AND SUPPORT

SGIN products come with a 1-year warranty service. For any product-related inquiries or support, please contact SGIN customer service.

- Warranty Period:** 1 year from the date of purchase.
- Contacting Support:** To reach customer service, locate the "Get Product Support" option on your order interface. SGIN will respond as soon as possible to assist with your product.
- Product Quality:** SGIN is committed to providing high-quality products designed to meet daily and work needs.