

Garwarm GARWARM-19.6-IN-CAGED-CEILING-400a12862e

Garwarm 20-inch Caged Flush Mount Ceiling Fan with Light and Remote Control User Manual

Model: GARWARM-19.6-IN-CAGED-CEILING-400a12862e | Brand: Garwarm

1. SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Always turn off power at the circuit breaker before installing, cleaning, or servicing the fan.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code. If you are unfamiliar with wiring, consult a qualified electrician.
- Ensure the installation location can support the weight of the fan.
- Do not operate the fan with damaged wiring or if the fan is visibly damaged.
- Keep hands, clothing, and other objects away from the fan blades when the fan is in operation.

2. PACKAGE CONTENTS

Verify that all components are present before proceeding with installation:

- Ceiling Fan with Light Kit
- Remote Control
- Instructions Manual

3. SPECIFICATIONS

Brand	Garwarm
Model Number	GARWARM-19.6-IN-CAGED-CEILING-400a12862e
Color	Caged-White and Gold
Material	Metal

Product Dimensions	20"L x 20"W x 8.26"H
Installation Type	Flush Mount
Control Method	Remote, App Control
Light Source Type	Energy Efficient
Number of Light Sources	4
Bulb Base	E26 (bulbs not included)
Max Wattage	60 watts per bulb
Voltage	110 Volts (AC)
Noise Level	30dB (low noise operation)
Features	6 Wind Speeds, 1/2/4/8H Timer, Reversible Motor

4. INSTALLATION INSTRUCTIONS

Follow these steps to install your Garwarm Caged Ceiling Fan. It is recommended to have a qualified electrician perform the installation if you are unsure.

4.1 Pre-Installation Check

- Ensure the power is turned off at the circuit breaker.
- Confirm all parts listed in the 'Package Contents' section are present.
- Prepare necessary tools (screwdriver, wire strippers, drill, etc.).

4.2 Assembling the Fan

1. Fix the round bottom cover onto the fan housing using screw nuts and tighten them with a wrench.
2. Install the E26 base bulbs (not included) into the sockets.



Figure 1: Attaching the bottom cover to the fan housing.

4.3 Mounting the Fan

1. Fix the hanging bracket onto the ceiling. The choice of screws should be based on the actual ceiling condition to ensure secure mounting.
2. Hang the 'S' hook to the hanging bracket, then hang the lamp onto the hook. This provides support while connecting the power lines.
3. While ensuring the power is off, connect the live wire (L) and the neutral wire (N) of the lamp to the live wire (L) and the neutral wire (N) of the power cable accordingly. Use wire nuts to secure connections.

4. Carefully tuck the wires into the junction box and secure the fan to the hanging bracket.

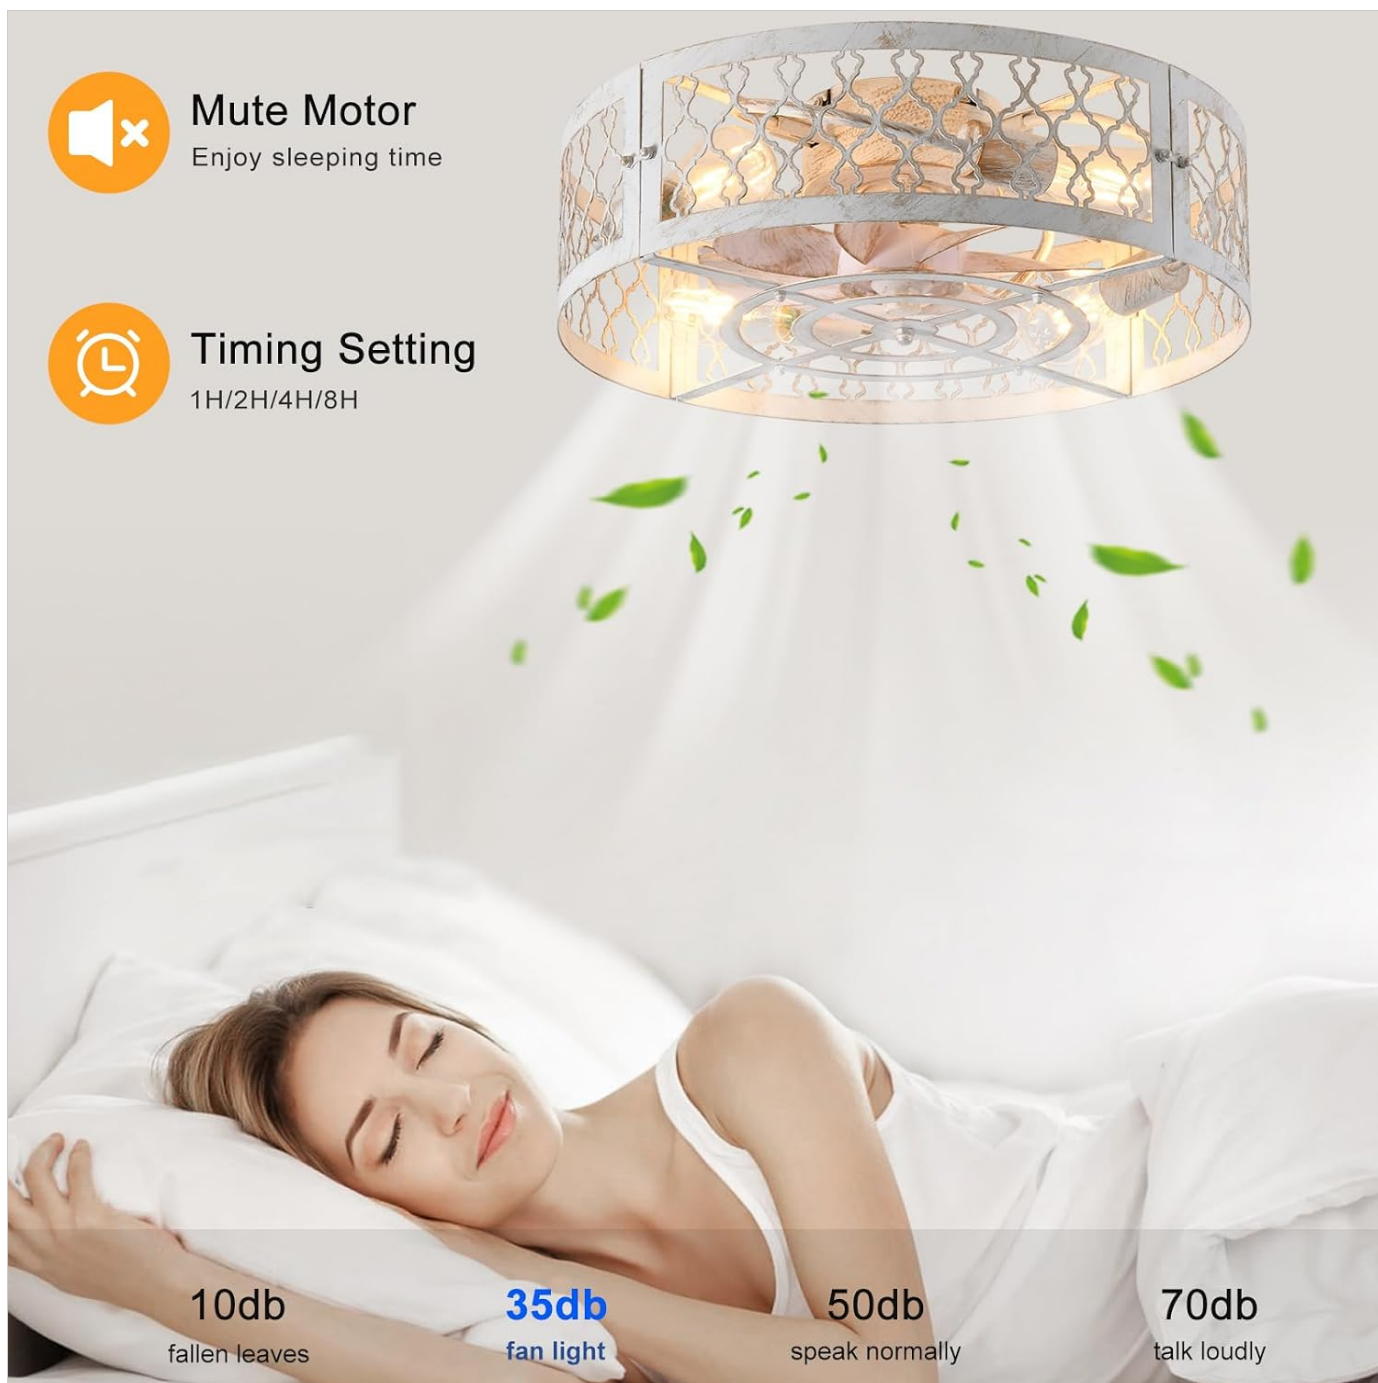


Figure 2: Internal view of the fan showing wiring connections.

4.4 Installation Video

For a visual guide on the installation process, please watch the official installation video:

Your browser does not support the video tag.

Video: Official installation guide for Garwarm caged ceiling fans.

5. OPERATING INSTRUCTIONS

Your Garwarm ceiling fan can be operated using the included remote control or a dedicated smartphone application.

5.1 Remote Control Functions

The remote control allows you to manage all fan and light functions:

- **Power On/Off:** Turns the fan and light on or off.

- **Light On/Off:** Controls the light independently.
- **Fan Speed:** Adjusts between 6 wind speed levels (1-6).
- **Timer Settings:** Set the fan to turn off automatically after 1, 2, 4, or 8 hours.
- **Reversible Motor:** Switches between forward (corotation) and reverse (reversal) rotation for summer and winter modes.



Figure 3: Remote control layout and functions.



Figure 4: Summer (downward airflow) and Winter (upward airflow) modes.

5.2 App Control

The fan can also be controlled via a smartphone application. Refer to the manual for QR code to download the app and pairing instructions.

- The app provides similar controls to the remote, including fan speed, light control, and timer settings.
- Note: Remote and app control cannot achieve infinite dimming. The fan is not compatible with smart home devices.



6 Wind Speeds



Timing function



Quiet operation



Reverse function



Remote/APP control



E26 bulb sockets

Figure 5: Overview of fan features including app control.

5.3 Operation Videos

Watch these videos for demonstrations of the fan's operation and remote/app usage:

Your browser does not support the video tag.

Video: Demonstration of the caged ceiling fan with light in operation.

Your browser does not support the video tag.

Video: Guide on how to use the remote and app for fan control.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically wipe the fan blades and light fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Blade Cleaning:** The fan blades are designed to be easily removed for cleaning. Gently detach them, clean, and

reattach securely.

- **Tighten Fasteners:** Check all screws and fasteners periodically to ensure they are tight.



Figure 6: Cleaning the fan blades.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Ensure all wires are securely connected; Replace remote control batteries.
Light does not work	Bulbs not installed or faulty; Loose wire connections; Light switch on remote/app is off.	Install or replace bulbs; Check wire connections; Ensure light is turned on via remote/app.
Fan makes noise	Loose screws; Unbalanced blades; Motor issue.	Tighten all mounting screws; Check for balanced blades; Contact customer support if motor noise persists.
Remote/App not responding	Batteries low/dead; Not paired correctly; Obstruction between remote/fan.	Replace batteries; Re-pair remote/app with fan (refer to pairing instructions); Ensure clear line of sight.

8. WARRANTY AND SUPPORT

Garwarm products are designed for quality and durability. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Garwarm website.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question