

Manuals.plus /

› PGYTECH /

› PGYTECH Retro Style Camera Shoulder Strap Air (Meteorite Grey) - Instruction Manual

PGYTECH Retro Style Camera Shoulder Strap Air

PGYTECH Retro Style Camera Shoulder Strap Air

Model: Retro Style Camera Shoulder Strap Air (Meteorite Grey)

Brand: PGYTECH

1. PRODUCT OVERVIEW

The PGYTECH Retro Style Camera Shoulder Strap Air is designed for mirrorless cameras, offering a blend of vintage aesthetics and modern functionality. It features a quick-release system, durable Dyneema fiber construction, and adjustable length for versatile carrying options.

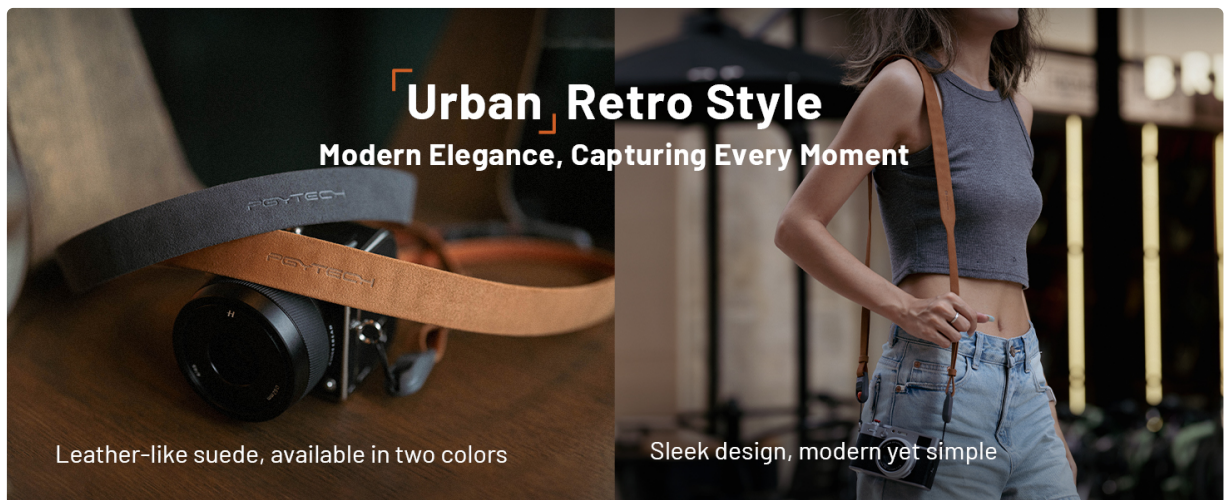


Image: The PGYTECH Retro Style Camera Shoulder Strap Air, highlighting its design and color.

2. WHAT'S IN THE BOX

- PGYTECH Retro Style Camera Shoulder Strap Air (Meteorite Grey) x 1
- Quick Release Beads (1.5mm diameter) x 2 (pre-installed)
- D-rings for camera eyelets x 2 (optional use)

3. SETUP

3.1 Attaching Quick Release Beads to Camera

1. Locate the camera's strap eyelets.
2. Thread the thin loop of a quick release bead through the camera eyelet.
3. Pass the larger bead through the loop you just created and pull gently to secure it. Ensure the bead is fully seated and the loop is tight.
4. Repeat for the second quick release bead on the other camera eyelet.



Image: Step-by-step illustration of attaching the quick release bead to a camera's strap eyelet.

3.2 Attaching Strap to Quick Release Beads

1. Hold the quick connector end of the strap.
2. Press the button on the quick connector to open the locking mechanism.
3. Insert the quick release bead (attached to your camera) into the quick connector until it clicks securely into place.
4. Gently tug on the strap to ensure it is firmly locked.
5. Repeat for the other side of the strap.



Image: Detailed view of the quick connector for secure attachment.

3.3 Adjusting Strap Length

The strap features a button-based adjustment system for flexible length customization (1200mm - 1400mm for Large size). To adjust:

1. Locate the adjustment buttons on the strap.
2. Press the button and slide the strap material through to achieve your desired length.
3. Ensure the button locks into one of the five available settings for secure positioning.

Flexible Length Adjustment with Multiple Button Settings



Image: The strap's flexible length adjustment mechanism with multiple button settings.

4. OPERATING INSTRUCTIONS

4.1 Carrying Options

The adjustable design allows for various carrying styles:

- **Neck Strap:** Wear around your neck for quick access and stability.
- **Shoulder Strap:** Carry over one shoulder for comfort and ease of movement.
- **Crossbody Strap:** Wear across your body for enhanced security and weight distribution.

Snap in Style, Be the Scene

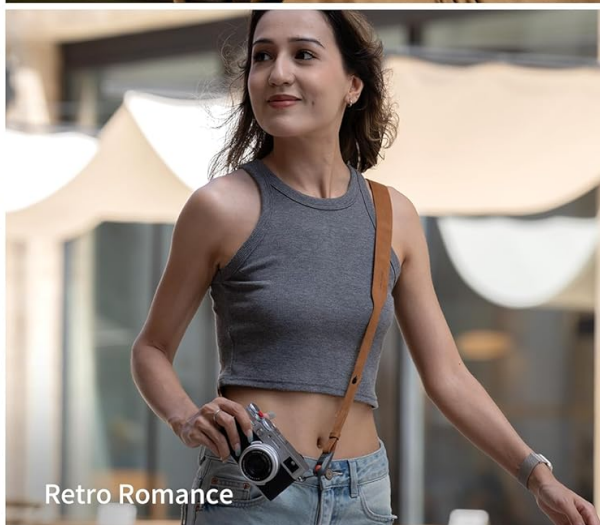


Image: Various ways to wear the camera strap, including neck, shoulder, and crossbody styles.

4.2 Quick Release Functionality

To quickly detach your camera from the strap, simply press the button on the quick connector and pull the quick release bead out. To reattach, push the bead back into the connector until it clicks.

Your browser does not support the video tag.

Video: Demonstrating the quick release mechanism of the PGYTECH Camera Shoulder Strap Air.

5. MAINTENANCE

The strap is constructed with tear-resistant Dyneema fiber. It features an internal three-layer structure for safety. The innermost layer is a load-bearing layer, followed by a replacement-warning layer (yellow), and an outer wear-resistant layer.

- **Inspection:** Regularly inspect the quick release beads and the strap for any signs of wear or damage.
- **Replacement Warning:** If the yellow layer of the Dyneema fiber becomes visible, replace the strap promptly to ensure continued camera safety.
- **Cleaning:** Wipe the strap with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.

Tear-resistant Dyneema fiber

Tear-resistant Dyneema fiber,
15x stronger than steel at
same quality



Strong Load-Bearing&Replace Warning

Note: Replace the strap promptly when the yellow layer
is exposed to ensure camera safety



Image: Cross-section of the Dyneema fiber showing the load-bearing, warning, and wear-resistant layers.

6. TROUBLESHOOTING

If you experience any issues with the PGYTECH Retro Style Camera Shoulder Strap Air, please refer to the following:

- **Strap not securing:** Ensure the quick release bead is fully inserted into the connector until an audible click is heard. Check for any obstructions.
- **Difficulty adjusting length:** Ensure the adjustment button is fully depressed when attempting to slide the strap.
- **Visible yellow layer on quick bead string:** This indicates the need for immediate replacement to maintain safety.

7. SPECIFICATIONS

Feature	Detail
Brand Name	PGYTECH
Model	Retro Style Camera Shoulder Strap Air
Color	Meteorite Grey
Size	Large (Adjustable range: 1200-1400mm)
Item Weight	0.15 Kilograms
Material Type	Nylon, Menorca® Dye-free Water-based MicroSuede, TPE
Fastener Type	Push-Button Quick Connector
Load Capacity	Up to 90 KG (Dyneema fiber)
Compatibility	Mirrorless cameras (e.g., Canon G7 X, Sony Alpha ZV-E10, Nikon Coolpix)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official PGYTECH website or contact

your retailer. Specific warranty terms and conditions may vary by region and purchase location.