

RM-C3135, RM-C3136, LT-50N550A, LT-50NU56Z, LT-55NU56Z, LT-48N540P, LT-40ND55A, LT-40ND56A

User Manual for Generic Replacement Remote Control

Compatible with JVC Smart LCD LED HDTV Models: RM-C3135, RM-C3136, LT-50N550A, LT-50NU56Z, LT-55NU56Z, LT-48N540P, LT-40ND55A, LT-40ND56A

1. INTRODUCTION

This manual provides instructions for the Generic replacement remote control, designed to operate various JVC Smart LCD LED HDTV models. This remote is an infrared (IR) replacement and is intended to function similarly to your original remote. Please review this manual to ensure proper setup and operation.

Important Note: This is a replacement remote. While it is designed to be compatible with the listed JVC models, some advanced or specific functions present on your original remote may not be fully supported or may require different button presses. Always ensure your TV model is listed as compatible before use.

2. PRODUCT OVERVIEW

The remote control features a standard layout with dedicated buttons for power, channel, volume, navigation, and media playback. Familiarize yourself with the button layout as shown below:



Figure 2.1: Front view of the remote control. This image displays the full button layout, including the power button at the top left, mute at the top right, number pad, navigation arrows, volume and channel controls, and various function buttons for display, input, menu, exit, and media playback.

2.1 Button Functions

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV sound.
- **0-9 (Number Pad):** Selects channels directly or enters numerical values.
- **DISPLAY:** Shows on-screen information.
- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Arrows (UP, DOWN, LEFT, RIGHT):** Navigates through menus and options.
- **ENTER:** Confirms selections in menus.
- **MENU:** Opens the TV's main menu.
- **EXIT:** Exits the current menu or screen.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the TV channel.
- **P.MODE / S.MODE:** Picture Mode / Sound Mode (functionality may vary).
- **HOME:** Accesses the Smart TV home screen (functionality may vary).
- **SEARCH:** Opens search function (functionality may vary).
- **ASPECT:** Changes the screen aspect ratio.
- **Media Playback Controls (PLAY/PAUSE, STOP, REWIND, FAST FORWARD, PREVIOUS, NEXT):** Controls media playback on compatible devices or TV functions.
- **ZOOM:** Adjusts screen zoom.
- **REC:** Initiates recording (if TV supports PVR function).
- **DEL:** Delete function.
- **AUDIO:** Changes audio tracks or modes.

- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within Smart TV apps or menus, as indicated on-screen.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 3.1: Battery compartment with cover removed. This image shows the back of the remote control with the battery cover detached, revealing the two AAA battery slots and polarity markings.

3.2 Initial Use

This remote control is an infrared (IR) device and does not require pairing. Once batteries are installed, simply point the remote directly at your JVC TV and press the desired button. Ensure there are no obstructions between the remote and the TV's IR receiver.

4. OPERATING THE REMOTE CONTROL

To operate your JVC TV with this replacement remote, ensure you have a clear line of sight to the TV's infrared receiver. Point the remote directly at the TV and press the desired function button.

4.1 Basic Functions

- **Power On/Off:** Press the **POWER** button.
- **Adjust Volume:** Press **VOL +** to increase volume, **VOL -** to decrease.
- **Change Channel:** Press **CH +** for the next channel, **CH -** for the previous. Use the number pad for direct channel entry.
- **Select Input:** Press the **INPUT** button to cycle through available video inputs (e.g., HDMI 1, AV, Component).
- **Navigate Menus:** Use the **Navigation Arrows** (Up, Down, Left, Right) to move through menu options, and **ENTER** to confirm selections.

4.2 Advanced Functions

For advanced functions such as Smart TV features, specific app controls, or detailed picture/sound settings, refer to your JVC TV's original user manual. While this remote provides common controls, the exact functionality of certain buttons (e.g., HOME, SEARCH, P.MODE, S.MODE, Color Buttons) may depend on your specific JVC TV model and its software. Experiment with these buttons to discover their functions on your TV.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper function. Dispose of used batteries according to local regulations.

5.3 Storage

When not in use for extended periods, it is recommended to remove the batteries from the remote control to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	<ul style="list-style-type: none">Batteries are dead or incorrectly installed.No clear line of sight to the TV's IR receiver.Remote is incompatible with your TV model.	<ul style="list-style-type: none">Replace batteries with new AAA alkaline batteries, ensuring correct polarity.Remove any obstructions between the remote and the TV. Point the remote directly at the TV.Verify your TV model is listed as compatible in this manual or the product description. If not, the remote may not work.
Remote works intermittently.	<ul style="list-style-type: none">Low battery power.Interference from other electronic devices or strong light sources.	<ul style="list-style-type: none">Replace batteries.Ensure no strong light sources (e.g., direct sunlight) are hitting the TV's IR receiver. Move other electronic devices if they are causing interference.
Some buttons do not work.	<ul style="list-style-type: none">Button is not supported by your specific TV model.Button is stuck or damaged.	<ul style="list-style-type: none">As a replacement remote, not all functions of your original remote may be replicated. Refer to your TV's original manual for specific functions.Inspect the button for physical damage.

If troubleshooting steps do not resolve the issue, please contact the seller for further assistance.

7. SPECIFICATIONS

Brand: Generic

Model (Internal): SZHKH0423

Compatible Devices: JVC Smart LCD LED HDTVs (RM-C3135, RM-C3136, LT-50N550A, LT-50NU56Z, LT-55NU56Z, LT-48N540P, LT-40ND55A, LT-40ND56A)

Connector Type: Infrared (IR)

Batteries Required: 2 x AAA (Alkaline recommended)

Color: Black

Max Number of Supported Devices: 1

8. WARRANTY AND SUPPORT

This product is a generic replacement remote control. For any issues, questions, or support inquiries, please contact the seller directly through the platform where you purchased the item. Refer to your purchase details for seller contact information and applicable return or warranty policies.

Please note that as a replacement product, the warranty and support are typically provided by the seller, not the original TV manufacturer (JVC).