

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NOBIS](#) /
- › [NOBIS Clip N1 Portable Bluetooth Speaker User Manual](#)

NOBIS N6301

NOBIS Clip N1 Portable Bluetooth Speaker User Manual

Model: N6301

INTRODUCTION

Thank you for choosing the NOBIS Clip N1 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read it thoroughly before use.



The NOBIS Clip N1 speaker in black, showcasing its compact design and integrated carabiner clip for easy portability.

WHAT'S IN THE BOX

- NOBIS Clip N1 Bluetooth Speaker x 1
- Instruction Manual x 1
- 3A Type-A to Type-C charging cable (30cm) x 1

PRODUCT OVERVIEW AND FEATURES

The NOBIS Clip N1 is a versatile portable Bluetooth speaker designed for various environments, from outdoor adventures to home use. Key features include:

- **Beat Mode:** Unique feature allowing seamless blending with music or standalone beat tones.
- **Extended Playtime:** Up to 24 hours of continuous audio playback.
- **IP68 Waterproof & Dustproof:** Designed to withstand submersion in water up to 2 meters for 30 minutes and protect against dust ingress.
- **HD Sound Effects:** Delivers clear and full audio quality.
- **Stereo Pairing:** Connect two Clip N1 speakers for an immersive stereo sound experience.
- **Bluetooth 5.3:** Ensures stable and efficient wireless connectivity.
- **Custom EQ:** Adjust sound profiles via the dedicated app.
- **Integrated Carabiner:** For easy portability and attachment.

Stylish and Portable Music on the Go

Lifted, Held, Hung, or Carried in a bag



The NOBIS Clip N1 speaker conveniently clipped to a backpack, highlighting its portability for on-the-go music.

Playtime up to 24 Hours

(varies based on volume level and audio content)



A visual representation of the NOBIS Clip N1's impressive 24-hour battery life, suitable for extended use.



Each Press Triggers a Unique Sound Effect

The beat sound blends with music during playback and plays solo when no music is playing.



Maraca



Electronic drum



Snare



DJ

The NOBIS Clip N1 speaker demonstrating its IP68 waterproof and dustproof capabilities, ideal for outdoor environments.

SETUP

Charging the Speaker

Before first use, fully charge your NOBIS Clip N1 speaker. Use the included Type-A to Type-C charging cable and connect it to a compatible USB power adapter (not included).

- Connect the USB-C end of the cable to the charging port on the speaker.
- Connect the USB-A end to a power source.
- The charging indicator light will illuminate during charging and turn off when fully charged.
- A full charge takes approximately 3.5 hours.

Powering On/Off

- **To Power On:** Press and hold the Power button (① in the button diagram) for 2 seconds. You will hear an audible prompt.
- **To Power Off:** Press and hold the Power button (①) for 2 seconds. You will hear an audible prompt.

OPERATING INSTRUCTIONS

Button Functions




Detailed view of the NOBIS Clip N1's intuitive button controls and USB-C charging port.

1. **Power button:** Press and hold for 2 seconds to power on/off.
2. **Bluetooth button:** Press to enter pairing mode.
3. **Multi-function button:** Play/Pause, Answer/End calls.
4. **Volume up button:** Increase volume.
5. **Volume down button:** Decrease volume.
6. **Beat button:** Activate/deactivate Beat Mode, switch beat sounds.
7. **Beat touch key:** Trigger beat sounds when Beat Mode is active.
8. **USB-C charging port:** For charging the speaker.

Bluetooth Pairing

To connect your NOBIS Clip N1 speaker to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and within 10 meters (33 feet) of your device.
2. The speaker will automatically enter pairing mode when powered on for the first time, or you can press the Bluetooth button (Ⓜ) to enter pairing mode. The Bluetooth indicator will flash.
3. On your device, enable Bluetooth and search for available devices.
4. Select "NOBIS Clip N1" from the list.
5. Once connected, the Bluetooth indicator will remain solid blue, and you will hear a confirmation sound.

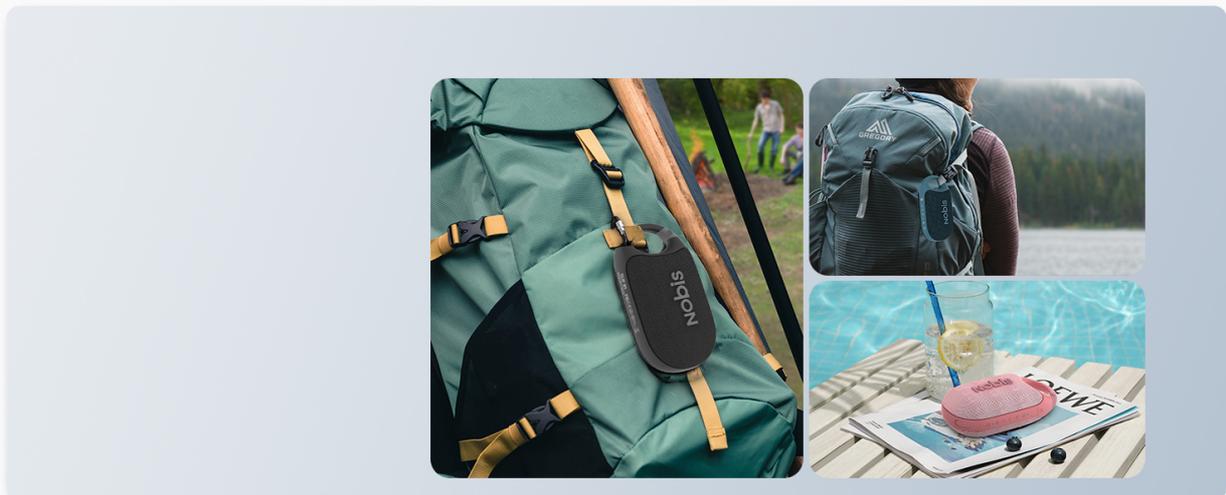

Illustrates the stable wireless connectivity of the NOBIS Clip N1 speaker with a Bluetooth range of up to 10 meters.


Beat Mode Operation

The Beat Mode allows you to add dynamic beat sounds to your music or play them independently.

Unleash the Beat: Mix, Match, and Play

Three modes and Five different beat sounds

More beat sounds in Nobis GO app

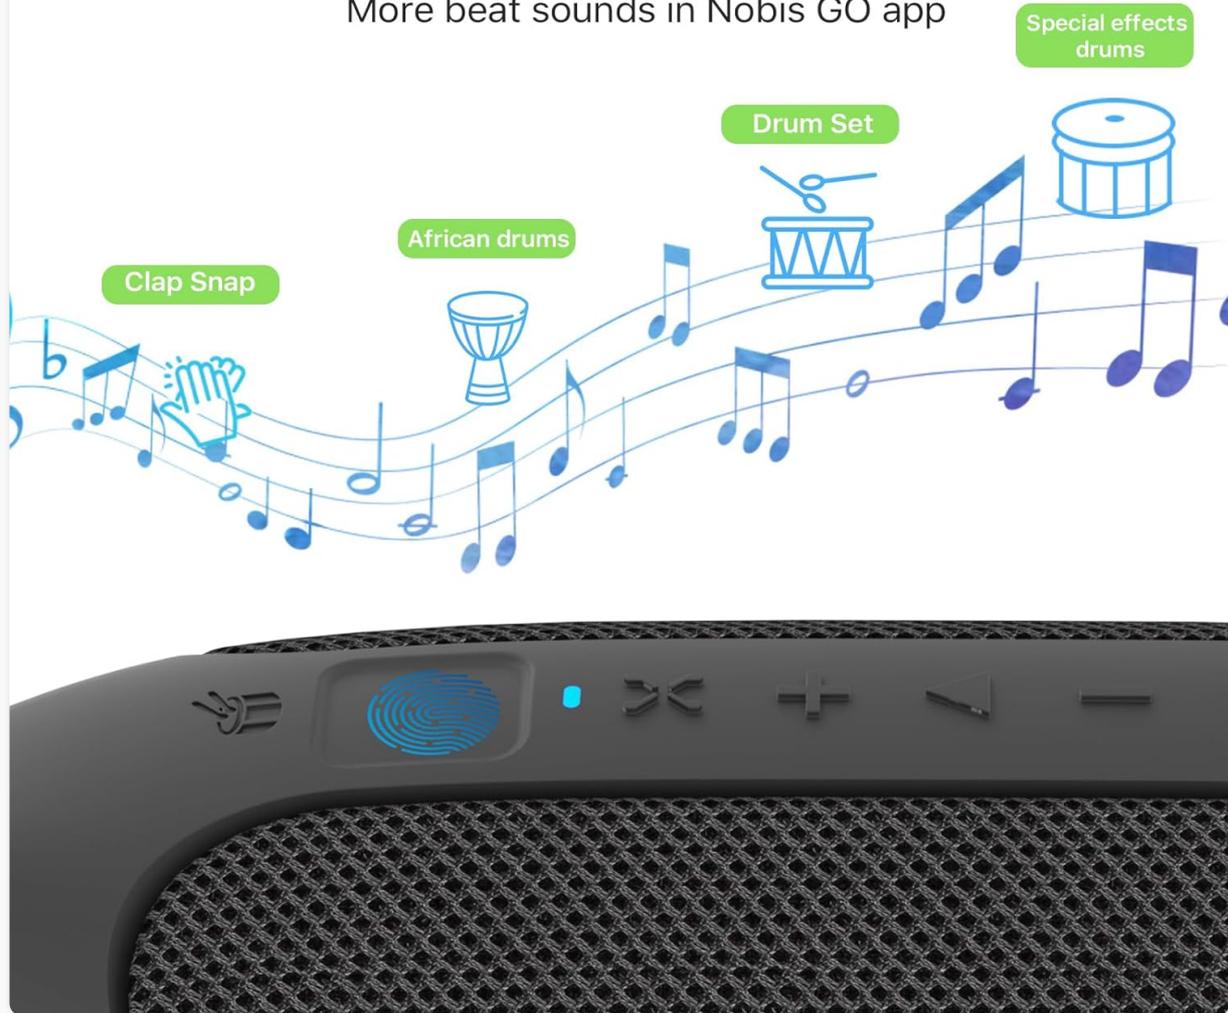

Visual representation of the various beat sounds available in Beat Mode, including Clap Snap, African drums, and Drum Set.

- **Activating/Deactivating Beat Mode:** Press the Beat button (Ⓢ). The beat indicator will show a solid color when active. When off, button press sounds are muted.
- **Switching Beat Sounds:** While Beat Mode is active, press the Beat button (Ⓢ) to cycle through different beat sounds (Sound 1 to Sound 5).
- **Triggering Beat Sounds:** Tap the Beat touch key (Ⓢ) to play the selected beat sound.
- **Beat Mode Switching:** Press and hold the Beat button (Ⓢ) for 1 second to switch between different Beat Modes (Mode 1, Mode 2, Mode 3).

20 Instrument Sounds On-the-Go Beat Mode

The Nobis GO App puts 20 unique instrument sounds at your fingertips, allowing you to customize your audio experience. Moreover, you can also use effortlessly through the app, with just a tap on your mobile screen.



Detailed instructions for controlling Beat Mode, including activating, switching sounds, and changing modes.

Stereo Pairing (TWS)

For an enhanced audio experience, you can pair two NOBIS Clip N1 speakers together to create a true wireless stereo (TWS) system.



Two NOBIS Clip N1 speakers set up for stereo pairing, providing an immersive sound experience.


1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Bluetooth button (ⓑ) for 3 seconds until you hear a prompt indicating TWS pairing mode.
3. The primary speaker will automatically search for the secondary speaker.
4. Once connected, you will hear a confirmation sound, and the Bluetooth indicators on both speakers will synchronize.
5. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

App Control (NOBIS GO App)

Enhance your experience with the NOBIS GO app, available for smartphones. The app allows for custom EQ settings and access to additional instrument sounds for Beat Mode.



The NOBIS GO app interface, showcasing 20 unique instrument sounds for the on-the-go Beat Mode.

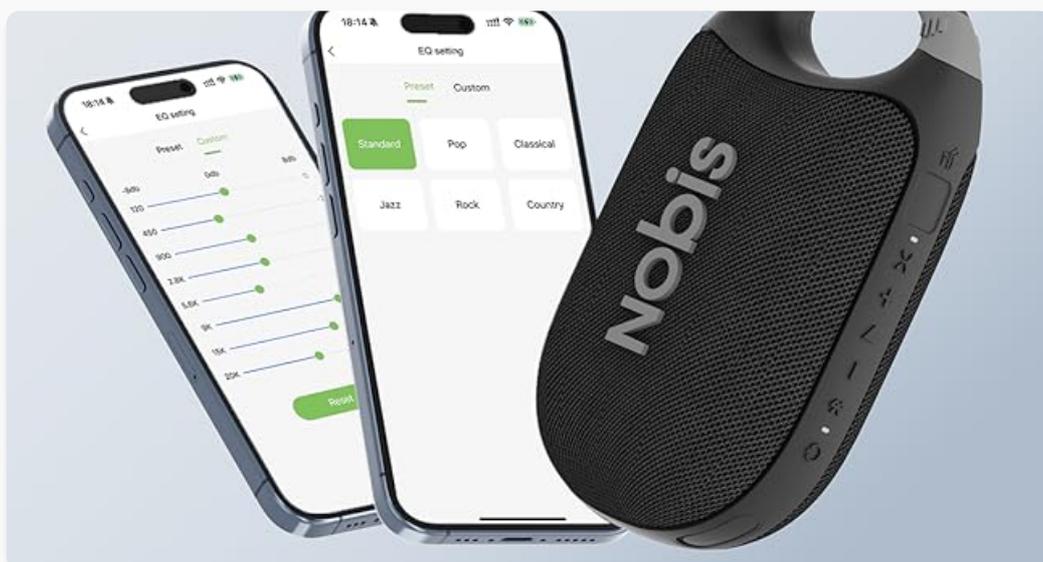

The NOBIS GO app's EQ setting screen, offering both preset and custom equalization options for personalized audio.

- Download the "NOBIS GO" app from your device's app store.
- Ensure your speaker is connected via Bluetooth to your smartphone.

- Open the app and follow the on-screen instructions to connect to your speaker.
- Within the app, you can:
 - Access 20 unique instrument sounds for Beat Mode.
 - Adjust EQ settings with 6 customizable modes (Standard, Pop, Classical, Jazz, Rock, Country) or create a custom profile.
 - Set automatic shutdown timers.

MAINTENANCE

To ensure the longevity and optimal performance of your NOBIS Clip N1 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to wipe the speaker's surface. Do not use harsh chemicals or abrasive cleaners.
- **Water Exposure:** While IP68 rated, always ensure the charging port cover is securely closed before exposing the speaker to water. After exposure to chlorinated or saltwater, rinse the speaker with fresh water and allow it to dry completely before charging.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the speaker frequently. If storing for an extended period, charge it to about 50% every few months.
- **Avoid Impacts:** Despite its shockproof design, avoid dropping the speaker or subjecting it to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not held long enough.	Charge the speaker fully; Press and hold the Power button for 2 seconds.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Device Bluetooth off; Speaker too far; Already connected to another device.	Press Bluetooth button to enter pairing mode; Enable Bluetooth on your device; Move speaker closer (within 10m); Disconnect from other devices.
No sound or low volume.	Volume too low on speaker/device; Speaker not connected; Audio source paused.	Increase volume on both speaker and device; Ensure speaker is paired; Check audio source playback.
Cannot connect two speakers for Stereo Pairing.	Speakers already connected to other devices; Incorrect pairing procedure.	Ensure both speakers are disconnected from other devices; Follow TWS pairing instructions carefully.
Beat Mode not working.	Beat Mode not activated; App not connected.	Press the Beat button to activate; Ensure the NOBIS GO app is connected and updated.

SPECIFICATIONS

Feature	Specification
Model Name	N6301 Clip N1 Speaker
Dimensions (D x W x H)	5.43" x 3.17" x 2.07" (13.79cm x 8.05cm x 5.26cm)
Item Weight	250.7 Grams (8.8 ounces)
Material	Plastic
Connectivity Technology	Bluetooth 5.3
Wireless Range	10 Meters (33 feet)
Water Resistance Level	IP68 (Waterproof & Dustproof)
Battery Life	Up to 24 Hours
Battery Capacity	1800 Milliamp Hours
Charging Time	3.5 Hours
Speaker Maximum Output Power	8 Watts
Frequency Response	20 KHz
Signal-to-Noise Ratio	90 dB
Audio Output Mode	Mono (Stereo with TWS pairing)
Control Method	Button, App

WARRANTY AND SUPPORT

NOBIS offers an after-sales commitment for your Clip N1 Portable Bluetooth Speaker.

- **Warranty:** The product comes with a limited warranty. Please refer to the specific terms and conditions provided at the time of purchase or on the official NOBIS website for full details.
- **Customer Support:** For any inquiries, technical assistance, or warranty claims, please reach out to NOBIS customer support. We commit to responding to your emails within 12 hours of receipt.
- **Money-Back/Replacement:** For up to two years from purchase, you may be eligible for a money-back possibility under specific conditions or a replacement.

For further assistance, please visit the official NOBIS website or contact their customer service directly.