



Manuals.plus /

› Womanizer /

› Womanizer Advent Calendar 2024 - Instruction Manual

Womanizer 24 Day 2024

Womanizer Advent Calendar 2024 - Instruction Manual

Model: 24 Day 2024

INTRODUCTION

Welcome to your Womanizer Advent Calendar 2024. This calendar is designed to offer 24 days of exciting discoveries, featuring a curated selection of pleasure products for individuals and couples. This manual provides essential information on how to set up, operate, and maintain the items within your calendar to ensure a safe and enjoyable experience.

PRODUCT OVERVIEW AND CONTENTS

The Womanizer Advent Calendar 2024 contains 24 unique items, offering a diverse range of experiences. The total value of the contents exceeds 335. Key items include the Womanizer Liberty 2 clitoral suction vibrator and the We-Vibe Sync Lite wearable vibrator.



24 surprises à découvrir

Image: A hand reaching to open door number 24 on the red and gold Womanizer Advent Calendar, symbolizing the daily discovery of new items.

SETUP AND PREPARATION

Before using any item from the Advent Calendar, please follow these general guidelines:

1. **Unpack Carefully:** Gently open each day's compartment to reveal the surprise.
2. **Read Individual Instructions:** While this manual provides general guidance, some items may come with their own specific instructions. Always refer to these for detailed usage.
3. **Charge Devices:** For rechargeable electronic devices like the Womanizer Liberty 2 and We-Vibe Sync Lite, ensure they are fully charged before first use. Use the provided charging cables.
4. **Clean Before Use:** Always clean new items, especially those intended for intimate use, with a toy cleaner or mild soap and water before the first use. Refer to the Maintenance section for details.
5. **Lubrication:** For comfortable use of many items, water-based lubricant is recommended. The calendar may include samples or full-sized lubricants.

OPERATING INSTRUCTIONS

This calendar includes a variety of items. Below are general operating instructions for the main electronic devices. For other items, their use is typically intuitive or will be detailed in their individual packaging.

Womanizer Liberty 2



Comprend les jouets Womanizer et We-Vibe les plus vendus

Image: The Womanizer Liberty 2 (black) and We-Vibe Sync Lite (gold/rose gold) are shown, representing two of the key electronic devices included in the calendar.

- **Power On/Off:** Press and hold the power button (usually indicated by a circle or a power symbol) for a few seconds to turn the device on or off.
- **Adjust Intensity:** Use the '+' and '-' buttons to cycle through the 8 intensity levels of Pleasure Air Technology. Start with a low setting and gradually increase to find your preferred sensation.
- **Usage:** Place the stimulation head over the clitoris, ensuring full contact for optimal Pleasure Air sensation.

- **Charging:** When the battery is low, the indicator light will flash. Connect the magnetic charging cable to the charging points on the device and a USB power source.

We-Vibe Sync Lite

- **Power On/Off:** Press and hold the power button to turn on/off.
- **Vibration Modes:** Use the control buttons on the device to cycle through various vibration patterns and intensities.
- **App Control:** For enhanced control and shared experiences, download the We-Vibe App. Connect the Sync Lite via Bluetooth to your smartphone. The app allows for custom patterns, long-distance play, and more.
- **Usage:** The Sync Lite is designed for shared pleasure during intercourse, with one arm positioned internally and the other externally, stimulating both partners. It can also be used for external stimulation.
- **Charging:** Connect the charging cable to the device's charging port and a USB power source.

Always ensure devices are clean and fully charged for the best experience.

MAINTENANCE AND CARE

Proper care extends the life of your pleasure products and ensures hygiene.

- **Cleaning:**
 - For silicone and ABS plastic items (most vibrators and toys), wash thoroughly with warm water and a mild, toy-safe soap or a dedicated toy cleaner before and after each use.
 - Rinse thoroughly and allow to air dry completely before storing.
 - Do not use harsh chemicals, alcohol-based cleaners, or abrasive materials, as these can damage the product.
- **Storage:** Store all items in a clean, dry place, away from direct sunlight and extreme temperatures. Keep them separate from other materials that might react with silicone (e.g., some plastics or rubber).
- **Charging:** Only use the original charging cables provided with electronic devices. Do not overcharge.
- **Lubricants:** Always use water-based lubricants with silicone toys to prevent material degradation. Oil-based lubricants can damage silicone.



Vibromasseurs, bondage, masturbateurs et masseurs

Image: A close-up view of smaller items from the calendar, such as toy wipes and massage oils, emphasizing the importance of proper hygiene and care.

TROUBLESHOOTING

If you encounter any issues with your electronic devices, consider the following:

- **Device Not Turning On:**

- Ensure the device is fully charged. Connect it to the charger and wait for the charging indicator to show it's ready.
- Try pressing and holding the power button for a longer duration (5-10 seconds).

- **Weak Vibrations/Suction:**

- Check battery level and recharge if necessary.
- Ensure the device is clean and free from debris that might obstruct the mechanism.

- **Charging Issues:**

- Verify that the charging cable is correctly connected to both the device and the power source.
 - Try a different USB port or power adapter.
 - Ensure the charging contacts on the device and cable are clean and dry.
- **App Connectivity (We-Vibe Sync Lite):**
 - Ensure Bluetooth is enabled on your smartphone.
 - Make sure the We-Vibe Sync Lite is turned on and within range.
 - Try restarting both the device and the app.

If problems persist, please refer to the manufacturer's website or contact customer support.

SPECIFICATIONS

Feature	Detail
Product Model Number	24 Day 2024
Brand	Womanizer
Product Dimensions (L x W x H)	4.3 x 2.8 x 1.4 cm (for calendar packaging)
Item Weight	2250 Grams
Battery Requirement	1 Lithium-ion battery (for electronic devices)
Color	Red (Calendar)
ASIN	B0DB5PCV1M

WARRANTY AND SUPPORT

For specific warranty information regarding individual products within the Advent Calendar, please refer to the packaging or documentation provided with each item. Womanizer products typically come with a manufacturer's warranty covering defects in materials and workmanship.

For customer support, product inquiries, or warranty claims, please visit the official Womanizer website or contact their customer service directly.

Official Website: www.womanizer.com