Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > FLEXISPOT /
- > FLEXISPOT 140x60cm Electric Standing Desk User Manual

FLEXISPOT 140x60cm Electric Standing Desk

FLEXISPOT Electric Standing Desk 140x60cm User Manual

Model: B0DB5QVSPJ

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FLEXISPOT 140x60cm Electric Standing Desk. Please read this manual thoroughly before use to ensure proper function and safety.



Image: FLEXISPOT 140x60cm Electric Standing Desk, showcasing its design and accessories.

SAFETY INFORMATION

Attention: Assembly is required. Follow all assembly instructions carefully to ensure safe operation and prevent injury. It is recommended to have assistance during assembly due to the weight of some components.

The intelligent anti-collision system detects obstacles and automatically reverses direction, enhancing safety for children and pets. Ensure the area around the desk is clear during height adjustments.

SETUP AND ASSEMBLY

The desk is designed for straightforward assembly. The package includes all necessary tools, including a screwdriver, and a pictorial instruction manual to facilitate the process. Assembly typically takes approximately 1 hour.

Important: Carefully read the assembly instructions provided in the box, paying close attention to details regarding proper alignment to prevent the desk from tilting after assembly.

Included Accessories:

- 2 x Side Hooks: For hanging headphones, bags, or other items.
- 1 x Cup Holder: For convenient placement of beverages.
- 1 x Under-desk Cable Organizer: To manage and conceal cables.



Image: Integrated accessories including side hooks and an under-desk cable organizer.

OPERATING INSTRUCTIONS

Height Adjustment:

The desk height is electrically adjustable between 73.5 cm (minimum) and 118 cm (maximum). This allows for comfortable transitions between sitting and standing positions, promoting better posture and comfort during work.



Image: Illustration of the desk's height adjustment range.

Smart Control Panel:

The desk is controlled via a user-friendly panel with 6 buttons. It features a clear LED display and allows you to save up to 4 preferred height settings for quick access.

- Up/Down Buttons: Use these to manually adjust the desk height.
- Memory Presets (1, 2, 3, 4): To save a height, adjust the desk to the desired level, then press and hold one of

the numbered memory buttons until the display confirms the setting is saved. To recall a saved height, simply press the corresponding numbered button.



Image: Detailed view of the smart control panel for height adjustment and memory presets.

MAINTENANCE

To ensure the longevity and optimal performance of your FLEXISPOT Electric Standing Desk, follow these general maintenance guidelines:

- Cleaning: Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cable Management:** Regularly check the cable organizer to ensure cables are neatly arranged and not pinched or damaged.
- **Motor and Frame:** Periodically inspect the motor and frame for any loose screws or components. Tighten as necessary. Do not attempt to lubricate internal motor parts.
- Weight Capacity: Do not exceed the maximum load capacity of 70 kg to prevent damage to the motor and frame.

TROUBLESHOOTING

If you encounter any issues with your FLEXISPOT Electric Standing Desk, refer to the following common troubleshooting steps:

• Desk Not Responding:

- Check if the power cable is securely connected to both the desk and the power outlet.
- Ensure the power outlet is functional.

• Continuous Resetting / "Rst" Error:

If the desk frequently displays "Rst" or requires continuous resetting, perform a full reset:

- 1. Lower the desk to its absolute lowest position.
- 2. Press and hold the "Down" button on the control panel.
- 3. Continue holding the button until the "Rst" message disappears from the LED display and the desk makes a slight movement, indicating the reset is complete.

• Uneven Height Adjustment:

- Ensure the desk is placed on a level surface.
- $\circ~$ Check for any obstructions under the desk that might impede movement.
- Perform a reset as described above.

• Unusual Noise During Operation:

The motor operates quietly (below 50 dB). If you hear unusual or loud noises:

- Ensure no objects are interfering with the lifting columns.
- Verify that all assembly screws are tightened correctly.

If these steps do not resolve the issue, please contact FLEXISPOT customer support for further assistance.

SPECIFICATIONS

Brand	FLEXISPOT
Model	Electric Standing Desk 140x60cm
Tabletop Dimensions	140 cm (Length) x 60 cm (Width)
Height Adjustment Range	73.5 cm - 118 cm
Load Capacity	Up to 70 kg
Material	Industrial-grade steel frame, Wood tabletop
Noise Level	<50 dB
Standby Power Consumption	<0.5 W
Control Panel	6 buttons, LED display, 4 memory presets
Safety Features	Intelligent anti-collision system
Certifications	CE, BIFMA, ROHS



Image: Key specifications and dimensions of the FLEXISPOT Electric Standing Desk.

WARRANTY AND SUPPORT

FLEXISPOT provides the following warranty for this product:

Frame: 5-year warrantyMotor: 3-year warranty

Additionally, lifetime technical support is available for your FLEXISPOT Electric Standing Desk. For warranty claims, technical assistance, or any product-related inquiries, please contact FLEXISPOT customer service through their official website or the retailer where the product was purchased.

