

XCWIE Large Ceiling Fan

XCWIE 60 Inch Ceiling Fan with Light and Remote Control User Manual

Model: Large Ceiling Fan

1. INTRODUCTION

Thank you for purchasing the XCWIE 60 Inch Ceiling Fan with Light and Remote Control. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before beginning installation and retain them for future reference. This ceiling fan is designed for both indoor and outdoor (covered patio) use, featuring a quiet DC motor, reversible airflow, integrated LED lighting with adjustable color temperature, and convenient remote control operation.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Read all instructions and safety information carefully before installing your fan and save these instructions.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- Before installation, disconnect power by turning off the circuit breakers at the main fuse box.
- The fan must be mounted to a ceiling joist or support structure capable of supporting a minimum of 35 lbs (15.9 kg).
- Ensure the fan blades are at least 7 feet (2.1 meters) from the floor.
- Do not operate the fan with damaged blades or any other damaged components.
- Avoid placing objects in the path of the fan blades.
- Do not use the fan in areas with high humidity or where it may be directly exposed to water. This fan is damp-rated for covered outdoor areas.

3. PACKAGE CONTENTS

Carefully unpack your fan and check the contents. You should have the following items:

- 1x DC Motor Assembly
- 5x Solid Wood Fan Blades
- 1x Light Kit (integrated LED panel)
- 1x Remote Control
- 3x Downrods (6 inch, 12 inch, 24 inch)
- Mounting Hardware
- Instruction Manual

Note: Batteries for the remote control are not included and must be purchased separately.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your ceiling fan. If you are unsure about any steps, consult a qualified electrician.


4.1 Choosing a Mounting Location

Select a location where the fan blades will have at least 7 feet (2.1 meters) of clearance from the floor and at least 18 inches (45 cm) from any walls or obstructions. The mounting box must be securely fastened to the building structure and capable of supporting the fan's weight.

4.2 Downrod Selection

The fan includes three downrod options: 6 inches, 12 inches, and 24 inches. Choose the appropriate length based on your ceiling height to ensure optimal airflow and safety clearance.

60 Inch Large Ceiling Fan

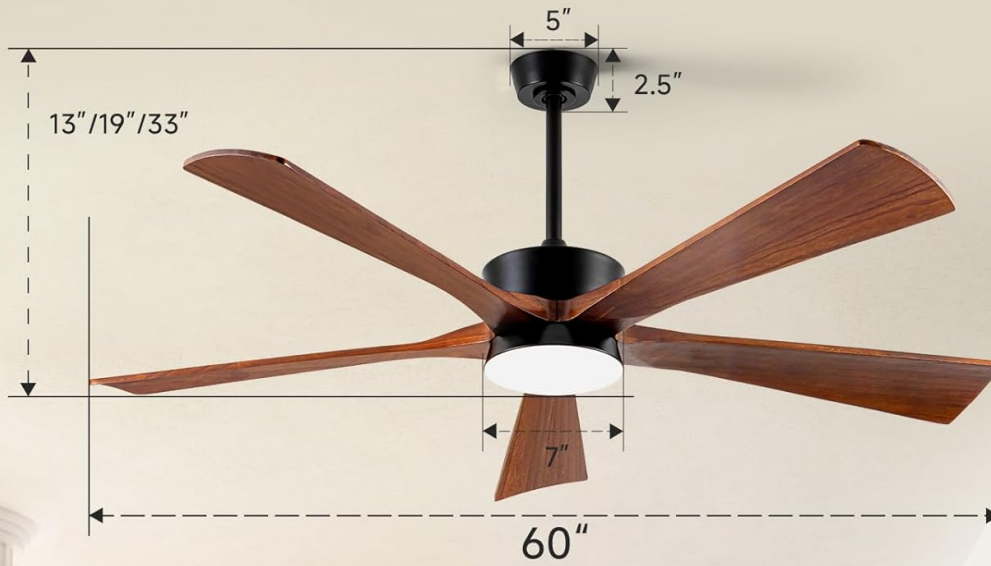

Mounting Option



Flat Ceiling



Sloped Ceiling

Room Size

20ft. x 20ft. to
40ft. x 40ft.



Image 4.1: This image illustrates the dimensions of the 60-inch ceiling fan and provides visual guidance for mounting on both flat and sloped ceilings. It shows the fan's overall diameter, the length of the downrod, and the acceptable angle for sloped ceiling installation (up to 20 degrees).

4.3 Mounting Options

This fan supports both flat ceiling and sloped ceiling installations (up to 20 degrees).



Image 4.2: This diagram details the dual-mount options for the XCWIIE ceiling fan, showing how it can be installed on both flat and sloped ceilings. It also highlights the included downrod lengths (6", 12", 24") and the fan's overall dimensions.

4.4 General Installation Steps (Summary)

1. **Turn off Power:** Ensure power is disconnected at the circuit breaker.
2. **Install Mounting Bracket:** Secure the mounting bracket to the ceiling junction box.
3. **Assemble Downrod and Motor:** Attach the chosen downrod to the motor assembly.
4. **Hang Fan:** Carefully lift and hang the fan assembly onto the mounting bracket.
5. **Wire Connections:** Connect the electrical wires according to the wiring diagram provided in the full installation guide (not included in this summary).
6. **Attach Blades:** Securely attach the five solid wood fan blades to the motor housing.
7. **Install Light Kit:** Connect and install the integrated LED light kit.
8. **Test Operation:** Restore power and test the fan and light functions using the remote control.

5. OPERATING INSTRUCTIONS

Your XCWIIE ceiling fan is operated using the included remote control. Ensure batteries are installed in the remote control before use.



Image 5.1: This image displays the remote control and its various functions, including light control (3 CCT dimmable), 6 fan speeds, 1/4/8 hour timing, energy-saving mode, reversible function, quiet DC motor, memory function, and low noise operation.

5.1 Remote Control Functions

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed Control:** Use the speed buttons (1-6) to adjust the fan's rotation speed. There are 6 distinct speed settings.
- **Light On/Off:** Press the light button to toggle the light on or off.
- **Light Color Temperature (CCT) Adjustment:** Cycle through 3000K (Warm White), 4000K (Natural White), and 5000K (Cool White) settings.
- **Light Dimming:** Adjust the brightness of the LED light from 10% to 100%.
- **Timer Function:** Set the fan to turn off automatically after 1, 4, or 8 hours.
- **Reversible Function (Summer/Winter Mode):** Press the reverse button to change the direction of blade rotation.
- **Memory Function:** The fan will recall your last brightness and color temperature settings after being

turned off and on.



Handmade Solid Wood Blades


Using natural solid material, every leaf is uniquely distinctive refusing industrialized production in home furnishing.

Image 5.2: This image demonstrates the three selectable color temperatures (3000K Warm Light, 4000K Natural Light, 5000K Cool Light) and the dimmable range from 5% to 100% for the integrated LED light.

5.2 Summer and Winter Modes

The reversible DC motor allows for year-round comfort:

- **Summer Mode (Downward Airflow):** Blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode (Upward Airflow):** Blades rotate clockwise, drawing air upwards to redistribute warm air trapped near the ceiling, helping to balance room heating.

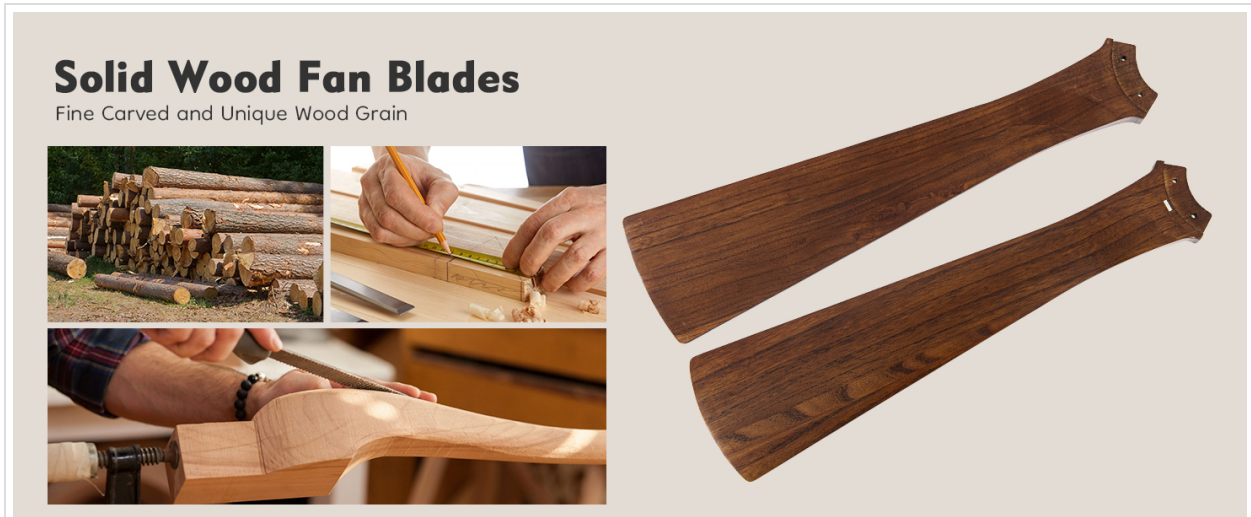

Solid Wood Fan Blades

Fine Carved and Unique Wood Grain

Image 5.3: This diagram visually explains the reversible airflow feature, showing how the fan creates strong rapid cooling in summer with downward airflow and helps balance room heating in winter with upward airflow.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Periodically wipe the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Tighten Fasteners:** Check all screws and fasteners annually to ensure they are secure.
- **Blade Balance:** If the fan wobbles, ensure all blades are securely attached and consider using a blade balancing kit (not included) if necessary.

- **Light Kit:** The integrated LED light source is designed for long life and typically does not require replacement.

Always disconnect power to the fan before performing any cleaning or maintenance.

7. TROUBLESHOOTING

Refer to the following common issues and solutions before contacting customer support.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control batteries are dead.	Check circuit breaker; Ensure all wire connections are secure; Replace remote control batteries (not included).
Light does not work	Loose wire connection to light kit; Light kit malfunction.	Check light kit wiring; Contact customer support if issue persists.
Fan wobbles	Loose blades or mounting hardware; Unbalanced blades.	Ensure all blade screws and mounting screws are tight; Use a blade balancing kit if needed.
Remote control not responding	Dead batteries; Remote not paired.	Replace batteries; Refer to the full manual for remote pairing instructions.
Fan is noisy	Loose screws; Motor issue.	Check and tighten all screws; The DC motor is designed for quiet operation (below 30dB). If noise is excessive, contact support.

Frequently Asked Questions (FAQs)

- **Are batteries included for the remote control?**
No, the package does not contain batteries. Remote control batteries must be purchased separately.
- **What downrod sizes are included?**
The package includes 6-inch, 12-inch, and 24-inch downrods for your choice.
- **What is the memory function?**
The fan has a memory function that recalls your last brightness and color temperature settings. The next time you turn on the fan, it will resume these settings without needing to be reset.

8. SPECIFICATIONS

Feature	Detail
Brand	XCWIEE
Model Name	Large Ceiling Fan
Size	60 Inch
Color	5 Blades Walnut Ceiling Fan
Electric Fan Design	Ceiling Fan

Feature	Detail
Power Source	DC Motor
Style	Modern
Product Dimensions	60"D x 60"W x 20"H (with standard downrod)
Room Type	Living rooms, kitchens, porches, courtyards, child room, dining room
Special Feature	Remote Controlled, Timer, Reversible, Dimmable LED
Recommended Uses	Air Circulation, Cooling
Finish Type	Powder Coated
Speed Settings	6 RPM (6 levels of speed)
Voltage	12 Volts (DC)
Switch Type	Remote Control
Included Components	Light Kit, 1* DC Motor, Remote Control, 3 down rods (6"/12"/24"), 5 Blades
Indoor/Outdoor Usage	Indoor, Outdoor (Damp Rated)
Type of Bulb	LED (3000K-4000K-5000K, Dimmable)
Item Weight	23 pounds
Efficiency	High Efficiency (DC Motor)

9. WARRANTY AND SUPPORT

XCWIIE is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this document, if you encounter any installation issues or require after-sales support, please contact our professional after-sales service team at any time. We will endeavor to resolve your issue within 24 hours.

For further assistance, please refer to the contact information provided with your purchase or visit the official XCWIIE store online.