

[Manuals.plus](#) /

› [KONSIVY](#) /

› KONSIVY 4K 56MP Video Camera Camcorder User Manual

KONSIVY KSV-UHD-K5

KONSIVY 4K 56MP Video Camera Camcorder User Manual

Model: KSV-UHD-K5

INTRODUCTION

This user manual provides comprehensive instructions for the KONSIVY 4K 56MP Video Camera Camcorder (Model: KSV-UHD-K5). It covers product features, setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the camcorder.



Figure 1: KONSIVY 4K 56MP Video Camera Camcorder and accessories.

WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- 1 x KONSIVY Camcorder
- 2 x Rechargeable Batteries
- 1 x 2.4G Remote Controller
- 1 x USB Cable
- 1 x HD Cable
- 1 x 32GB SD Card

PRODUCT OVERVIEW AND KEY FEATURES

The KONSIVY 4K 56MP Video Camera Camcorder is designed for capturing high-quality videos and photos with ease. Its advanced features make it suitable for various recording needs.

- **High Resolution Capture:** Records videos at 4K 30FPS/1080P 60FPS and still photos at 56MP resolution.

- **16X Digital Zoom:** Allows for smooth zooming in and out to capture distant subjects.
- **IR Night Vision:** Enables shooting in low light conditions, producing black and white images.
- **2.4G Remote Control:** Provides 360° wireless control from up to 32 feet away.
- **WiFi Connectivity:** Connects to your smartphone via a dedicated app for viewing and sharing content.
- **Webcam Functionality:** Can be used as a 1080P/30FPS webcam for live streaming.
- **HD Output:** Supports viewing recorded videos directly on an HD TV.
- **Versatile Recording Modes:** Includes time lapse, slow motion, continuous shooting, and recording while charging.
- **Hot Shoe Interface:** For connecting external accessories like microphones (not included).

4K/30FPS 56MP Camcorder

Exclusive image processing technology makes it clearer than other 4K camcorders



4K



56MP



Figure 2: Visual comparison of 4K video and 56MP photo resolution capabilities.



4K Video Camera



Figure 3: Additional features such as anti-shake, continuous shooting, and face detection.

SETUP

1. Charging the Batteries

The camcorder comes with two rechargeable batteries. Before first use, fully charge both batteries. Insert a battery into the camcorder and connect the camcorder to a power source using the provided USB cable. The charging indicator will show the charging status.

2. Inserting the SD Card

Locate the SD card slot, typically on the side or bottom of the camcorder. Insert the included 32GB SD card with the metal contacts facing down until it clicks into place. Ensure the card is inserted correctly to avoid damage.

3. Powering On/Off

Press and hold the Power button (usually located near the display or on top) for a few seconds to turn the camcorder on or off. The display screen will light up when powered on.

OPERATING INSTRUCTIONS

Basic Recording


- **Recording Video:** In video mode, press the Record button (usually a red circle) to start recording. Press it again to stop.
- **Taking Photos:** Switch to photo mode (if applicable) and press the Shutter button to capture a still image.

16X Digital Zoom

Use the zoom lever or buttons (often marked 'W' for Wide and 'T' for Telephoto) to adjust the digital zoom. Slide or press

'T' to zoom in and 'W' to zoom out. Note that digital zoom may reduce image quality compared to optical zoom.

Smooth 16X Digital Zoom

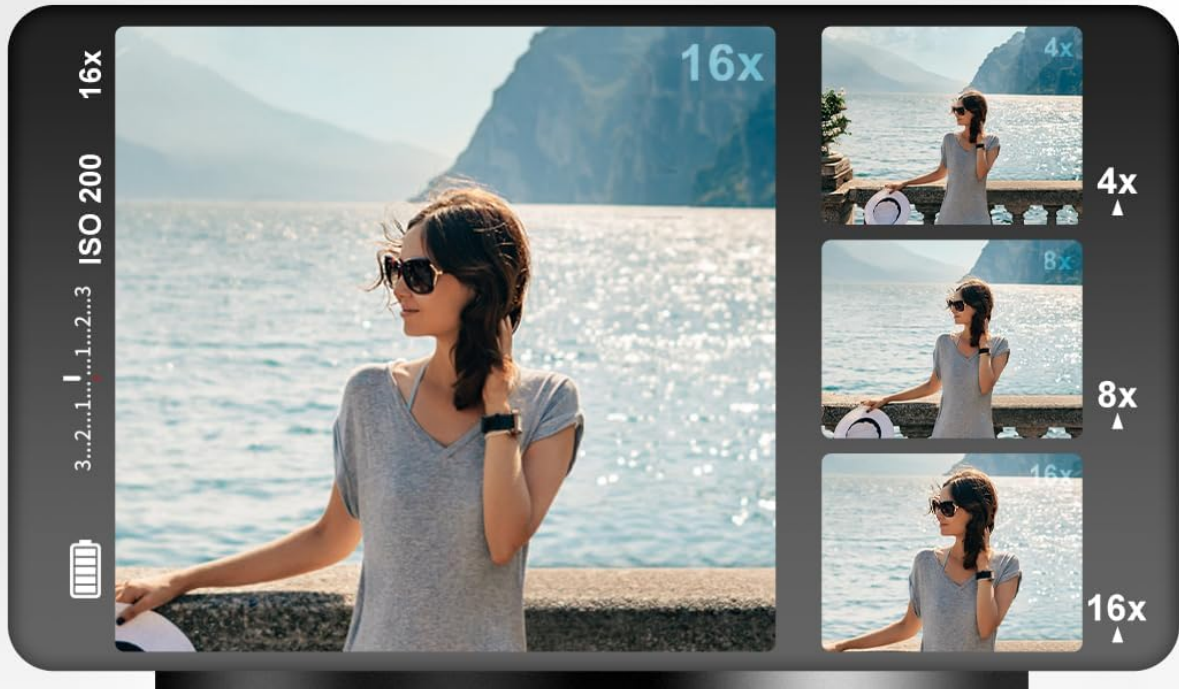

IR Night Vision



Figure 4: How to use the 16X digital zoom and activate IR night vision.

IR Night Vision

To activate IR Night Vision, navigate through the camcorder's menu settings. Once enabled, the camcorder will record in black and white in low-light or no-light conditions using infrared light.

2.4G Remote Control

The included 2.4G wireless remote control allows you to operate the camcorder from a distance (up to 32 feet) without needing direct line-of-sight. Ensure the remote's batteries (2 AAA batteries, not included) are installed. Use the buttons on the remote to start/stop recording, take photos, and navigate menus.

WiFi Connection

Download the designated app (refer to the camcorder's on-screen instructions or included quick start guide for app name) on your smartphone. Enable WiFi on the camcorder and connect your phone to the camcorder's WiFi network (SSID and password will be displayed on the camcorder screen). Once connected, you can view live footage, control recording, and transfer files to your phone.

2.4G Remote Control



WiFi Connection



Figure 5: Instructions for using the 2.4G remote control and establishing a WiFi connection.

Webcam Functionality

To use the camcorder as a webcam, connect it to your computer using the provided USB cable. On the camcorder's screen, select "PC Camera" mode. Your computer should then recognize the camcorder as a webcam, suitable for video calls or live streaming at 1080P/30FPS.

HD Output to TV

Connect the camcorder to an HD TV using the provided HD cable. Switch your TV's input source to the corresponding HDMI port. You can then view your recorded videos and photos directly on the TV screen.



Figure 6: Demonstrating the camcorder's webcam and HD output capabilities.

Time Lapse and Slow Motion Recording

These special modes can be accessed through the camcorder's menu. Select "Time Lapse" to capture a series of images over time and compile them into a sped-up video. Select "Slow Motion" to record video at a higher frame rate for smooth slow-motion playback.

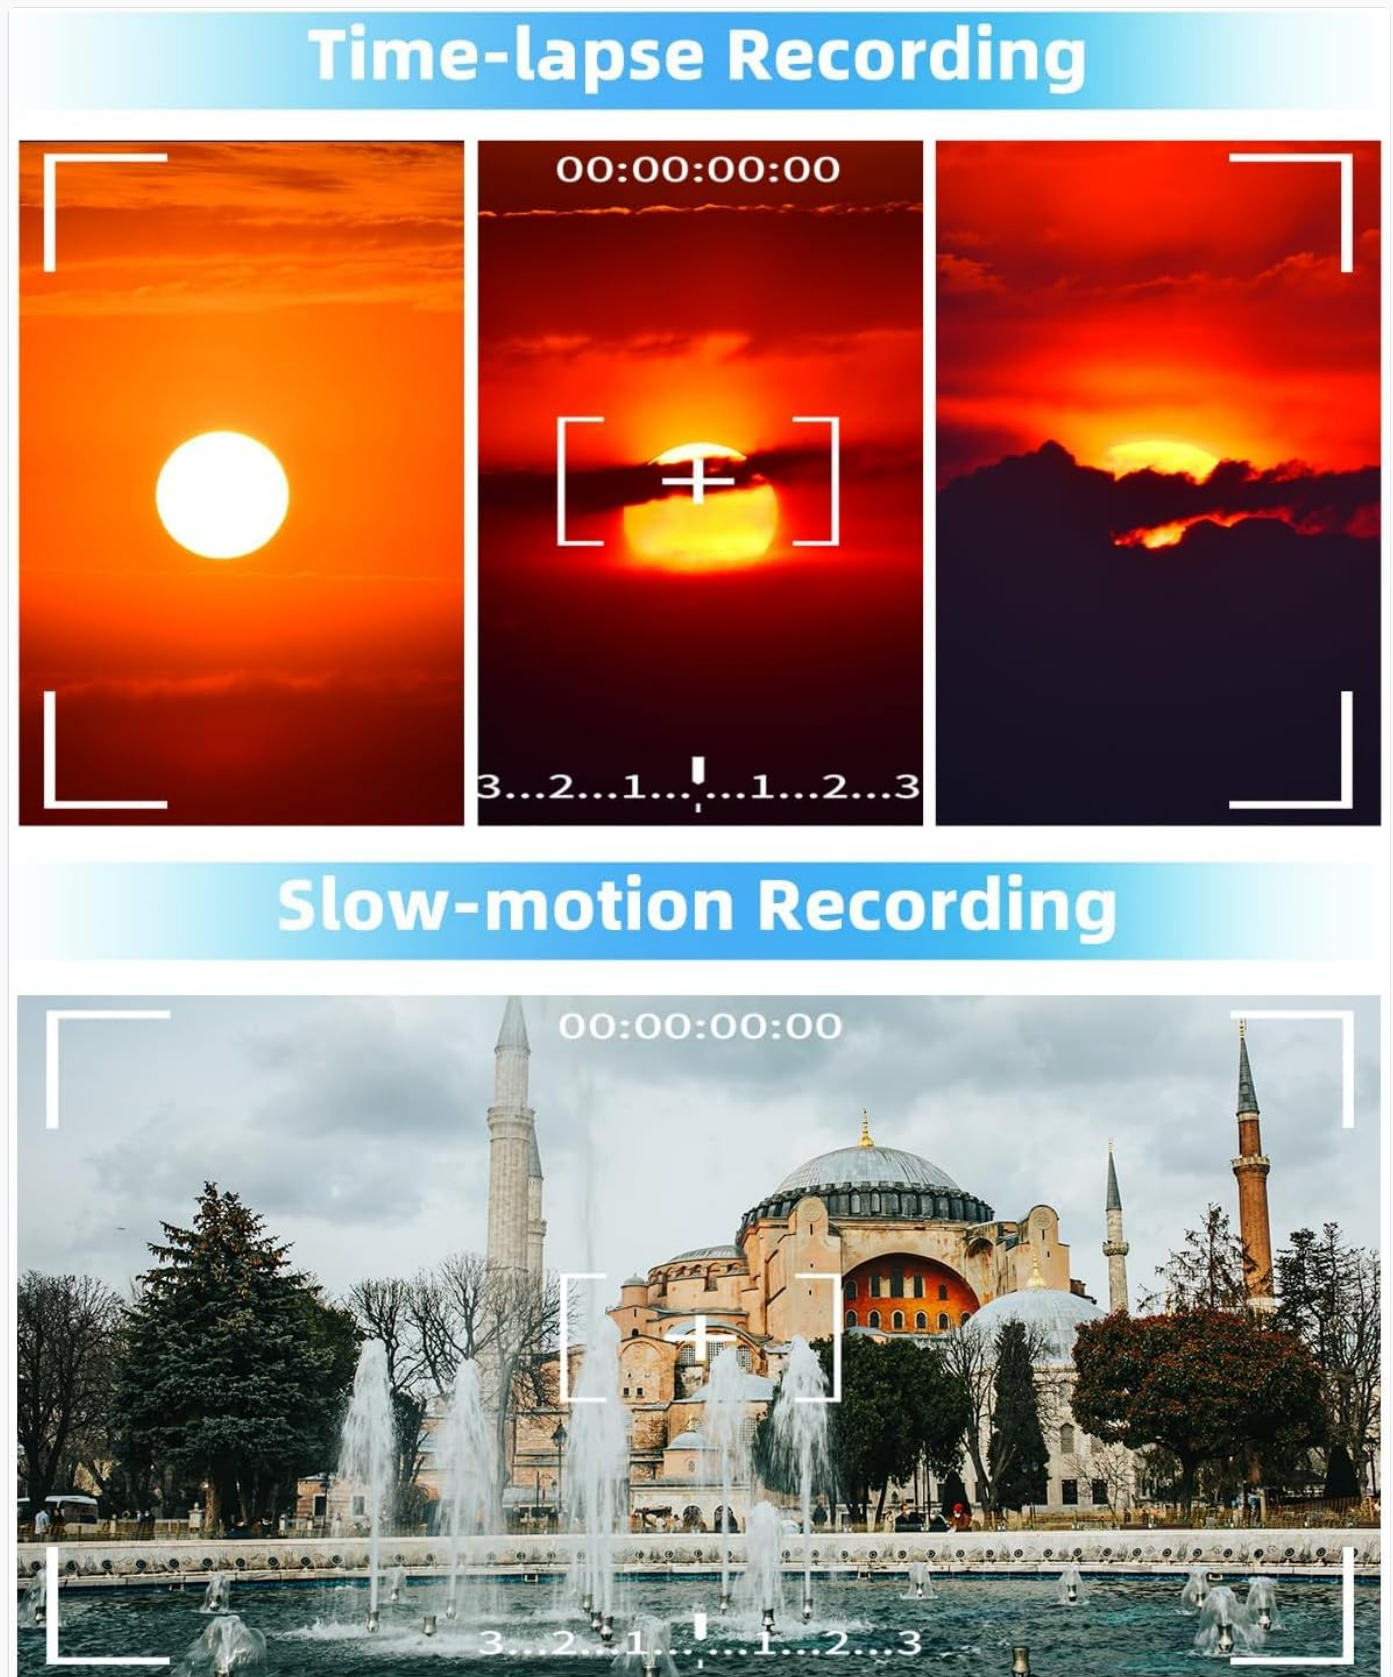


Figure 7: Visual examples of time-lapse and slow-motion recording modes.

- **Cleaning:** Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Do not expose batteries to high temperatures or disassemble them. Charge batteries fully before use and avoid completely draining them to prolong their lifespan.
- **SD Card:** Format the SD card periodically within the camcorder to maintain optimal performance and prevent data corruption. Back up important files before formatting.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camcorder won't turn on.	Battery is dead or not inserted correctly.	Ensure battery is charged and correctly inserted. Try the second battery.
Cannot record video/take photos.	SD card is full, locked, or not inserted.	Check SD card capacity, unlock switch, or reinsert. Format if necessary (after backing up data).
Poor image quality.	Lens is dirty; insufficient lighting; digital zoom used excessively.	Clean the lens. Ensure adequate lighting. Limit digital zoom usage.
Remote control not working.	Remote batteries are dead or not inserted. Out of range.	Replace AAA batteries in the remote. Ensure you are within 32 feet of the camcorder.
WiFi connection issues.	Incorrect password; app not installed; camcorder WiFi not enabled.	Verify password. Download and install the correct app. Ensure camcorder WiFi is active.

SPECIFICATIONS

Feature	Detail
Brand	KONSIVY
Model Number	KSV-UHD-K5
Video Resolution	4K 30FPS, 1080P 60FPS
Photo Resolution	56MP
Digital Zoom	16X
Screen Size	3 Inches (8 cm)
Connectivity	HDMI, USB, Wi-Fi
Special Features	Face Detection, Night Vision, Slow Motion, Time Lapse
Item Weight	10.5 ounces
Product Dimensions	4.96 x 2.24 x 2.28 inches
Batteries	2 C batteries (included)

Feature	Detail
Flash Memory Type	SD Card (32GB included)



Figure 8: Physical dimensions of the camcorder.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official KONSIVY brand store on Amazon:

[Visit the KONSIVY Store on Amazon](#)

If you encounter issues not covered in this manual, please contact KONSIVY customer service for assistance.

OFFICIAL PRODUCT VIDEOS

No official seller videos were found for embedding based on the provided data. Please refer to the product page for any available video content.

© 2024 KONSIVY. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question