



Manuals.plus /

- › ROSIDA /
- › ROSIDA M98A Wireless TV Headphones User Manual

## ROSIDA M98A

# ROSIDA M98A Wireless TV Headphones User Manual

Model: M98A

## 1. INTRODUCTION

---

Thank you for choosing the ROSIDA M98A Wireless TV Headphones. This manual provides detailed instructions for setting up, operating, and maintaining your headphones to ensure an optimal audio experience. These headphones are designed to provide clear, low-latency audio for TV watching, making them ideal for individuals who desire a private listening experience or require enhanced volume without disturbing others.



Image 1.1: ROSIDA M98A Wireless TV Headphones on their charging base.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x ROSIDA M98A Wireless Headphones
- 1 x TV Transmitter Charging Base
- 1 x Type-C Power Cable
- 1 x Optical Audio Cable
- 1 x 3.5mm AUX Audio Cable
- 1 x RCA Audio Cable Set
- 1 x Power Adapter
- 1 x User Manual

### Package content

- ① Headphone X 1
- ② Transmitter X 1
- ③ TYPE-C power cable x 1
- ④ Optical audio cable X 1
- ⑤ RCA Adapter X1
- ⑥ 3.5mm audio cable X 1
- ⑦ Power Adapter X1



Image 2.1: All components included in the ROSIDA M98A package.

## 3. PRODUCT OVERVIEW

### 3.1. Headphones

- **Power Button & LED Indicator:** Controls power and displays status.
- **TV / Bluetooth Button:** Switches between TV audio mode and Bluetooth mode.
- **Volume - / Previous Track:** Decreases volume or navigates to the previous track in Bluetooth mode.
- **Volume + / Next Track:** Increases volume or navigates to the next track in Bluetooth mode.
- **EQ Button:** Cycles through equalizer modes (TV, Movie, Music).
- **Microphone:** For hands-free calls in Bluetooth mode.
- **USB-C Charging Port:** Alternative charging port for headphones.
- **Charging Contacts:** For charging via the transmitter base.

### 3.2. Transmitter Charging Base

- **Power Input:** Connects to the power adapter.
- **Optical Input from TV:** For digital audio connection.
- **AUX Input from TV:** For analog 3.5mm audio connection.
- **OFF / ON Switch:** Powers the transmitter on or off.
- **Charging Pins:** For charging the headphones when placed on the base.

- **Pairing Button:** Initiates pairing with headphones (usually automatic).
- **LED Indicator Light:** Displays connection and charging status.



Image 3.1: Overview of headphone controls and transmitter base ports.

## 4. SETUP INSTRUCTIONS

The ROSIDA M98A headphones offer multiple ways to connect to your TV. Choose the connection method that best suits your TV's available audio output ports.

### 4.1. Connecting the Transmitter to Your TV

1. **Power the Transmitter:** Connect the Type-C power cable to the transmitter's Power Input port and the other end to the power adapter. Plug the power adapter into a wall outlet. Flip the OFF/ON switch on the transmitter to the 'ON' position.
2. **Choose an Audio Connection Method:**
  - **Optical (Recommended for Digital Audio):** Connect one end of the Optical Audio Cable to the 'Optical Audio Out' port on your TV and the other end to the 'Optical Input' port on the transmitter.
  - **3.5mm AUX:** Connect one end of the 3.5mm AUX Audio Cable to the 'Headphone Out' or 'Audio Out' (3.5mm) port on your TV and the other end to the 'AUX Input' port on the transmitter.
  - **RCA:** Connect the RCA Audio Cable Set to the 'Audio Out' (Red and White) ports on your TV and the other end to the 'AUX Input' port on the transmitter (using the provided RCA to 3.5mm adapter if necessary).
  - **USB Audio:** If your TV supports USB audio output, connect a USB-C cable from your TV's USB port to the transmitter's USB-C port. *Note: USB audio compatibility varies by TV model.*
3. **Configure TV Audio Settings:** Access your TV's audio settings menu. Select the corresponding audio output (e.g., 'Optical Out', 'Headphone', 'External Speakers') for the port you used. For Optical connections, ensure the TV's audio output format is set to 'PCM' or 'Stereo' (not Dolby Digital or DTS), as the transmitter may not support these formats.



Image 4.1: Visual guide for connecting the transmitter to your TV using different audio cables.

## 4.2. Initial Headphone Pairing (TV Mode)

The headphones and transmitter are typically pre-paired from the factory. If they do not connect automatically:

1. Ensure the transmitter is powered on and connected to the TV.
2. Power on the headphones by pressing and holding the Power Button until the LED indicator lights up.
3. The headphones should automatically connect to the transmitter. The LED indicators on both devices will show a stable light when connected.
4. If pairing fails, press the 'Pairing Button' on the transmitter base. Then, on the headphones, press and hold the 'TV/BT' button for 3 seconds to enter pairing mode. The LED indicators will flash during pairing and become solid once connected.

## 5. OPERATING INSTRUCTIONS

### 5.1. Power On/Off

- **Headphones:** Press and hold the Power Button for 3 seconds to turn on or off.
- **Transmitter:** Use the OFF/ON switch on the back of the base.

### 5.2. Volume Control

Adjust the listening volume using the 'Vol+' and 'Vol-' buttons on the right earcup of the headphones. You may also need to adjust your TV's volume output settings.

### 5.3. Switching Between TV and Bluetooth Modes

Press the 'TV/BT' button on the headphones to toggle between receiving audio from the transmitter (TV mode) and connecting to a Bluetooth-enabled device (Bluetooth mode).


### 5.4. Equalizer (EQ) Modes

Press the 'EQ' button on the headphones to cycle through different audio profiles: TV, Movie, and Music. Select the mode that best suits your content.

### 5.5. Using as Bluetooth Headphones

When in Bluetooth mode, the headphones can connect to smartphones, tablets, or other Bluetooth-enabled devices.

Press the 'TV/BT' button to switch to Bluetooth mode. The headphones will enter pairing mode (LED flashes). Search for 'ROSIDA M98A' on your device's Bluetooth settings and connect. In Bluetooth mode, the 'Vol+' and 'Vol-' buttons can also control track navigation (long press).

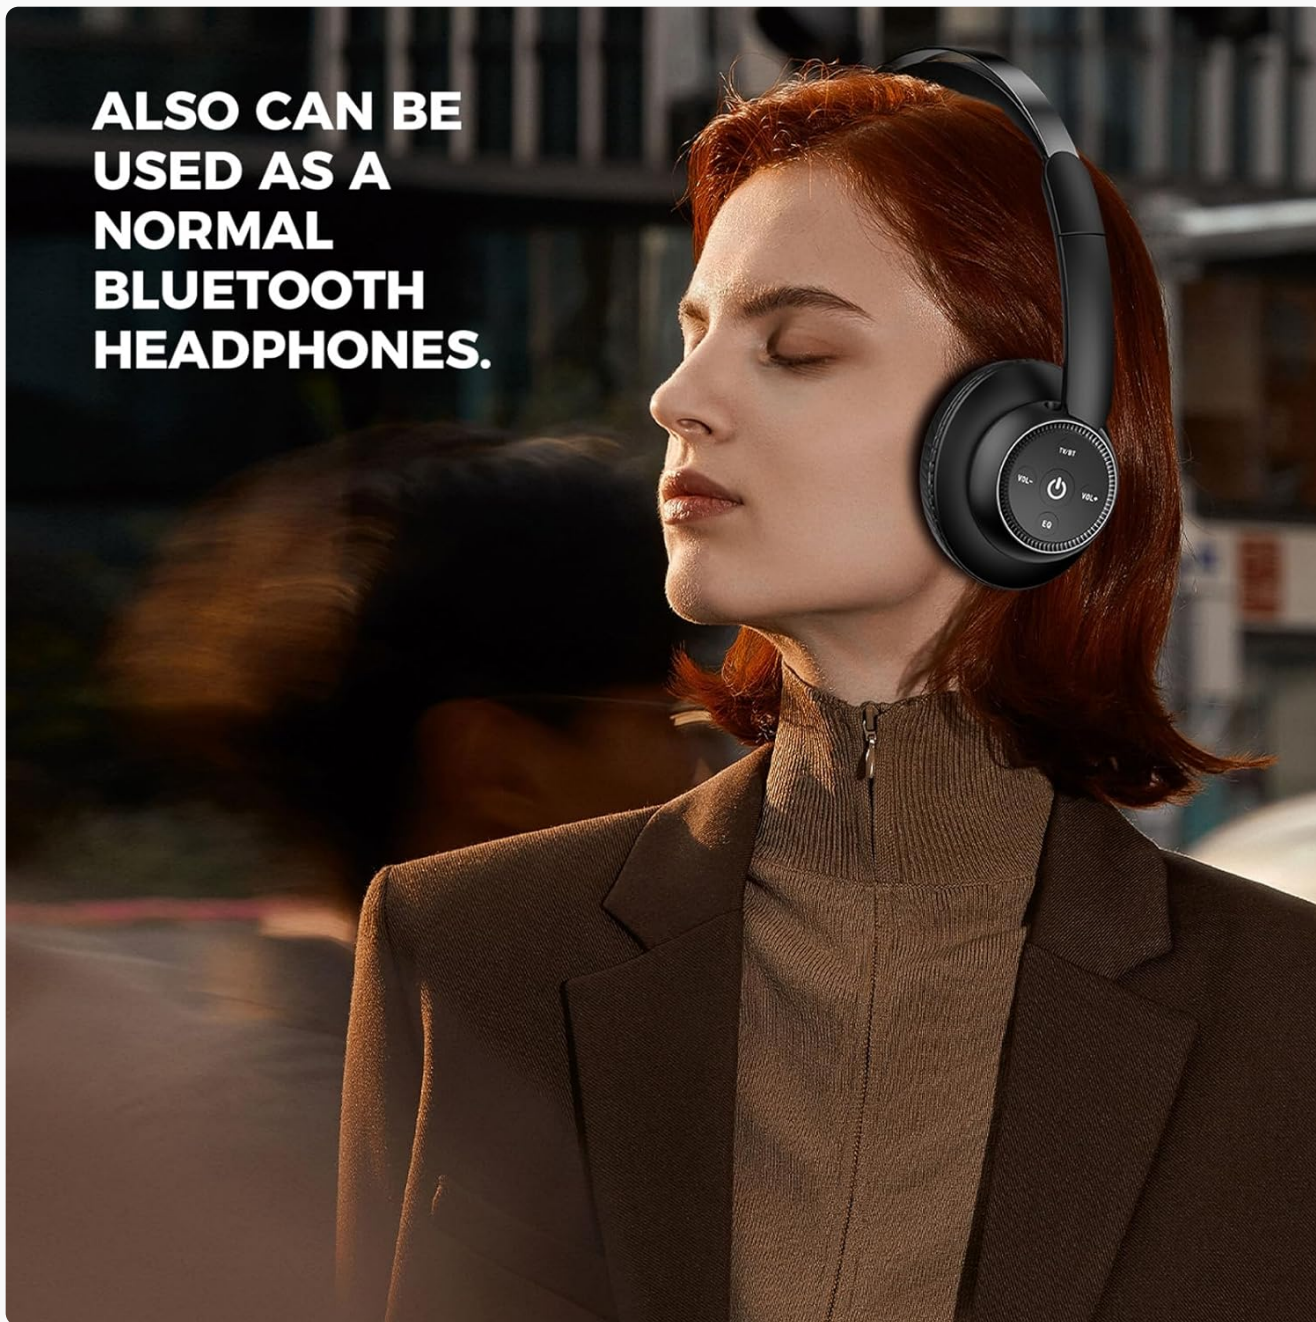

**ALSO CAN BE  
USED AS A  
NORMAL  
BLUETOOTH  
HEADPHONES.**

Image 5.1: The ROSIDA M98A headphones can also function as standard Bluetooth headphones.

## 6. CHARGING

The headphones offer convenient charging via the transmitter base or directly via a USB-C cable.

- **Charging via Transmitter Base:** Simply place the headphones onto the transmitter base. Ensure the charging contacts on the headphones align with the pins on the base. The LED indicator on the base will show charging status.
- **Charging via USB-C Cable:** Connect the Type-C power cable directly to the USB-C Charging Port on the headphones and to a power source.

A full charge provides over 20 hours of listening time. It is recommended to charge the headphones when not in use to ensure they are always ready.

## 7. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the headphones and transmitter. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones and transmitter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** These headphones are **not water resistant**. Avoid exposure to liquids, moisture, and humidity.
- **Battery Care:** For optimal battery life, avoid fully discharging the headphones frequently. Charge them regularly.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No audio from headphones (TV mode)	<ul style="list-style-type: none"> <li>• Transmitter not powered on.</li> <li>• Headphones not powered on or not paired.</li> <li>• Incorrect TV audio output settings.</li> <li>• Loose audio cable connection.</li> <li>• TV audio format incompatible (e.g., Dolby Digital for Optical).</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure transmitter is ON.</li> <li>• Power on headphones and check pairing (refer to Section 4.2).</li> <li>• Verify TV audio output is set correctly (e.g., 'External Speakers', 'PCM').</li> <li>• Check all cable connections are secure.</li> <li>• Set TV audio output to 'PCM' or 'Stereo'.</li> </ul>
Audio delay (lip-sync issues)	Interference or signal degradation.	Ensure headphones are within the 90-meter range of the transmitter. Minimize obstacles between the transmitter and headphones.
Low volume	<ul style="list-style-type: none"> <li>• Headphone volume too low.</li> <li>• TV audio output volume too low.</li> </ul>	<ul style="list-style-type: none"> <li>• Increase volume using 'Vol+' button on headphones.</li> <li>• Increase TV's audio output volume.</li> </ul>
Headphones not charging	<ul style="list-style-type: none"> <li>• Headphones not properly seated on base.</li> <li>• Charging cable/adaptor not connected.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure headphones are correctly placed on the charging base, aligning the pins.</li> <li>• Verify the Type-C power cable and adapter are securely connected to the transmitter and power outlet.</li> </ul>
Cannot connect to Bluetooth device	<ul style="list-style-type: none"> <li>• Headphones not in Bluetooth pairing mode.</li> <li>• Device Bluetooth is off.</li> </ul>	<ul style="list-style-type: none"> <li>• Press 'TV/BT' button to switch to Bluetooth mode; LED should flash.</li> <li>• Ensure Bluetooth is enabled on your device and search for 'ROSIDA M98A'.</li> </ul>

## 9. SPECIFICATIONS

Feature	Specification
Model Name	M98A
Connectivity Technology	RCA, Optical, AUX 3.5mm, USB-C
Wireless Communication	Bluetooth 5.0
Compatible Devices	TVs, Bluetooth-enabled devices
Earpiece Shape	Over Ear
Material	Leather, Sponge
Control Type	Volume Control, Touch
Battery Life	20 Hours
Bluetooth Range	Up to 90 Meters (295 feet)
Frequency Range	20 Hz - 20,000 Hz
Special Feature	Low Latency Audio (<40ms)
Water Resistance Level	Not Water Resistant
Product Dimensions	8.9 x 7.9 x 3.98 inches
Item Weight	0.84 Kilograms (1.85 pounds)

## 10. WARRANTY AND SUPPORT

ROSIDA offers a product warranty and lifetime customer service for the M98A Wireless TV Headphones. If you encounter any issues or have questions regarding your product, please contact ROSIDA customer support through your purchase platform or the official ROSIDA website. When contacting support, please have your order details and product model number (M98A) available for faster assistance.