

- Manuals.plus /
- › Nictemaw /
- › Nictemaw Portable Washing Machine (Model 5577_US_3) - User Manual

Nictemaw 5577_US_3

Nictemaw Portable Washing Machine User Manual

Model: 5577_US_3 | Brand: Nictemaw

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Nictemaw Portable Washing Machine. Please read it thoroughly before using the appliance and retain it for future reference.

The Nictemaw Portable Washing Machine is a 2-in-1 full automatic washer and spin dryer combo, designed for compact living spaces such as apartments, RVs, and dorms. It features a 17.8 lbs (2.4 Cu.ft) capacity, 10 wash programs, and 8 water level selections.



Image: The Nictemaw Portable Washing Machine, illustrating its compact design and intelligent controls for water intake, time, water level, and balance. It also shows its 17.8 lbs capacity for washing and spin drying.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the voltage requirements of the machine.
- Do not operate the machine with a damaged power cord or plug.

- Keep children and pets away from the machine during operation.
- Do not immerse the electrical parts in water.
- Unplug the machine before cleaning or performing any maintenance.
- Ensure the drain pipe is properly secured to prevent water leakage. The height of the drain pipe should be less than 3.93 inches (10 cm) to avoid blocked drainage.

3. WHAT'S IN THE BOX

Upon unpacking, verify that all components are present:

- Nictemaw Portable Washing Machine
- Adapter
- Fill Hose
- User Manual

4. PRODUCT FEATURES

Your Nictemaw Portable Washing Machine is equipped with several features designed for convenience and efficiency:

- **Full-Automatic System:** Combines washing and spin-drying functions in one unit.
- **Large Capacity:** 17.8 lbs (2.4 Cu.ft) honeycomb-shaped inner tub.
- **10 Wash Programs:** Includes options like Normal, Quick, Blanket, Soak, and more.
- **8 Water Level Selections:** Allows for precise water usage based on load size.
- **Drain Pump:** Facilitates easy and quick water drainage.
- **Transparent Top Cover:** Monitor washing conditions without interruption.
- **Automatic Imbalance Adjustment:** Reduces vibration during spinning.
- **Adjustable Leveling Legs:** Ensures stability on uneven surfaces.
- **Child Lock:** Prevents accidental operation.
- **24-Hour Smart Delay Function:** Preset wash start time.
- **Built-in Filter:** Collects lint and debris.
- **High Performance Motor:** Provides stable power and energy efficiency.

6 MAIN REASONS TO CHOOSE



17.8 Lbs Large Capacity



Double Tub Cleaning



Gentle Laundry With Pulsator



Integrated Intelligent Control



20 Minutes Quick Wash



24 Hours Delay Function

Image: Key features of the washing machine, such as 17.8 lbs capacity, double tub cleaning, gentle laundry with pulsator, integrated intelligent control, 20-minute quick wash, and 24-hour delay function.



Image: A diagram highlighting various parts of the washing machine, including the water inlet, high-quality inlet hose, transparent top cover, side handle, built-in filter, stainless steel inner barrel, extended drainage outlet, and adjustable bottom feet.

5. SETUP

Follow these steps to set up your portable washing machine:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Remove any protective materials or shipping bolts.
2. **Placement:** Place the machine on a flat, stable surface. Adjust the bottom feet to ensure it is level and stable.
3. **Water Inlet Connection:** Connect the provided fill hose to the water inlet on the back of the machine and to a suitable faucet. Ensure the connection is secure to prevent leaks. A faucet adapter is included to meet various faucet interfaces.
4. **Drainage Setup:** Position the extended drain hose into a sink or drain. Ensure the drain hose is securely placed and its height is appropriate (less than 3.93 inches) to allow for proper drainage.

5. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: An illustration demonstrating the connection of the washing machine's water inlet hose to a faucet and the drain hose directed into a sink for convenient drainage.

6. OPERATING INSTRUCTIONS

Operating your Nictemaw Portable Washing Machine is straightforward:

1. **Power On:** Press the **Power** button to turn on the machine.
2. **Load Laundry:** Open the top lid and load your clothes into the inner tub. Do not overload the machine.
3. **Add Detergent:** Add the appropriate amount of detergent to the detergent compartment.
4. **Select Water Level:** Press the **Water Level** button to choose from 8 available water levels based on your load size.
5. **Select Program:** Press the **Program** button to select one of the 10 wash programs (e.g., Common, Normal, Quick, Blanket, Soak, Wash, Rinses, Wash and Rinses, Rinses and Spin, Air-dry).
6. **Start Cycle:** Press the **Start/Pause** button to begin the wash cycle. The machine will automatically fill with water and proceed with the selected program.
7. **Child Lock:** To activate the child lock, press and hold the **Water Level** and **Program** buttons simultaneously. Repeat to deactivate.
8. **Delay Start:** Use the 24-hour smart delay function to preset the washing start time.

10 LAUNDRY PROGRAMS

Meet daily needs and make laundry easier!



NORMAL

wash regular clothes easily



QUICK

20 mins quick wash of small clothes



BLANKET

Strong decontamination of bulky clothes



SOAK

soak before washing, more clean



Image: The control panel displaying the 10 available laundry programs, including Normal, Quick, Blanket, and Soak, designed to meet various washing needs.

Innovative LED Button Display

-  **Water Level** 8 optional levels, default level is 6
-  **Program** 01 Common 02 Normal 03 Quick 04 Blanket 05 Air Dry 06 Soak 07 Wash 08 Spin 09 Wash and Rinses 10 Rinses and Spin
-  **Start/Pause** Press "Water Level" and "Program" button together. Operation again can cancel the setting.
-  **Power** Switch on the power button to connect/cut off the power.
-  **Child Lock** Powered on to launch machine, then press again to pause.



Image: A detailed view of the innovative LED button display, explaining the functions for water level selection, program selection, start/pause, power, and child lock.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine:

- **Clean the Inner Tub:** Utilize the 'Tub Clean' cycle option regularly to prevent mold and bacteria buildup.
- **Clean the Filter:** Periodically remove and clean the built-in lint filter to ensure efficient operation and prevent lint from redepositing on clothes.
- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Drain Pipe:** Ensure the drain pipe is clear of obstructions.

Stainless Steel Inner Tub-Self-Cleaning Function

Provides a clean and reliable laundry space!



Image: The stainless steel inner tub, highlighting its self-cleaning function and the built-in filter designed to collect lint and debris, ensuring a clean laundry space.

8. TROUBLESHOOTING

Here are solutions to common issues:

- **Machine not starting:** Ensure the power cord is securely plugged in and the lid is fully closed. Check if a program is selected and the 'Start/Pause' button is pressed.
- **Water not draining completely:** Verify that the drain pipe is not kinked or blocked. Ensure the drain pipe's height is not exceeding 3.93 inches (10 cm) above the machine's base. The machine is equipped with a drain pump for efficient water removal.
- **Excessive vibration during spin:** This machine has an automatic imbalance adjustment function. If vibration is still excessive, redistribute the laundry evenly inside the tub. Ensure the machine is on a level surface and the adjustable feet are properly set.

- **Water inside the tub upon arrival:** This is normal. The manufacturer performs a drainage test before shipping, and residual water may remain in the pipes.

9. SPECIFICATIONS

Feature	Specification
Product Dimensions	18.5"D x 18.7"W x 33.1"H
Brand	Nictemaw
Capacity	2.4 Cubic Feet (17.8 Lbs)
Special Features	Adjustable Leveling Legs, Child Lock, Drum Clean, Time Remaining Display, Vibration Reduction
Access Location	Top Load
Color	Dark Grey
Cycle Options	Cotton, Heavy Duty, Normal, Speed Wash, Tub Clean
Material	Plastic, Stainless Steel
Controls Type	Push Button
Operation Mode	Fully Automatic
Max Rotational Speed	1300 RPM
Number of Standard Cycles	10
Display	LED
Model Number	5577_US_3

10. WARRANTY AND SUPPORT

The Nictemaw Portable Washing Machine comes with a 1-year warranty. For warranty claims, technical support, or service inquiries, please contact Nictemaw customer service. Refer to the contact information provided with your purchase documentation or visit the official Nictemaw website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DB61GZVK>

More documents and user manuals: <https://manuals.plus/>