### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- > Nerf /
- > Nerf Super Soaker Power Drench Water Blaster Instruction Manual

#### **Nerf G1116**

# Nerf Super Soaker Power Drench Water Blaster Instruction Manual

Model: G1116

#### INTRODUCTION

Welcome to the world of high-performance water blasting with your new Nerf Super Soaker Power Drench Water Blaster! This manual provides essential information for the safe and effective use of your blaster, including setup, operation, maintenance, and specifications. Please read it thoroughly before use to ensure optimal performance and enjoyment.



Figure 1: The Nerf Super Soaker Power Drench Water Blaster, including the blaster unit, Easy Fill Station, and hose adapter.

# SAFETY INFORMATION

# **Important Warnings:**

WARNING: Small parts may be generated. Not for children under 3 years.

# **General Safety Guidelines:**

- Do not aim at eyes or face.
- Use only clean tap water in the blaster.
- Adult supervision is recommended during play.
- Ensure the hose connection is secure before pressurizing.
- Do not modify the blaster or its components.

# WHAT'S IN THE BOX

Your Nerf Super Soaker Power Drench Water Blaster package includes the following components:

- 1x Nerf Super Soaker Power Drench Water Blaster
- 1x Easy Fill Station
- 1x Hose Adapter (if needed for your hose type)



Figure 2: All components included in the package.

# **SETUP**

# **Connecting the Easy Fill Station:**

- 1. Locate the Easy Fill Station and the hose adapter (if necessary).
- 2. Attach your garden hose to the Easy Fill Station. If your hose connection does not fit directly, use the provided adapter. Ensure the connection is tight to prevent leaks.



Figure 3: Securely attach your garden hose to the Easy Fill Station.

- 3. Place the Easy Fill Station on a stable, flat surface.
- 4. Ensure your water source (hose) has a minimum static water pressure of 27 psi for optimal performance.

# **OPERATING INSTRUCTIONS**

# Filling and Pressurizing the Blaster:

- 1. With the hose connected to the Easy Fill Station, align the blaster's fill port with the station's nozzle.
- 2. Firmly press the blaster down onto the Easy Fill Station. You will see the water level rise in the blaster's transparent reservoir as it fills and pressurizes.



Figure 4: Press the blaster firmly onto the Easy Fill Station to fill and pressurize.

3. Once the blaster is full and pressurized, lift it off the Easy Fill Station. It is now ready for action.

# **Blasting with Pulse Bursts:**

- 1. Hold the blaster firmly with both hands.
- 2. Aim at your target (avoiding eyes and face).
- 3. Pull the trigger to unleash powerful pulse bursts of water. The blaster is designed to deliver short, strong bursts rather than a continuous stream.



Figure 5: Pull the trigger to activate the powerful pulse burst.



Figure 6: Enjoy dynamic water battles with quick refills.

4. To continue blasting, simply re-attach the blaster to the Easy Fill Station to refill and re-pressurize.

### **M**AINTENANCE

- After each use, empty any remaining water from the blaster and the Easy Fill Station.
- Rinse the blaster and fill station with clean water to remove any debris or residue.
- Allow all components to air dry completely before storing to prevent mold or mildew.
- Store the blaster and fill station in a cool, dry place away from direct sunlight.
- Do not use harsh chemicals or abrasive cleaners on the product.

# **COMMON QUESTIONS**

#### Q: Why does the blaster need frequent refills?

A: The Nerf Super Soaker Power Drench is designed for high-performance, pressurized pulse bursts. This means it delivers a powerful, concentrated stream of water with each trigger pull, which naturally consumes water more quickly than blasters designed for continuous streams. The Easy Fill Station allows for rapid refilling to keep the action going.

#### Q: Is a garden hose required to use this blaster?

A: Yes, the unique Easy Fill Station requires a standard garden hose connection to fill and pressurize the blaster. This system eliminates the need for manual pumping or batteries, providing instant readiness for water battles.

## Q: What if the blaster doesn't pressurize or fill properly?

A: Ensure your garden hose is fully turned on and provides sufficient water pressure (minimum 27 psi). Also, make sure the blaster is firmly pressed down onto the Easy Fill Station, creating a secure seal for proper filling and pressurization.

#### **SPECIFICATIONS**

Feature	Detail
Product Dimensions	15 x 2.63 x 10.5 inches
Item Weight	1.74 pounds
Model Number	G1116
Manufacturer Recommended Age	8 years and up
Minimum Static Water Pressure	27 psi
Power Source	Hose-pressurized (No batteries required)

## WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Hasbro customer service directly. Refer to the contact information provided on the product packaging or visit the official Nerf website for assistance.

You can visit the official Nerf Store for more products and information:Nerf Store

#### **Related Documents - G1116**



#### Nerf N-Strike Elite Strongarm Blaster: User Guide

Official instructions for the Nerf N-Strike Elite Strongarm toy blaster. Learn how to load darts, fire single shots, and use the slam-fire feature for rapid firing. Includes safety warnings and product details.



## Nerf Fortnite AR-L Blaster: Instructions and Features

This document provides instructions and details for the Nerf Fortnite AR-L Blaster, including how to clear jams, insert batteries, load and fire darts, and store the blaster. It features multilingual support and highlights key components like the trigger, flip-up sight, tactical rail, and acceleration button.



#### NERF Modulus Mediator Blaster: Assembly, Operation, and Safety Guide

Comprehensive guide for the NERF Modulus Mediator blaster, covering assembly, loading, firing, slam-fire, reloading, troubleshooting jams, and important safety warnings. Includes parts identification and connection to the NERF community.

