

Ninja DCT601

Ninja Double Stack XL Countertop Oven & Air Fryer DCT601 Instruction Manual

Model: DCT601

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Ninja Double Stack XL Countertop Oven & Air Fryer, Model DCT601. This versatile appliance combines the functionality of an air fryer and a toaster oven, featuring two independent cooking zones, Smart Finish technology, FlexDoor design, and FlavorSeal technology. Please read all instructions thoroughly before first use and retain this manual for future reference.



Image: The Ninja Double Stack XL Countertop Oven and Air Fryer, showcasing its dual cooking capability with a salmon dish in the upper compartment and a whole roasted chicken in the lower compartment.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. These include:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended household use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place cooking utensils or baking dishes on the heating elements.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

GETTING STARTED

What's Included

Your Ninja Double Stack XL Countertop Oven & Air Fryer comes with the following components:

- Ninja Double Stack XL Countertop Oven & Air Fryer (Main Unit)
- 2 Sheet Pans
- 2 Wire Racks
- 1 Air Fry Basket
- 1 Crumb Tray
- Quick Start Guide and Recipe Guide



What's included

2 sheet pans, 2 wire racks, 1 air fry basket,
1 removable crumb tray, and recipe guide.

Image: All included accessories for the Ninja Double Stack XL Countertop Oven & Air Fryer, laid out next to the appliance.

Initial Setup

1. **Unpack:** Remove all packaging materials, promotional labels, and tape from the unit.
2. **Clean:** Wash the sheet pans, wire racks, air fry basket, and crumb tray in warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the oven with a damp cloth.
3. **Placement:** Place the oven on a clean, dry, level surface, ensuring at least 6 inches (15 cm) of clearance from the wall and on all sides for proper air circulation. Do not place anything on top of the oven.
4. **First Use Burn-In:** It is recommended to run the oven empty for 20 minutes on the "Air Roast" function at 400°F (200°C) to eliminate any manufacturing odors. Some smoke and odor are normal during this initial use.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features an intuitive display and various buttons and a dial for selecting cooking functions, setting time, and temperature.



FlavorSeal Technology

2 separate ovens prevent smells from transferring between ovens, so flavors stay totally separate.

Image: A detailed view of the intuitive control panel, highlighting the digital displays for both upper and lower ovens, function selection buttons, and the central control dial.

- **TOP/BOTTOM Buttons:** Select which oven (top or bottom) you wish to program.
- **Function Buttons:** Select from 12 cooking functions.
- **TEMP/TIME/SLICES Buttons:** Adjust temperature, cooking time, or toast shade/slices.
- **Control Dial:** Turn to adjust values (temperature, time, slices) and press to confirm selection.
- **START/STOP Button:** Begin or end a cooking cycle.
- **POWER Button:** Turn the appliance on or off.
- **LIGHT Button:** Turn the interior oven light on or off.

Cooking Functions

The DCT601 offers 12 versatile cooking functions:

- **Bake:** For traditional oven cooking of cakes, cookies, and casseroles.
- **Broil:** For quick cooking and browning of foods.

- **Reheat:** Gently warms leftovers without drying them out.
- **Keep Warm:** Maintains food at a serving temperature.
- **Toast:** For perfectly toasted bread and bagels.
- **Bagel:** Toasts the cut side of bagels while gently warming the crust.
- **Air Fry:** For crispy results with little to no oil, ideal for fries, wings, and nuggets.
- **Convection Bake (Conv. Bake):** Uses a fan to circulate hot air for faster, more even baking.
- **Pizza:** Optimized for cooking fresh or frozen pizzas.
- **Air Roast:** For roasting meats, vegetables, and sheet pan meals with a crispy exterior.
- **Whole Roast:** Designed for roasting larger items like whole chickens or roasts.
- **Dehydrate:** Removes moisture from foods for making dried fruits, jerky, and herbs.



12-in-1 functionality

Bake, Broil, Reheat, Keep Warm, Bagel, Toast, Air Fry, Conv. Bake, Pizza, Air Roast, Whole Roast, and Dehydrate.

Image: A visual representation of the 12-in-1 functionality, displaying various dishes prepared using the oven's different cooking modes.

General Cooking Steps

1. **Power On:** Press the POWER button to turn on the oven.

2. **Select Oven:** Press the TOP or BOTTOM button to select the desired oven compartment.
3. **Choose Function:** Use the function buttons to select your desired cooking mode (e.g., Air Fry, Bake).
4. **Set Temperature:** Press the TEMP button, then turn the control dial to adjust the temperature. Press the dial to confirm.
5. **Set Time:** Press the TIME button, then turn the control dial to adjust the cooking time. Press the dial to confirm.
6. **Start Cooking:** Press the START/STOP button to begin cooking.
7. **Monitor Progress:** The display will show the remaining cooking time. You can press the LIGHT button to view food inside.
8. **End Cooking:** The oven will beep when cooking is complete. Press START/STOP to end the cycle manually at any time.

SMART FEATURES

Smart Finish with DualZone Technology

This feature allows you to cook two different meals or dishes in the top and bottom ovens simultaneously, ensuring they finish cooking at the same time. This is ideal for preparing a complete meal with varying cooking requirements.



Smart Finish™ with DualZone™ Technology

Sync both independent ovens to cook 2 meals or 2 appetizers, 2 different ways that finish at the same time.

Image: The oven demonstrating Smart Finish with DualZone Technology, cooking two distinct meals in separate compartments to finish concurrently.

FlexDoor™

The FlexDoor design allows you to open only the top oven for quick access to snacks or appetizers, or open the entire door to access both the top and bottom ovens for larger meals. This design helps to minimize heat loss when only one compartment is in use.



FlexDoor™

Unlock 2 ovens in 1. Use the top zone for appetizers, sides or desserts, or open the entire door to access your full meal underneath.

Image: The FlexDoor feature, showing how the top oven can be accessed independently or the entire door can be opened for full access to both cooking zones.

FlavorSeal Technology

FlavorSeal Technology ensures that odors and flavors do not transfer between the two independent oven compartments. This allows you to cook savory and sweet dishes simultaneously without cross-contamination of tastes.



Intuitive display

Easily set time/temp and track cooking progress in both ovens.

Image: The FlavorSeal Technology in action, with two distinct meals cooking in separate ovens, ensuring no flavor transfer.

CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your Ninja Double Stack XL Countertop Oven & Air Fryer.

Cleaning

1. **Always unplug** the oven from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Remove the crumb tray from the bottom of the oven and discard any crumbs. Wash the tray in warm, soapy water or place it in the dishwasher.
3. **Sheet Pans, Wire Racks, Air Fry Basket:** These accessories should be hand-washed in warm, soapy water. Do not use abrasive cleaning pads or materials, as they may damage the non-stick coating or finish. Rinse thoroughly and dry completely.
4. **Interior:** Wipe the interior walls with a damp cloth or sponge. For stubborn food residue, use a non-abrasive liquid

cleanser. Do not use steel wool or other abrasive pads.

- 5. **Exterior:** Wipe the exterior of the oven with a damp cloth. Do not use liquid cleaners or harsh chemicals.
- 6. **Door:** Clean the glass door with a soft cloth and a non-abrasive glass cleaner.

Storage

Ensure the oven is clean and dry before storing. Store the appliance and its accessories in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Ninja Double Stack XL Countertop Oven & Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance not turning on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food not cooking evenly.	Overcrowding the oven; incorrect rack position; uneven food placement.	Avoid overcrowding. Use recommended rack positions. Arrange food in a single layer for best results. Rotate food halfway through cooking if necessary.
Excessive smoke from the oven.	Food residue or grease buildup; high-fat foods.	Clean the oven interior and accessories thoroughly after each use. For high-fat foods, use a lower temperature or shorter cooking time. Ensure the crumb tray is clean.
Fan continues to run after cooking.	Normal cooling cycle.	This is normal. The fan will continue to run for a short period to cool down the internal components. Do not unplug until the fan stops.
Display shows an error code.	Internal malfunction.	Unplug the unit from the wall outlet, wait 5 minutes, and plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

- **Model:** DCT601
- **Brand:** Ninja
- **Color:** Stainless Steel
- **Product Dimensions (D x W x H):** 18.6" x 16.39" x 13.26"
- **Item Weight:** Approximately 31 pounds
- **Power Source:** Electric
- **Temperature Range:** 0-450 Degrees Fahrenheit
- **Number of Shelves:** 2
- **Control Type:** Button Control with Dial
- **Special Features:** Adjustable Rack, Auto Cook Menu, Automatic Shut-Off, Large Capacity, Programmable

WARRANTY AND SUPPORT

Your Ninja Double Stack XL Countertop Oven & Air Fryer is covered by a limited warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included with your product or visit the official Ninja website. For customer support, replacement parts, or service inquiries, please contact Ninja Customer Service through their official channels.

Official Website: www.ninjakitchen.com

© 2025 Ninja. All rights reserved. Ninja is a registered trademark of SharkNinja Operating LLC.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question