

ZWP 3333004

ZWP Replacement Remote Control Instruction Manual

For Omni Breeze Tower Fan Models SFY.22, 3333004, DC2018

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your ZWP Replacement Remote Control. This remote is designed to provide seamless control for compatible Omni Breeze Tower Fan models.

2. COMPATIBILITY

This ZWP Replacement Remote Control is compatible with the following Omni Breeze Tower Fan models:

- SFY.22
- 3333004
- DC2018

3. KEY FEATURES

- **Material:** Constructed from high-quality, wear-resistant ABS for durability and a comfortable grip.
- **No Programming Required:** Ready to use immediately after battery installation.
- **Operational Range:** Effective control within a 5-meter (approximately 16 feet) range.
- **Responsive Design:** Engineered for quick signal transmission and response.

Stable.Smarter

Smart and stable signal enjoy your life



Image 3.1: Features of the ZWP Replacement Remote Control, including stable link, quick response, smart chip, and power saving capabilities.

Comfortable feel

Extremely long life



Environmentally friendly

ABS

Comfortable feel



Quality assurance



Image 3.2: Additional features emphasizing the comfortable feel, extended lifespan, use of environmentally friendly ABS material, and quality assurance.

4. SETUP: BATTERY INSTALLATION

The remote control requires one CR2025 3V Lithium button battery (not included).

1. Locate the battery compartment on the back of the remote control.
2. Gently push the tab marked 'PUSH' and slide the battery tray out.
3. Insert one CR2025 3V Lithium battery into the tray with the positive (+) side facing up, as indicated by the diagram.
4. Slide the battery tray back into the compartment until it clicks securely into place.

Requires The Button Batteries

(Batteries are not included)



Image 4.1: Detailed view of the remote control's dimensions and the battery compartment, indicating the CR2025 battery type and installation method.

Quick Response



Image 4.2: Illustration of the battery installation process, showing the remote's battery slot and the required CR2025 3V Lithium battery.

5. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use. Point the remote directly at your Omni Breeze Tower Fan to operate. The effective operational distance is approximately 5 meters.



Image 5.1: Front view of the remote control, displaying the power, oscillation, speed, timer, and mode buttons.



Image 5.2: The remote control in use with a tower fan, illustrating its effective operational range.

Button Functions:

- **(Power Button):** Turns the fan ON or OFF.
- **(Oscillation Button):** Activates or deactivates the fan's oscillation function.
- **(Speed Button):** Adjusts the fan speed (e.g., low, medium, high).
- **(Timer Button):** Sets the fan's operating timer.
- **↻ (Mode Button):** Cycles through different fan modes (e.g., normal, natural, sleep).
- **(Fan/Breeze Button):** Activates or adjusts the fan's breeze function.

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace the CR2025 battery when the remote's response becomes sluggish or it stops functioning. Ensure correct polarity during installation.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If

storing for extended periods, remove the battery to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed battery.	Replace the CR2025 battery, ensuring correct positive (+) and negative (-) orientation.
Remote works intermittently or requires squeezing	Poor battery contact or loose battery.	Ensure the battery is firmly seated in the tray. If the issue persists, gently clean the battery contacts in the compartment and on the battery itself.
Limited operational range	Weak battery or obstruction between remote and fan.	Replace the battery. Ensure there are no objects blocking the line of sight between the remote and the fan's receiver.
Remote buttons unresponsive	Internal malfunction or button damage.	If battery replacement and contact cleaning do not resolve the issue, the remote may require replacement.

8. SPECIFICATIONS

- **Brand:** ZWP
- **Model Number:** 3333004
- **Compatible Models:** SFY.22, 3333004, DC2018
- **Material:** ABS
- **Color:** Black
- **Power Source:** 1 x CR2025 3V Lithium Battery (not included)
- **Item Weight:** Approximately 1.58 ounces (45 grams)
- **Package Dimensions:** Approximately 4 x 2.5 x 0.2 inches (10.16 x 6.35 x 0.51 cm)

9. WARRANTY AND SUPPORT

Specific warranty information for this ZWP Replacement Remote Control is not provided in the product details. For any questions or support regarding this product, please refer to the seller's contact information or the platform where the purchase was made.