

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SINCHER](#) /

› [SINCHER Cordless Vacuum Cleaner User Manual - Super Red Flagship Edition](#)

## SINCHER Super Red Flagship Edition

# SINCHER Cordless Vacuum Cleaner

Model: Super Red Flagship Edition

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

## 1. INTRODUCTION

---

Thank you for choosing the SINCHER Cordless Vacuum Cleaner, Super Red Flagship Edition. This lightweight and versatile vacuum is designed to provide efficient cleaning for various surfaces in your home. Please read this manual carefully before use to ensure proper operation and maintenance.

This vacuum features a powerful 300W motor, up to 28kPa suction, a detachable battery with up to 40 minutes runtime, an LED display for real-time status, and a flexible LED brush head for thorough cleaning.

## 2. SETUP

---

Before first use, ensure all components are present and the battery is fully charged.

### 2.1 Unpacking and Assembly

Carefully remove all parts from the packaging. The main components include the main unit, telescopic tube, electric floor brush, various nozzles, adapter, and battery.



Image: All components included in the box, laid out for assembly.

1. Attach the telescopic aluminum alloy tube to the main unit until it clicks securely.
2. Connect the LED Turbo electric floor brush to the other end of the telescopic tube.
3. For handheld use, attach desired nozzles (crevice nozzle or round brush) directly to the main unit.

## 2.2 Battery Charging

The vacuum cleaner is powered by a detachable lithium-ion battery. It can be charged in two ways:

- **Direct Charging:** Plug the adapter directly into the charging port on the main unit.
- **Separate Charging:** Remove the battery from the main unit and plug the adapter into the battery's charging port.

A full charge takes approximately 4.5 hours. The LED display will indicate the battery level during charging and operation.



Image: Illustration of the detachable battery for charging.

### 3. OPERATION

---

The SINCHER Cordless Vacuum Cleaner offers versatile cleaning with multiple power modes and attachments.

### 3.1 Power Modes and Suction Adjustment

The vacuum features 3 adjustable suction speeds, controlled via the LED display:

- **Eco Mode:** Up to 40 minutes runtime, suitable for light cleaning and extended use.
- **Regular Mode:** Balanced power for everyday cleaning.
- **Max Mode:** Provides up to 28kPa powerful suction for deep cleaning stubborn dirt and debris. Runtime is approximately 15 minutes in this mode.

30Kpa

20Kpa

10Kpa

# 30KPA POWERFUL SUCTION

Deep-clean low-carpets and tackle bare floors

Image: Visual representation of the three suction power levels and their application.

### 3.2 LED Display Functions

The integrated LED display provides real-time information:

- **Battery Level:** Shows remaining battery charge.

- **Suction Performance:** Indicates the current power mode.
- **Blockage Alerts:** Notifies you of potential brush or suction path blockages.



## LED DISPLAY

Real-time readouts show battery status, and mode type.

Image: The LED display showing current battery status and selected mode.


### 3.3 Using Attachments

The vacuum comes with several attachments for various cleaning tasks:

- **Electric Floor Brush:** Ideal for carpets, hardwood, tile, and marble floors. Features front LED lights to illuminate dark areas. Its flexible design allows 180-degree side rotation and 90-degree up/down movement for reaching under furniture.
- **2-in-1 Brush:** Combines a crevice tool and a dusting brush for cleaning tight spaces, corners, and delicate surfaces.
- **Sofa Brush:** Designed for upholstery, pet beds, and other fabric surfaces.
- **Telescopic Tube:** Extends reach for high areas like ceilings and curtains, or for floor cleaning.



Anti Tangle

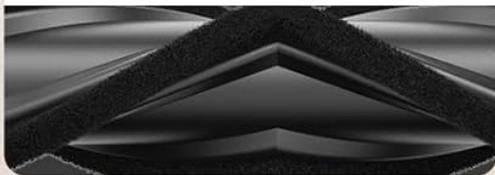

Tangled



# ANTI-TANGLE V-ROLLER BRUSH

Effective solution for tangled hair

Image: The anti-tangle V-roller brush effectively cleaning pet hair from a carpet.



**IDEAL FOR HOMES WITH PETS**  
Continuously deliver fade-free suction power

Image: Using the handheld vacuum with an attachment to clean a sofa, demonstrating its use for pet hair.

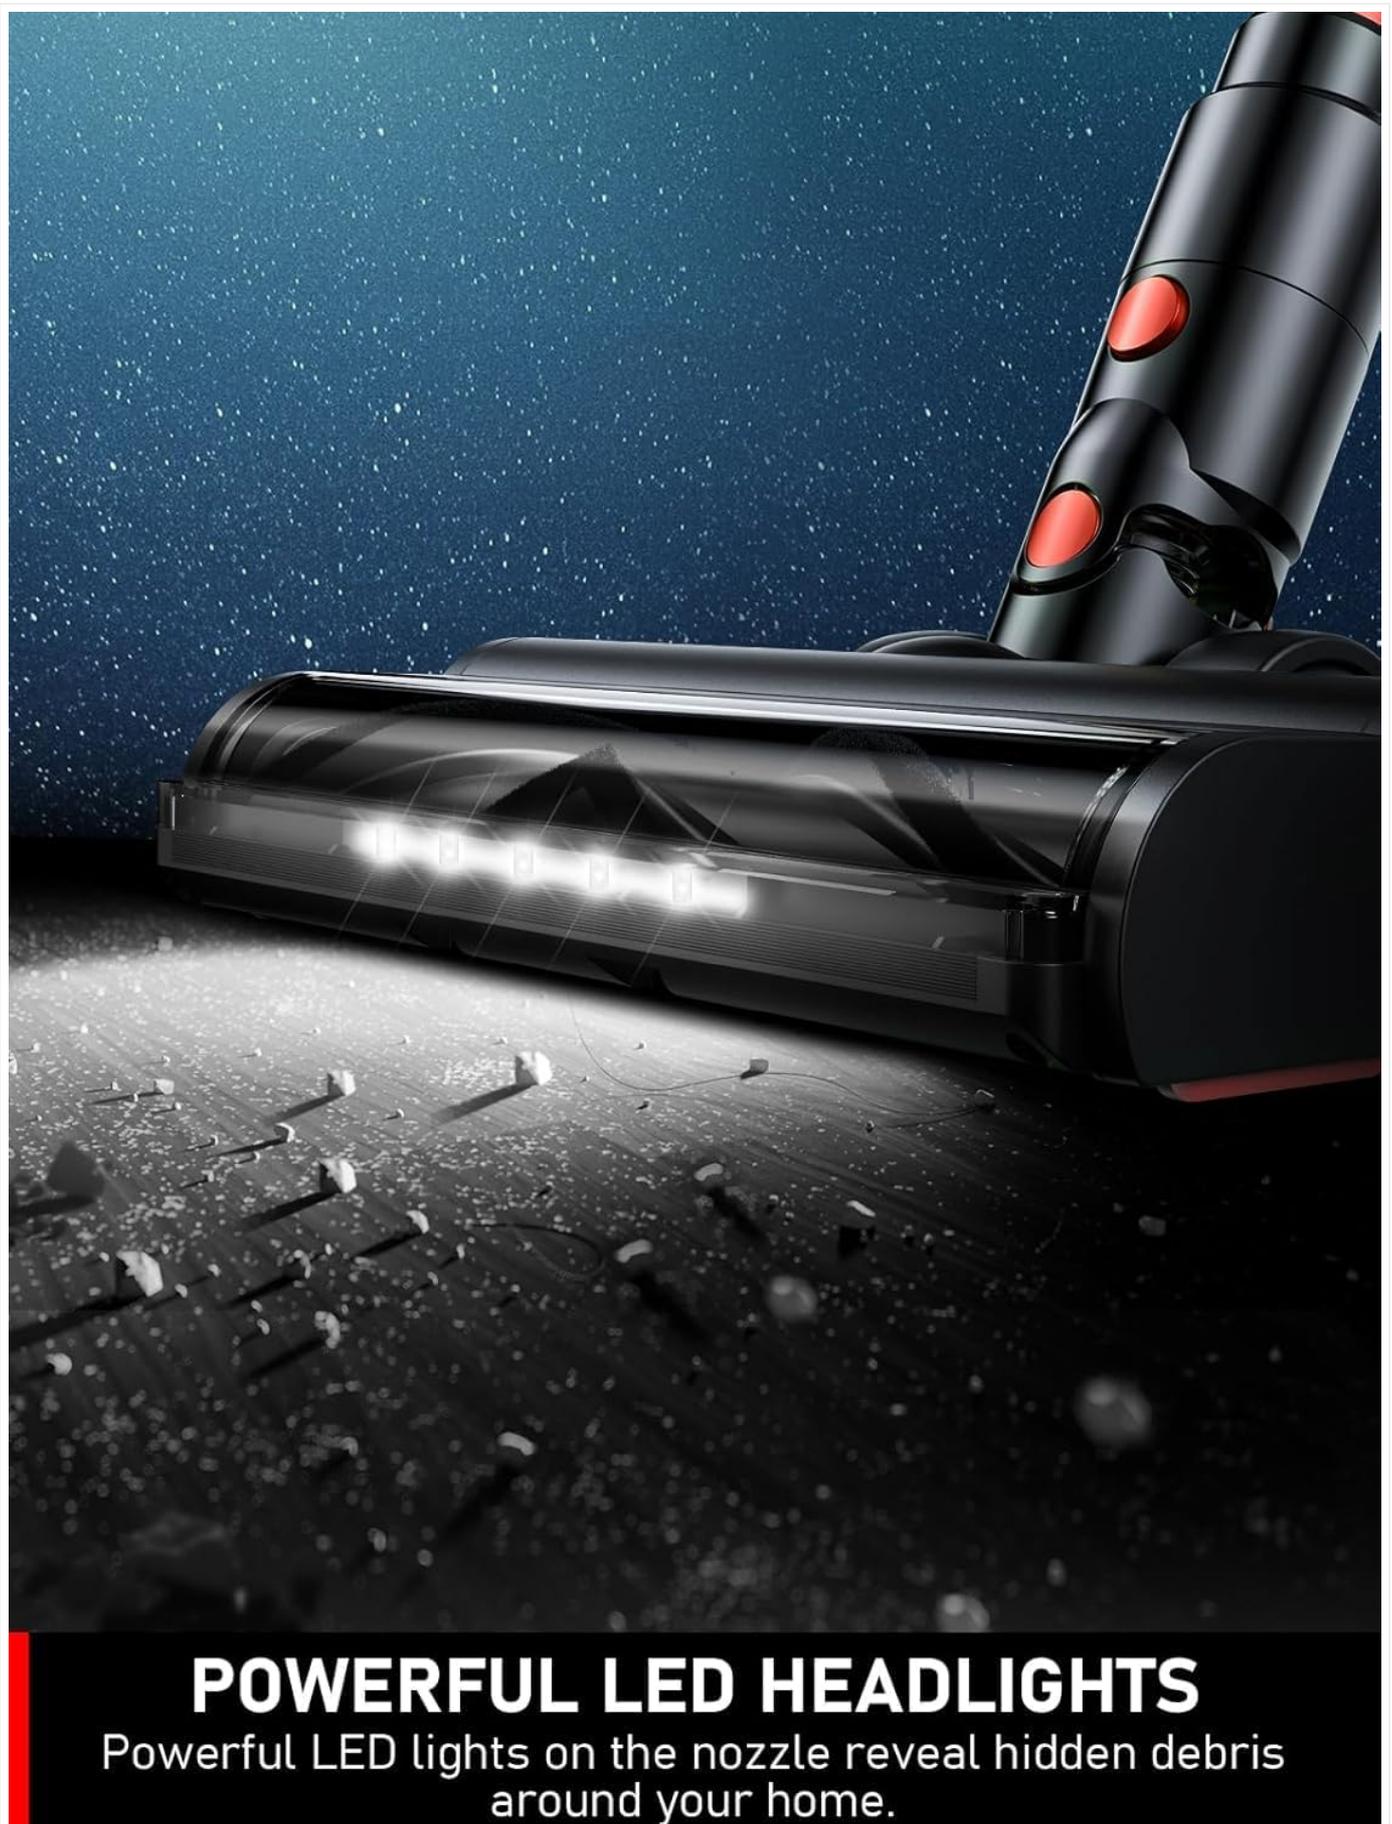


Image: The powerful LED headlights on the brush head revealing hidden debris on the floor.

#### 4. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

## **4.1 Dust Cup Emptying**

Empty the dust cup after each use or when it reaches the MAX fill line. Press the release button to detach the dust cup and dispose of the contents.

## **4.2 Filter Cleaning and Replacement**

The vacuum uses a multi-stage filtration system, including a HEPA filter and a high-density mesh, capturing 99.99% of fine particles. Two washable HEPA filters are included.

1. Remove the dust cup and separate the filter components.
2. Rinse the HEPA filter and mesh filter under running water.
3. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.
4. Replace filters every 3-6 months, or as needed, depending on usage.



## WHAT'S IN THE BOX

Image: Diagram showing the multi-stage filtration system and how air flows through it.

### 4.3 Brush Roll Cleaning

Regularly check the brush roll for tangled hair or debris. Use scissors to cut away any tangled hair and remove it. Ensure the brush roll spins freely.

## 5. TROUBLESHOOTING

---

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely clicked into place.
Low suction power.	Dust cup is full, filters are clogged, or blockage in the air path/brush roll.	Empty dust cup. Clean or replace filters. Check for and remove any blockages in the tube or brush head.
Brush roll not spinning.	Hair or debris tangled in the brush roll, or brush roll is jammed.	Turn off the vacuum and remove any obstructions from the brush roll.
Short runtime.	Battery not fully charged, or operating in Max mode for extended periods.	Ensure battery is fully charged. Use Eco or Regular mode for longer cleaning sessions.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	SINCHER
Model	Super Red Flagship Edition
Power (Motor)	300W (Upgraded), 350W (Electrical Power)
Suction Power	Up to 28kPa (Max Mode)
Number of Speeds	3
Battery Type	Detachable Lithium-ion (2200mAh)
Runtime	Up to 40 minutes (Eco Mode)
Charging Time	Approx. 4.5 hours
Filtration System	HEPA filter, High-density mesh (99.99% efficiency for 0.1µm particles)
Special Features	LED display, Flexible LED brush head, Lightweight design, Multi-purpose cleaning
Weight	3.16 Kilograms
Dimensions	49 x 26 x 18 cm (Package)
Surface Recommendation	Carpet, Hardwood, Tile, Marble

## 7. WARRANTY & SUPPORT

---

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official SINCHER website. If you experience any issues not covered in the troubleshooting section, please contact our customer service team for assistance.

### Contact Information:

- **Website:** [Visit SINCHER Store on Amazon](#)

- **Email:** [Insert Customer Service Email Here, if available]
- **Phone:** [Insert Customer Service Phone Number Here, if available]

Please have your model number (Super Red Flagship Edition) and purchase date ready when contacting support.