

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hiicam](#) /

› [Hiicam Speed60 4K Action Camera User Manual](#)

## Hiicam Speed60

# Hiicam Speed60 4K Action Camera User Manual

Comprehensive instructions for setup, operation, and maintenance.

## 1. INTRODUCTION

Welcome to the Hiicam Speed60 4K Action Camera user manual. This guide provides essential information to help you get started with your new action camera, understand its features, and ensure optimal performance. Please read this manual thoroughly before using the camera.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Hiicam Speed60 4K Action Camera
- Waterproof Case (for depths up to 40m)
- Wireless Remote Control
- Wireless Microphone
- 2 x 2150mAh Rechargeable Batteries
- Battery Charger
- Various Mounting Accessories (e.g., quick clips, adhesive mounts, frame mount)
- USB-C Cable
- User Manual (this document)



Image: The Hiicam Speed60 4K Action Camera shown with its comprehensive set of accessories, including the waterproof case, remote control, wireless microphone, and two batteries.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.

#### 3.1 Camera Body

- Front Screen:** Displays essential information and can be used for vlogging.
- Rear 2.35" HDR Touchscreen:** For menu navigation, playback, and live view.
- Lens:** High-quality optical lens for capturing 4K video and photos.
- Power/Mode Button:** Turns the camera on/off and switches between modes.
- Shutter/Record Button:** Starts/stops recording or takes a photo.
- USB-C Port:** For charging and data transfer.
- MicroSD Card Slot:** For memory card insertion.
- Battery Compartment:** Houses the rechargeable battery.

# デュアルスクリーン

2.35インチのタッチスクリーンはカメラの操作やビデオの再生、また自撮りなどに便利です！



Image: The Hiicam Speed60 camera showcasing its front and rear screens, highlighting the dual-screen functionality for versatile shooting.

## 3.2 Wireless Remote Control & Microphone

The camera includes a wireless remote for convenient operation and a wireless microphone for enhanced audio recording.

# ワイヤレスリモコンとワイヤレス マイク一体型便利なデザイン



Image: A user on a mountain with the Hiicam Speed60 camera, demonstrating the use of the wireless remote control and external microphone for remote operation and clear audio capture.

## 4. SETUP

### 4.1 Charging the Battery

1. Open the battery compartment cover.
2. Insert one or both 2150mAh batteries into the camera or the external battery charger.
3. Connect the camera or charger to a USB power source using the provided USB-C cable.
4. The charging indicator will illuminate during charging and turn off when fully charged.

# 大容量バッテリーが長持ち

2150mAhバッテリー 2個付き



# 2150 mAh

Image: The Hiicam Speed60 camera with its battery compartment open, showing the 2150mAh battery being inserted or removed.

## 4.2 Inserting a MicroSD Card

A MicroSD card (not included) is required to store videos and photos. Use a high-speed, branded MicroSD card (UHS-I U3 or higher) up to 256GB for optimal performance, especially when recording 4K video.

1. Locate the MicroSD card slot on the side of the camera.
2. Insert the MicroSD card with the contacts facing the front of the camera until it clicks into place.
3. To remove, gently push the card until it springs out.

## 4.3 Powering On/Off

- To power on, press and hold the Power/Mode button for a few seconds.
- To power off, press and hold the Power/Mode button again until the camera shuts down.

## 5. BASIC OPERATION

## 5.1 Switching Modes

Press the Power/Mode button repeatedly to cycle through video, photo, and playback modes.

## 5.2 Recording Video

1. Ensure the camera is in video mode.
2. Press the Shutter/Record button to start recording. The recording indicator light will flash.
3. Press the Shutter/Record button again to stop recording.

## 5.3 Taking Photos

1. Ensure the camera is in photo mode.
2. Press the Shutter/Record button to take a photo.

## 5.4 Using the Touchscreen

The 2.35" HDR touchscreen allows for intuitive navigation of menus, settings, and playback. Swipe and tap to access various functions.

# 6. ADVANCED FEATURES

---

## 6.1 4K 60FPS Video Recording

The Hiicam Speed60 supports high-resolution 4K video recording at 60 frames per second, capturing clear and detailed footage. Note that Electronic Image Stabilization (EIS) may be automatically disabled at this setting for optimal quality.

# 4K60fpsビデオ

素晴らしい瞬間を捕まえよう！



Image: A snowboarder in action, illustrating the camera's capability to capture dynamic 4K 60fps video in high-speed scenarios.

## 6.2 6-Axis Electronic Image Stabilization (EIS)

The 6-axis EIS feature helps to stabilize footage, reducing blur and shakiness for smoother videos. This is particularly useful during activities involving movement.

# 6 軸EIS手ぶれ補正

安定した滑らかなビデオを提供します



オフ

オン

Image: A side-by-side comparison showing the effect of 6-axis EIS, with the "Off" side appearing blurry and the "On" side showing stable, clear footage from a motorcycle ride.

## 6.3 Waterproofing

The main camera unit is waterproof up to 10 meters without an additional case. For deeper underwater activities, use the included waterproof case, which allows the camera to operate safely up to 40 meters.

# IPX8/10M本機防水

専用防水ケースを付けると水深40メートルまで



Image: A person diving underwater with the Hiicam Speed60 camera securely housed in its waterproof case, demonstrating its capability for underwater photography and videography.

## 6.4 8x Digital Zoom

Utilize the 8x digital zoom feature to get closer to your subject. Access this function through the touchscreen interface.

## 6.5 App Connectivity (5G Wi-Fi)

Connect your Hiicam Speed60 to your smartphone via 5G Wi-Fi using the dedicated "Hi Camera" app. This allows for remote control, live preview, and quick transfer of your footage for sharing.

# 5G Wifiを接続 すぐにダウンロードして共有



Image: A person holding a smartphone displaying the "Hi Camera" app interface, with the Hiicam Speed60 camera mounted nearby, illustrating the 5G Wi-Fi connectivity for remote control and media transfer.

## 6.6 Mounting Options & Lens Protector

The camera comes with various mounting accessories, including a quick-clip system for easy attachment to different surfaces. A removable lens protector is also included to safeguard the lens from scratches and impacts.



Image: A multi-panel image showing the Hiicam Speed60 mounted on a bicycle handlebar with a 360-degree rotating mount, a magnetic quick-clip system, and a removable lens protector.

## 7. MAINTENANCE

- Cleaning:** Use a soft, lint-free cloth to clean the camera body and lens. For the lens, use a specialized lens cleaning solution if necessary.
- Waterproof Case:** After underwater use, rinse the waterproof case with fresh water and allow it to air dry. Inspect the seals regularly for any damage.
- Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- Battery Care:** Avoid fully discharging the batteries. Charge them regularly, even if not in use, to maintain battery health.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low or depleted battery.	Charge the battery fully. Ensure batteries are correctly inserted.
Cannot record video/take photos.	No MicroSD card, card full, or card error.	Insert a MicroSD card, delete files to free space, or format the card (this will erase all data). Ensure the card is compatible (UHS-I U3 or higher).
Video footage is shaky/blurry despite EIS.	EIS may perform differently at various resolutions or in extreme motion.	Ensure EIS is enabled in settings. For 4K60FPS, EIS might be automatically disabled. Consider using a gimbal for extremely stable footage.
Poor audio quality from built-in microphone.	Environmental noise or microphone sensitivity.	Use the included wireless microphone for improved audio capture, especially in noisy environments.
Wi-Fi connection is unstable or disconnects.	Interference or distance from smartphone.	Ensure your smartphone is close to the camera. Avoid environments with strong Wi-Fi interference. Restart both devices.
Camera overheats during use.	Prolonged recording, especially in high resolutions or warm environments.	This is normal for high-performance cameras. Allow the camera to cool down. Avoid direct sunlight during extended use.

## 9. SPECIFICATIONS

Feature	Detail
Brand	Hiicam
Model	Speed60
Video Capture Resolution	4K (up to 60FPS)
Image Stabilization	6-Axis Electronic Image Stabilization (EIS)
Waterproof (Camera Body)	Up to 10 meters
Waterproof (with Case)	Up to 40 meters
Zoom Ratio (Digital)	8x
Screen	2.35" HDR Touchscreen (Rear), Front Screen
Battery Capacity	2 x 2150mAh
Connectivity	5G Wi-Fi, USB-C
Storage Media	Micro SD Card (up to 256GB, UHS-I U3 recommended)
Video Format	MP4

Feature	Detail
Audio Format	AAC, MP3
Special Features	Wireless Remote Control, Wireless Microphone, Night Mode, Underwater Mode, Time-lapse, Sports Mode

## 10. WARRANTY AND SUPPORT

---

The Hiicam Speed60 4K Action Camera typically comes with a standard manufacturer's warranty. Some promotions may offer an extended warranty (e.g., 3 years) upon product registration via a QR code provided in the packaging. Please refer to the specific warranty terms provided at the time of purchase.

For technical support, troubleshooting assistance, or inquiries regarding replacement parts (such as batteries), please contact Hiicam customer service directly. Contact information can usually be found on the official Hiicam website or through your purchase platform.

