

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZWP](#) /

› [RC-880M Replacement Remote Control User Manual](#)

ZWP RC-880M

ZWP RC-880M Replacement Remote Control User Manual

For Onkyo AV Receiver Models: HT-RC660, HT-S7700, HT-R693, TX-NR636

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ZWP RC-880M Replacement Remote Control. Designed as a direct replacement, this remote offers seamless compatibility with specified Onkyo AV Receiver models without requiring complex programming. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.

PACKAGE CONTENTS

- 1 x ZWP RC-880M Replacement Remote Control

Note: AAA batteries are not included and must be purchased separately.

SETUP

1. Battery Installation

The RC-880M remote control requires two (2) 1.5V AAA batteries for operation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming or pairing needed.
work right out of box after putting batteries!



Figure 1: Battery installation for the RC-880M remote control. Ensure correct polarity when inserting batteries.

2. Initial Use (No Programming Required)

The ZWP RC-880M is a pre-programmed replacement remote control. No additional programming or pairing steps are required. Once batteries are installed, the remote is ready for immediate use with compatible Onkyo AV Receiver models.



OPERATING INSTRUCTIONS

The RC-880M remote control replicates the functions of the original Onkyo remote. Familiarize yourself with the button layout for optimal control of your AV receiver.



Figure 3: Front view of the RC-880M remote control, displaying all functional buttons.

Key Functions Overview

Button/Section	Function
RECEIVER / RCV	Powers the AV receiver On/Off.
SOURCE	Selects the input source.
BD/DVD, CBL/SAT, STB/DVR, GAME, PC, AUX, TV/CD, PHONO, TUNER, NET, USB, BLUETOOTH	Direct input selection buttons.
TV, ZONE2, CUSTOM, MUTING	Remote mode and specific function controls.
VOL +/-	Adjusts the master volume level.
CH DISC +/-	Channel or disc navigation.

Button/Section	Function
Navigation Pad (Up, Down, Left, Right, ENTER)	Navigates menus and confirms selections.
TOP MENU, GUIDE, PLAYLIST, SETUP, AUDIO, HOME, RETURN, PREV CH, MENU	Menu and system control buttons.
Playback Controls (Rewind, Play, Fast Forward, Skip Back, Stop, Skip Forward, Pause)	Controls media playback.
SEARCH, REPEAT, RANDOM, MODE	Additional playback and mode controls.
Number Pad (0-9, +10, CLR, DISPLAY)	Direct input for channels, tracks, or settings.
DIMMER	Adjusts display brightness on the receiver.

Operating Range

The RC-880M remote control operates using infrared (IR) technology. Ensure a clear line of sight between the remote and the AV receiver's IR sensor. The effective operating range is approximately 10 meters (33 feet).

Long distance precise control

Strongest signal by Infrared technology, further transmission for multi-angle induction. Precisely control far from 10 meters / 33 feet.



Figure 4: The RC-880M remote offers long-distance precise control via infrared technology, up to 33 feet.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use abrasive cleaners, solvents, or alcohol, as these may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, high temperatures, humidity, and liquids.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Check battery polarity. Replace batteries with new ones.

Problem	Possible Cause	Solution
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and receiver; Remote too far from receiver.	Replace batteries. Remove any obstructions. Move closer to the receiver.
Specific buttons not working.	Button stuck or damaged; Remote mode incorrect (e.g., trying to control TV when in Receiver mode).	Gently press the button multiple times. Ensure the remote is in the correct mode for the desired function (e.g., "RECEIVER" button pressed for receiver functions).
Remote works but does not control the intended device.	Incorrect device selected on the remote.	Press the appropriate source button (e.g., BD/DVD, CBL/SAT) to select the correct device input on your Onkyo AV Receiver.

SPECIFICATIONS

- **Model:** RC-880M
- **Brand:** ZWP
- **Compatibility:** Onkyo AV Receiver models HT-RC660, HT-S7700, HT-R693, TX-NR636
- **Power Source:** 2 x 1.5V AAA Batteries (not included)
- **Material:** High-quality ABS
- **Color:** Black
- **Dimensions:** Approximately 10 x 3 x 1 inches (25.4 x 7.6 x 2.5 cm)
- **Item Weight:** Approximately 2.4 ounces (68 grams)
- **Control Technology:** Infrared (IR)
- **Special Feature:** Ergonomic design



Figure 5: Dimensions of the RC-880M remote control.

WARRANTY AND SUPPORT

For any questions or issues regarding your ZWP RC-880M Replacement Remote Control, please contact the seller directly through the platform where you made your purchase. They will assist you with troubleshooting or warranty claims as per their policy.

"Any question, Please do not hesitate to contact us before leaving Feedback, We will help you resolve it, Thank you." - ZWP-STORE

Please refer to your purchase documentation for specific warranty terms and contact information.