

Dpofirs Dpofirsstpnhqwg3-12

Dpofirs 4K Digital Camera User Manual

Model: Dpofirsstpnhqwg3-12

INTRODUCTION

This manual provides instructions for the Dpofirs 4K Digital Camera, Model Dpofirsstpnhqwg3-12. This device is designed to capture high-resolution photos at 48MP and record videos in 4K. It features a 2.4-inch TFT screen, 16x digital zoom, autofocus, and electronic image stabilization. Please read this manual thoroughly before using the camera to ensure proper operation and to maximize its features.

SAFETY INFORMATION

- Do not expose the camera to water or moisture. This product is not water-resistant.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from extreme temperatures and direct sunlight.
- Use only the specified charging cable and battery.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support if issues arise.
- Keep out of reach of small children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Dpofirs 4K Digital Camera
- Wrist Strap
- Charging Cable (Type-C)
- User Manual
- Built-in Lithium Ion Battery (600mAh)





Image: The Dpofirs 4K Digital Camera, wrist strap, and charging cable as included in the package.

PRODUCT OVERVIEW

Familiarize yourself with the camera's physical components and controls.



Image: Top view of the camera, highlighting the lens and grip area.



Image: Angled view of the camera, displaying the screen and control buttons on the right side.



Image: Side view of the camera, detailing the USB-C charging port and the memory card slot.

The camera features a 2.4-inch TFT display on the rear, with control buttons located to its right. The lens is prominently featured on the front. A USB Type-C port and a memory card slot are located on the side for charging and data transfer.

SETUP

1. Charging the Battery

The camera comes with a built-in 600mAh Lithium Ion battery. Before first use, fully charge the camera.

1. Connect the provided Type-C charging cable to the camera's Type-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator will show the charging status. Once fully charged, the indicator will change or turn off.

2. Inserting a Memory Card

The camera supports up to a 64GB small memory card (not included). A memory card is required to save photos and videos.

1. Locate the memory card slot on the side of the camera.
2. Insert the memory card into the slot with the metal contacts facing the correct direction (refer to the diagram on the camera or slot).
3. Push the card gently until it clicks into place. To remove, push it again until it springs out.

3. Powering On/Off

- To power on, press and hold the power button (usually located on the top or side) for 3 seconds.
- To power off, press and hold the power button for 3 seconds again.

4. Initial Settings

Upon first power-on, you may need to set the language, date, and time. Navigate through the menu using the directional buttons and confirm selections with the shutter button.

OPERATING THE CAMERA

1. Taking Photos

1. Power on the camera. It will typically start in photo mode.
2. Frame your shot using the 2.4-inch TFT screen.
3. The camera features autofocus. Allow it to focus on your subject.
4. Press the **Shutter Button** to capture the photo.

4K High Definition

Details are clearly presented

High definition screen resolution brings every frame to life



Image: The camera screen showing a yellow flower, ready for a photo.

2. Recording Videos

1. Switch to video mode using the mode button (refer to camera controls).
2. Press the **Shutter Button** to start recording.
3. Press the **Shutter Button** again to stop recording.



Image: The camera screen showing a beach scene with people, indicating video recording is active.

3. Zoom Function

The camera supports 16x digital zoom. Use the zoom buttons (often labeled 'W' for wide and 'T' for telephoto, or up/down arrows) to adjust the zoom level while in photo or video mode.

4. Playback Mode

1. Enter playback mode using the mode button.
2. Use the directional buttons to browse through your photos and videos.
3. Press the **Shutter Button** (or a dedicated play button) to view a photo or play a video.

5. Connecting to a Computer

To transfer files, connect the camera to a computer using the provided Type-C USB cable. The camera should appear as a removable disk drive, allowing you to copy files.

6. Advanced Features

The camera includes several advanced features accessible through the menu:

- **Automatic Beauty Mode:** Enhances facial features in portraits.
- **Automatic Exposure:** Adjusts lighting for optimal image brightness.

- **Multiple Color Filters:** Apply various color effects to your photos.
- **Colorful Frames:** Add decorative borders to your images.
- **Electronic Image Stabilization (EIS):** Reduces blur caused by camera shake during video recording.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens with your fingers.
- Do not use harsh chemicals or abrasive materials.

2. Battery Care

- Charge the battery regularly, even if the camera is not in use, to maintain battery health.
- Avoid fully discharging the battery frequently.
- Store the camera in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is drained or not properly inserted.	Charge the battery fully. Ensure the battery is correctly seated.
Cannot take photos/record videos.	Memory card is full, not inserted, or corrupted.	Insert a memory card. Delete unnecessary files or format the card (this will erase all data). Ensure the card is not locked.
Images are blurry.	Camera shake, subject too close, or poor lighting.	Hold the camera steady. Ensure adequate lighting. The camera has autofocus, but extreme close-ups may be out of range.
Camera freezes or becomes unresponsive.	Software glitch or low battery.	Press and hold the power button for 10 seconds to force a shutdown, then restart. Ensure battery is charged.
Cannot connect to computer.	Faulty USB cable or incorrect connection mode.	Try a different USB port or cable. Ensure the camera is powered on and in the correct USB connection mode (if applicable).

SPECIFICATIONS

Feature	Detail
Image Resolution	Up to 48MP
Video Resolution	Up to 4K

Feature	Detail
Digital Zoom	16x
Display Screen	2.4 Inch TFT Screen
Battery Type	Lithium Ion Battery
Battery Capacity	600mAh
Storage Support	Up to 64GB Small Memory Card (not included)
Charging Interface	Type-C
Image Stabilization	Electronic (EIS)
Focus Type	Autofocus
File Format (Photo)	JPG
File Format (Video)	AVI
Model Number	Dpofirsstpnhqwg3-12

VIDEO DEMONSTRATION

Watch this video for a visual guide on unboxing and basic operation of the Dpofirs 4K Digital Camera.

Your browser does not support the video tag.

Video: A demonstration of the Dpofirs 4K Digital Camera, including unboxing and initial setup steps.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official Dpofirs website. Keep your purchase receipt as proof of purchase.