

Electronic Timer

Digital Electronic Timer User Manual

Model: Electronic Timer

PRODUCT OVERVIEW

This user manual provides instructions for the Digital Electronic Timer, designed for various timing needs in environments such as classrooms, kitchens, and baking. It features a large display, loud alarm, and multiple functions including timing, countdown, and memory.



Figure 1: Front view of the Digital Electronic Timer.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x Electronic Timer

Note: AAA dry battery is not included and must be purchased separately.

SPECIFICATIONS

Feature	Description

Item Type	Electronic Timer
Timing Range	0-99 minutes 59 seconds
Timing Function	Yes
Countdown Function	Yes
Memory Function	Yes
Battery Information	1.5V 600mAh AAA dry battery x 1 (not included)

SETUP

1. Battery Installation

The timer requires one 1.5V 600mAh AAA dry battery (not included) for operation.

1. Locate the battery compartment on the back of the timer.
2. Slide open the battery compartment cover.
3. Insert one AAA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Figure 2: Back view of the timer with battery compartment.

2. Powering On/Off

The timer features a small switch on its side to control power.

- To turn on the timer, slide the switch to the "ON" position. The display will illuminate.
- To turn off the timer, slide the switch to the "OFF" position. The display will turn off to conserve battery life.



Figure 3: Side view showing the power switch.

OPERATING INSTRUCTIONS

The timer has three main buttons: **M** (Minutes), **S** (Seconds), and **ST/SP** (Start/Stop).



Figure 4: Close-up of the timer's control buttons.

1. Setting the Timer (Countdown)

1. Ensure the timer is powered on and the display shows "00:00". If not, press **M** and **S** simultaneously to reset.
2. Press the **M** button to set the desired minutes. Each press increases the minutes by one. Hold the button to rapidly increase the value.
3. Press the **S** button to set the desired seconds. Each press increases the seconds by one. Hold the button to rapidly increase the value.
4. Once the desired time is set (e.g., 10 minutes 30 seconds), press the **ST/SP** button to start the countdown.
5. The timer will count down to "00:00" and then emit a loud, clear alarm.

2. Using the Stopwatch (Count-up)

1. Ensure the timer is powered on and the display shows "00:00". If not, press **M** and **S** simultaneously to reset.
2. Press the **ST/SP** button without setting any time. The timer will immediately start counting up from "00:00".
3. Press **ST/SP** again to pause the stopwatch.

4. Press **ST/SP** once more to resume counting.
5. To reset the stopwatch, press **M** and **S** simultaneously while the stopwatch is paused or running.

3. Memory Function

The timer has a memory function that recalls the last set countdown time.

1. After a countdown has finished and the alarm has sounded, or if you stop a countdown, the timer will return to the last set time.
2. To reuse the last set time, simply press **ST/SP**.
3. To clear the memory and set a new time, press **M** and **S** simultaneously to reset to "00:00".

MAINTENANCE

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Battery Replacement:** When the display dims or the alarm weakens, it's time to replace the AAA battery. Follow the battery installation steps in the "Setup" section.
- **Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not turn on.	Battery not installed or installed incorrectly. Battery is dead. Power switch is off.	Ensure battery is installed with correct polarity. Replace with a new AAA battery. Slide the power switch to the "ON" position.
Display is dim or flickering.	Low battery.	Replace the AAA battery.
Alarm is too quiet or not sounding.	Low battery.	Replace the AAA battery.
Buttons are unresponsive.	Timer might be frozen. Low battery.	Remove and reinsert the battery. Replace the AAA battery.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase.

Manufacturer: Generic

