

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DEERTIME](#) /

› [DEERTIME E15 Android 14 Tablet User Manual](#)

## DEERTIME E15

# DEERTIME E15 Android 14 Tablet User Manual

MODEL: E15

## 1. INTRODUCTION

---

Welcome to the user manual for your new DEERTIME E15 Android 14 Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. The DEERTIME E15 is designed for optimal performance, featuring the latest Android 14 operating system, a powerful Octa-Core processor, and a vibrant 10.1-inch IPS HD touchscreen. With 20GB RAM (6GB physical + 14GB virtual) and 128GB of internal storage expandable up to 1TB, it offers seamless multitasking and ample space for all your needs. Enjoy fast and reliable connectivity with Wi-Fi 6 and Bluetooth 5.0, along with Widevine L1 support for high-definition streaming.



Image 1.1: The DEERTIME E15 Android 14 Tablet, showcasing the tablet, keyboard, mouse, and other accessories.

## 2. WHAT'S IN THE BOX

---

Upon unboxing your DEERTIME E15 Tablet, please verify that all the following items are included:

- DEERTIME E15 Android 14 Tablet
- Bluetooth QWERTY Keyboard
- Wireless Mouse
- Tablet Case
- Instruction Manual
- USB-C Data Cable
- Charger
- Protective Film
- OTG Cable



Image 2.1: A visual representation of the items included in the DEERTIME E15 Tablet package.

### 3. SPECIFICATIONS

The DEERTIME E15 Tablet is engineered with advanced components to deliver a robust user experience. Below are the detailed specifications:

Feature	Specification
Operating System	Android 14
Display Size	10.1 Inches
Display Resolution	1280 x 800 pixels (IPS HD Touchscreen)
Processor	Octa-Core, 1.8 GHz Allwinner
RAM	20GB (6GB physical + 14GB virtual)


Feature	Specification
Internal Storage	128GB
Expandable Storage	Up to 1TB via MicroSD card
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	6000 mAh
Wireless Connectivity	Wi-Fi 6 (2.4G & 5G), Bluetooth 5.0
Dimensions (L x W x H)	24.31 x 0.99 x 16.1 cm
Weight	470 g
Model Number	E15



Image 3.1: Key technical specifications of the DEERTiME E15 Tablet, highlighting its core components.

# 10.1 inch

10.1-inch Large Screen Display  
G+G Tempered Glass In-cell FHD  
Colorful Visual Experience

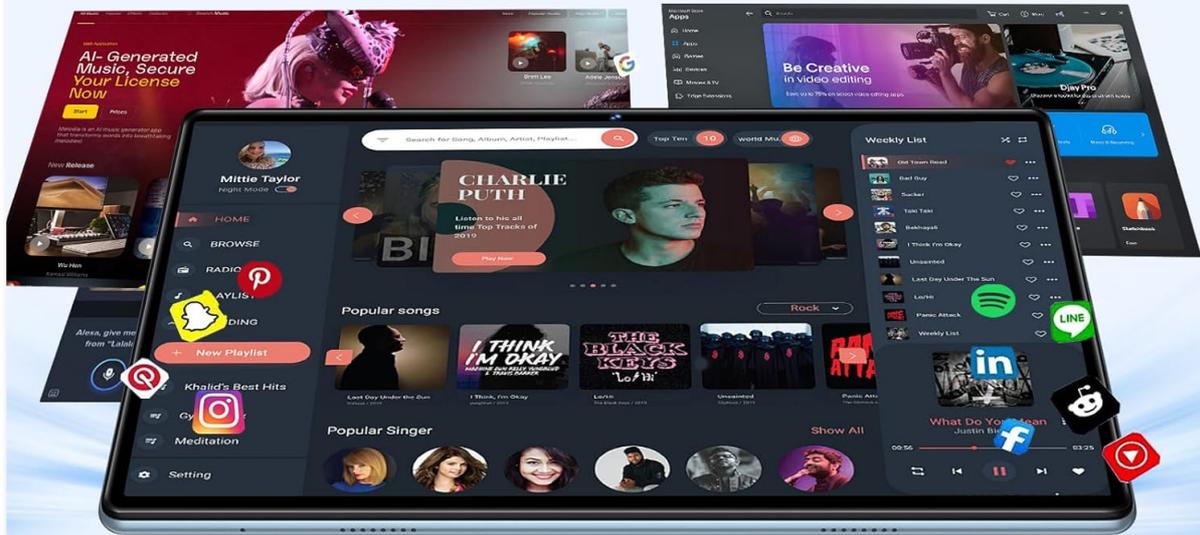

**1280\*800**

In-cell FHD

**16:10**

Golden Ratio

**Wide**

Wide Angle

**Narrow Bezels**

Thinner Design

Image 3.2: Close-up view of the tablet's 10.1-inch display, emphasizing its size and clarity.

# 6000 mAh Battery

## Great companion on the go

It gives you the freedom to work, play games, watch movies, listen to songs and surf the internet. etc.

☞ Type-c



Image 3.3: Illustration of the tablet's 6000 mAh battery, indicating long-lasting power.

## 4. SETUP

---

Follow these steps to set up your DEERTIME E15 Tablet for the first time:

### 4.1 Initial Charging

1. Connect the USB-C data cable to the tablet's charging port.
2. Plug the other end of the cable into the provided charger.
3. Plug the charger into a power outlet.
4. Allow the tablet to charge fully before first use (approximately 3-4 hours). The battery indicator on the screen will show charging status.

### 4.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side of the tablet) for a few seconds until the DEERTIME logo appears.
- **To Power Off:** Press and hold the Power button until a power menu appears on the screen. Select "Power off" and confirm.

- **To Restart:** From the power menu, select "Restart".

### 4.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard:

1. Select your preferred language.
2. Connect to a Wi-Fi network by selecting your network and entering the password.
3. Review and accept the terms and conditions.
4. Sign in with your Google account or create a new one. This is essential for downloading apps from the Google Play Store.
5. Set up screen lock (PIN, pattern, or password) for security.
6. Follow any remaining prompts to complete the setup.

### 4.4 Connecting Accessories

Your DEERTiME E15 Tablet comes with a Bluetooth keyboard and a wireless mouse for enhanced productivity:

- **Bluetooth Keyboard:** Turn on the keyboard and put it into pairing mode (refer to the keyboard's specific instructions, usually a dedicated button or key combination). On your tablet, go to **Settings > Connected devices > Pair new device**. Select the keyboard from the list and follow the on-screen prompts to complete pairing.
- **Wireless Mouse:** Insert the USB receiver of the wireless mouse into the OTG cable, then connect the OTG cable to the tablet's USB-C port. The mouse should connect automatically.

### 4.5 Inserting a MicroSD Card

To expand storage, locate the MicroSD card slot on the side of the tablet. Gently insert the MicroSD card into the slot until it clicks into place. The tablet will recognize the new storage, and you may be prompted to format it for internal or portable storage.

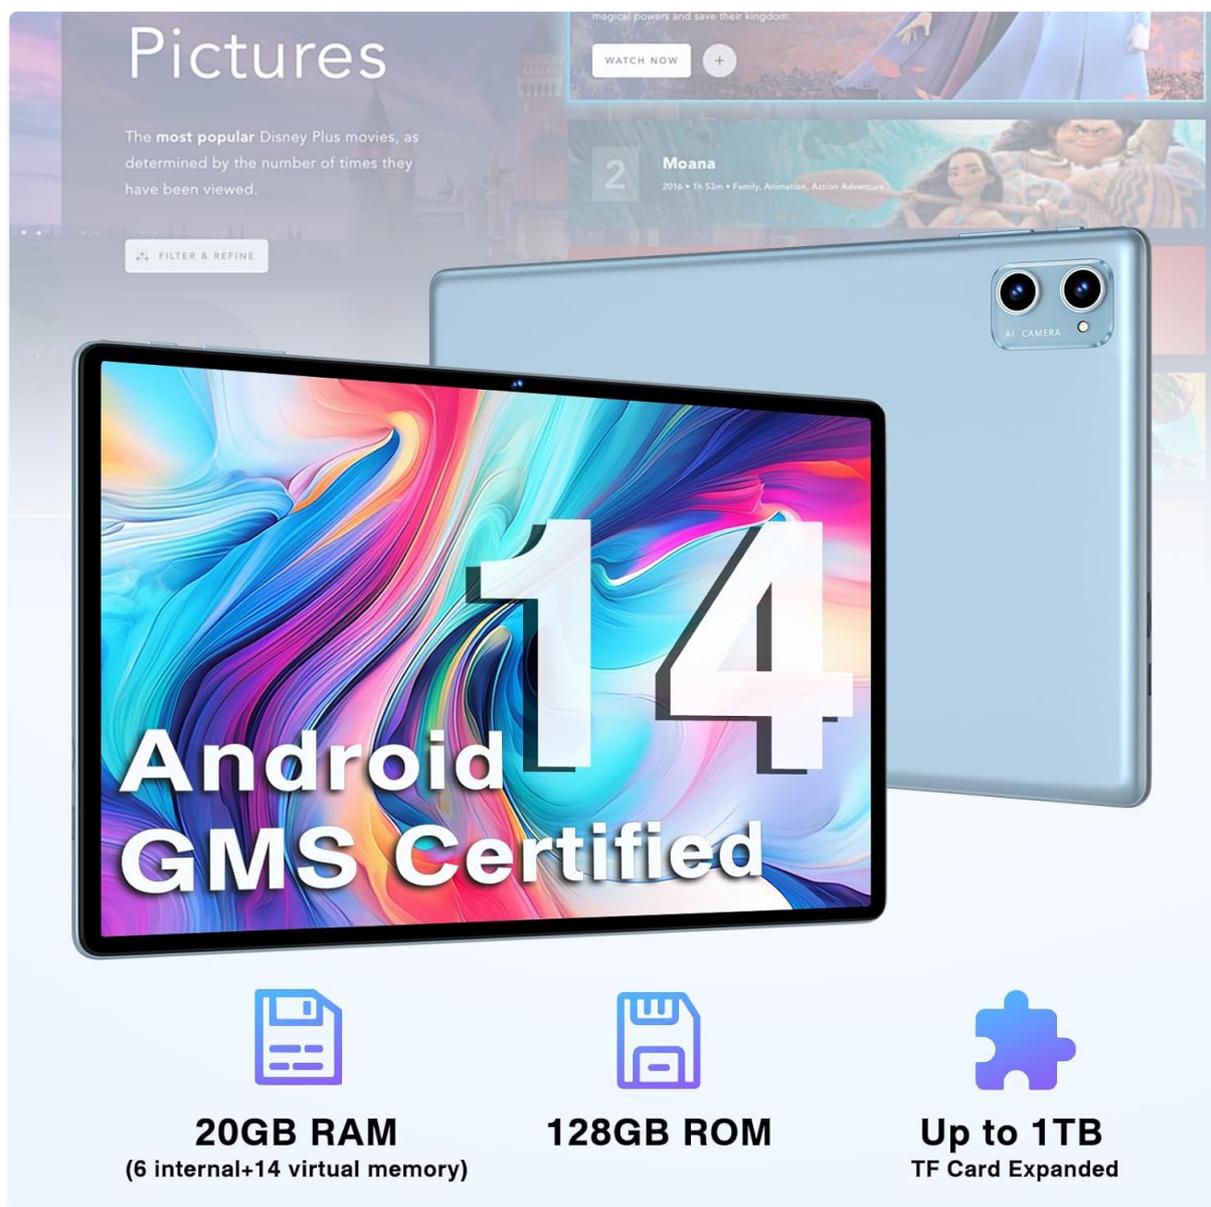


Image 4.1: The DEERTIME E15 Tablet set up with its accompanying keyboard and mouse, ready for use.

## 5. OPERATING YOUR TABLET

This section covers the basic operations and features of your DEERTIME E15 Tablet.

### 5.1 Navigating Android 14

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles (Wi-Fi, Bluetooth, etc.).
- **Multitasking:** Swipe up from the bottom and hold to view recent apps. Tap on an app to switch, or swipe it away to close.

### 5.2 App Management

- **Installing Apps:** Open the Google Play Store app, search for your desired app, and tap "Install".
- **Uninstalling Apps:** Press and hold the app icon on the home screen or app drawer, then drag it to "Uninstall" or select the uninstall option. Alternatively, go to **Settings > Apps > See all apps** select

the app, and tap "Uninstall".

### 5.3 Connectivity

- **Wi-Fi 6:** The tablet supports Wi-Fi 6 for faster and more stable internet connections on both 2.4GHz and 5GHz bands. Access Wi-Fi settings via Quick Settings or **Settings > Network & internet > Internet**.
- **Bluetooth 5.0:** Connect wireless headphones, speakers, or other Bluetooth devices. Enable Bluetooth from Quick Settings or **Settings > Connected devices > Connection preferences > Bluetooth**.

### 5.4 Camera Usage

The tablet features an 8MP rear camera and a 5MP front camera for photos and video calls.

- Open the Camera app from your home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between front and rear cameras using the camera switch icon.
- Select video mode to record videos.

### 5.5 Media Consumption (Widevine L1)

The DEERTIME E15 supports Widevine L1, enabling high-definition streaming from popular services like Netflix, Disney+, and Amazon Prime Video, ensuring a premium viewing experience.

### 5.6 Privacy & Security Features

Android 14 offers enhanced privacy and security. Your tablet includes features such as:

- **Widgets:** Customize your home screen with widgets for quick information access.
- **Kids Space:** A dedicated environment for children with parental controls and curated content.
- **Applique Lock:** Secure individual applications with a password or pattern.
- **Safety & Emergency:** Manage emergency contacts and information.
- **Parent Control:** Set screen time limits, content restrictions, and monitor app usage for children.

# Privacy & Security



Image 5.1: Overview of the privacy and security features available on the DEERTIME E15 Tablet with Android 14.

## 6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your DEERTIME E15 Tablet.

### 6.1 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.
- Ensure no liquid enters the ports or openings.

### 6.2 Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not leave the tablet charging for extended periods after it reaches 100%.
- Use only the provided charger or a certified compatible charger.

### 6.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for updates.

## 6.4 Storage Management

To maintain optimal performance, periodically manage your tablet's storage:

- Delete unnecessary apps and files.
- Clear cache data for apps (**Settings > Apps > See all apps > [App Name] > Storage & cache > Clear cache**).
- Utilize cloud storage services for large files.

## 7. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your DEERTIME E15 Tablet.

### 7.1 Common Issues and Solutions

- **Tablet not turning on:**
  - Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes.
  - Press and hold the Power button for 10-15 seconds to force a restart.
- **Wi-Fi connectivity issues:**
  - Ensure Wi-Fi is enabled in Quick Settings or Settings.
  - Restart your Wi-Fi router.
  - Forget the network (**Settings > Network & internet > Internet > [Your Wi-Fi Network] > Forget**) and reconnect.
  - Ensure you are within range of the Wi-Fi signal.
- **Apps crashing or freezing:**
  - Close the app and reopen it.
  - Clear the app's cache (see Section 6.4).
  - Update the app from the Google Play Store.
  - If the issue persists, uninstall and reinstall the app.
- **Slow performance:**
  - Close unused apps running in the background.
  - Clear cache data regularly.
  - Ensure sufficient free storage space.
  - Restart the tablet periodically.
- **Bluetooth device not connecting:**
  - Ensure the Bluetooth device is in pairing mode.
  - Check if Bluetooth is enabled on the tablet.
  - Forget the device from the tablet's Bluetooth settings and try pairing again.
  - Ensure the device is charged and within range.

### 7.2 Factory Reset

If you experience persistent software issues or wish to erase all data from your tablet, you can perform a factory reset. **Warning: This will erase all data on your tablet, including apps, photos, and settings. Back up important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/pattern/password if prompted.
4. The tablet will restart and begin the reset process. This may take several minutes.

## 8. WARRANTY AND SUPPORT

---

Your DEERTiME E15 Tablet comes with a 2-year warranty, providing peace of mind for your purchase. For any technical assistance, warranty claims, or product-related inquiries, please contact DEERTiME customer support.

### 8.1 Contact Information

- **Email:** DEERTiME-US@HOTMAIL.COM
- Please include your product model (E15) and a detailed description of your issue when contacting support for faster assistance.