

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Homsee](#) /

› [Homsee 63" L-Shaped Electric Standing Desk with Drawers and Shelves Instruction Manual](#)

Homsee B0DB7WL322

Homsee 63" L-Shaped Electric Standing Desk with Drawers and Shelves

Model: B0DB7WL322 | Brand: Homsee

INTRODUCTION

Thank you for choosing the Homsee 63" L-Shaped Electric Standing Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read it thoroughly before use and retain it for future reference.

This versatile L-shaped desk is designed to enhance your home office or workspace with its electric height adjustment, ample storage, and durable construction. The reversible design allows for flexible configuration to suit your needs.

IMPORTANT SAFETY INFORMATION

- Ensure the desk is fully assembled before use.
- Do not exceed the maximum weight limit of **330 lbs (150 kg)** on the desktop.
- Use the height adjustment buttons carefully to avoid collisions with objects or persons.
- Ensure the desk is stable and anchored to the wall if necessary, especially when extended to higher positions.
- Keep children and pets away from the desk during operation.
- Do not sit or stand on the desk.
- Disconnect power before cleaning or maintenance.

KEY FEATURES

- **Reversible L-Shape Design:** Configure the file cabinet and shelves to either the right or left side.
- **Electric Height Adjustment:** Smoothly adjust desk height from 29.5" to 43.3" with 3 programmable preset buttons and a collision-avoiding feature.
- **Spacious Workspace & Storage:** Features a wide desktop, 3 drawers, 2-tier shelves, and 1 compartment behind a door for organized storage.
- **Solid Construction:** Made of engineered MDF with a sleek, water-resistant, anti-scratch finish and an

industrial-grade steel frame.

SETUP AND ASSEMBLY

The Homsee L-Shaped Electric Standing Desk comes with detailed installation instructions and all necessary parts and hardware packed in two boxes. We recommend two people for assembly.

Assembly Overview Video

Your browser does not support the video tag.

This video provides a comprehensive overview of the assembly process for the Homsee Home Office L-Shaped Electric Standing Desk, demonstrating key steps and features.

Detailed Assembly Steps (General)

- Unpack and Identify Parts:** Carefully unpack all components and hardware. Refer to the included parts list to ensure all items are present and undamaged.
- Assemble the Cabinet Base:** Follow the instructions to build the base of the L-shaped cabinet, including the drawer and shelf sections.
- Install Drawer Slides and Hinges:** Attach the drawer slides to the cabinet panels and hinges to the door as per the manual.
- Construct Drawers:** Assemble the drawer boxes and attach the front panels.
- Assemble Desk Frame:** Attach the electric lifting columns to the desktop frame.
- Connect Desk Frame to Cabinet:** Securely attach the adjustable desk frame to the cabinet structure.
- Install Desktop Panels:** Place and secure the desktop panels onto the assembled frame and cabinet.
- Connect Electrical Components:** Connect the motor and control panel cables as instructed.
- Final Adjustments:** Ensure all screws are tightened and the desk is stable.

Visual Guides for Assembly

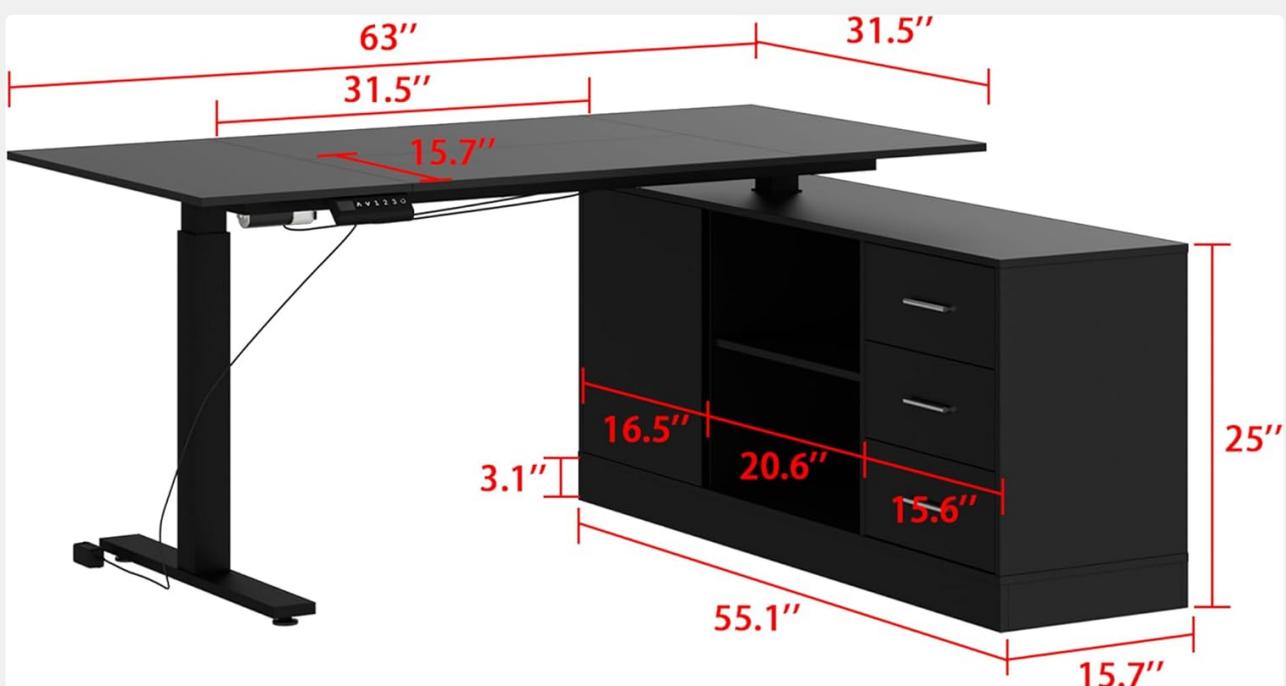


Image: Detailed dimensions of the Homsee L-Shaped Electric Standing Desk, showing overall length, width, and height of both the adjustable and fixed sections.



Image: Close-up view of the electric lifting column and its connection points, illustrating the sturdy frame design.



Image: Detailed view of a cabinet door hinge, showing its robust construction and attachment to the desk's storage unit.

OPERATING INSTRUCTIONS

Electric Height Adjustment

Your Homsee L-Shaped Electric Standing Desk features an intuitive control panel for seamless height adjustments. The desk can be adjusted from 29.5 inches (sitting height) to 43.3 inches (standing height).



Image: Close-up of the desk's control panel, showing the up/down arrows, memory presets (1, 2, 3), and a reset button.



Image: Annotated control panel illustrating the height display, up and down height adjustment buttons, 1-3 gear memory buttons, and the resetting function.

1. **Adjusting Height:** Use the **Up (^)** and **Down (v)** arrow buttons to manually raise or lower the desk to your desired height. The current height will be displayed on the digital screen.
2. **Setting Memory Presets:** To save a preferred height, adjust the desk to the desired level, then press the **M** button followed by one of the numbered preset buttons (**1, 2, or 3**). The height is now saved.
3. **Using Memory Presets:** Press a saved numbered preset button (**1, 2, or 3**) to automatically move the desk to the corresponding saved height.
4. **Reset Function:** If the desk encounters an error or needs to be recalibrated, press and hold the **Reset (circle arrow)** button until the desk moves to its lowest position and resets.

Height Adjustment Demonstration Video

Your browser does not support the video tag.

This video demonstrates the electric height adjustment feature, including setting memory presets and the smooth transition between sitting and standing positions.

Storage Features



Image: A close-up view of the integrated cabinet, showcasing three drawers, two open shelves, and a closed compartment, providing diverse storage options.



Image: Illustrates the adjustable shelf within the cabinet, highlighting its flexibility to accommodate items of various sizes.

The cabinet features three smooth-gliding drawers, two open shelves, and a closed compartment, offering versatile storage for office supplies, files, and personal items. The shelves are adjustable to fit different item heights.

MAINTENANCE

- **Cleaning:** The desk surface is made of engineered MDF with a sleek finish that is water-resistant and anti-scratch. Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Regular Checks:** Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- **Cable Management:** Ensure all cables are neatly organized and not pinched or tangled to prevent damage and ensure smooth operation.

TROUBLESHOOTING

- **Desk Not Moving:** Check if the power cable is securely plugged into both the desk and the wall outlet. Ensure the control panel cable is properly connected. Try the reset function.
- **Uneven Height:** If the desk legs appear uneven, perform a reset by holding the reset button until the desk moves to its lowest position and recalibrates.
- **Error Codes:** If the control panel displays an error code, refer to the full product manual for specific code meanings and solutions.
- **Noise During Operation:** A slight motor sound is normal. Excessive or unusual noise may indicate a loose connection or obstruction. Inspect the lifting mechanism and ensure no objects are interfering.

SPECIFICATIONS

Feature	Detail
Brand	Homsee
Model	B0DB7WL322

Feature	Detail
Shape	L-Shape
Overall Dimensions (L x D x H)	63"L x 55.1"D x 29.5"H-43.3"H
Adjustable Height Range	29.5" to 43.3"
Weight Capacity	330 lbs (150 kg)
Material	Engineered Wood (Desktop), Alloy Steel (Base)
Color	Black
Storage Options	File Cabinet with 3 drawers, 2-tier shelves, 1 enclosed cabinet
Lifting Mechanism	Electric
Number of Height Positions	3 (Programmable Presets)
Assembly Required	Yes (Recommended 2 people)

WARRANTY AND SUPPORT

The Homsee L-Shaped Electric Standing Desk comes with a **Limited Warranty**. For specific details regarding warranty coverage, please refer to the warranty card included with your product or contact Homsee customer service.

If you have any questions, require assistance with assembly, or encounter any issues with your product, please do not hesitate to contact Homsee customer support. We are committed to providing solutions and ensuring your satisfaction.

Contact Information: Please refer to the contact details provided in your product packaging or visit the official Homsee website for support.