

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZZB](#) /

› [ZZB WP-03B Portable Bluetooth Speaker User Manual](#)

ZZB WP-03B

ZZB WP-03B Portable Bluetooth Speaker User Manual

Model: WP-03B | Brand: ZZB

INTRODUCTION

Thank you for choosing the ZZB WP-03B Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read these instructions carefully before use to ensure optimal performance and longevity of your device. Keep this manual for future reference.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel if needed.
- Keep the speaker away from medical devices, as its magnetic field may interfere with their operation.
- Ensure the charging port is dry before connecting the power cable.
- Dispose of the speaker and its battery responsibly according to local regulations.

PACKAGE CONTENTS

Verify that all items are present in your package:

- ZZB WP-03B Portable Bluetooth Speaker
- Power Cable (USB charging cable)
- User Manual (This document)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Image: Front and side view of the ZZB WP-03B speaker, highlighting its compact design and IPX5 waterproof rating.

Speaker Components:

- **Speaker Grille:** Front-facing audio output.
- **Control Panel:** Buttons for power, volume, playback, and mode selection.
- **LED Light Ring:** Illuminates with various color effects.
- **Charging Port:** For connecting the power cable.
- **AUX-in Port:** For wired audio connection.
- **TF Card Slot:** For playing music directly from a memory card.
- **Microphone:** For hands-free calling.
- **Lanyard:** For easy portability.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. A full charge takes approximately 12 hours.

1. Connect the provided power cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will turn off or change color once fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds. You will hear an audible prompt.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds. You will hear an audible prompt.

3. Bluetooth Pairing

Connect your speaker to a Bluetooth-enabled device.



Image: The speaker positioned near a smartphone, symbolizing its wireless connectivity.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will flash).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "ZZB WP-03B" from the list of devices.
4. Once paired, the LED indicator will stop flashing, and you will hear a confirmation sound.

4. True Wireless Stereo (TWS) Pairing

Pair two ZZB WP-03B speakers for an immersive stereo sound experience.

Extraordinary Experience

Wireless Speaker

3D Surrounding



Image: Two ZZB WP-03B speakers demonstrating the True Wireless Stereo (TWS) feature for enhanced audio.

1. Ensure both ZZB WP-03B speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button (or a dedicated TWS button if available, refer to specific button layout).

3. The speakers will search for each other and automatically pair. You will hear a confirmation sound when TWS pairing is successful.
4. Now, connect your device to the primary speaker via Bluetooth as described in "Bluetooth Pairing". Audio will play through both speakers in stereo.

5. AUX-in Connection

For devices without Bluetooth, use the AUX-in port.



Image: The speaker's input ports, including AUX and TF card slots, demonstrating multiple playback options.

1. Connect a 3.5mm audio cable (not included) from your audio source to the speaker's AUX-in port.
2. The speaker will automatically switch to AUX mode.
3. Control playback and volume from your audio source device.

6. TF Card Playback

Play music directly from a TF (MicroSD) card.

1. Insert a TF card with MP3 audio files into the TF card slot.
2. The speaker will automatically detect the card and begin playing music.
3. Use the speaker's control buttons for playback control.

OPERATION

1. Basic Controls

Button/Action	Function
Power Button (Long Press)	Power On/Off
Power Button (Double Press)	Initiate TWS Pairing (Primary Speaker)
"+" Button (Short Press)	Increase Volume
"+" Button (Long Press)	Next Track
"-" Button (Short Press)	Decrease Volume
"-" Button (Long Press)	Previous Track
Play/Pause Button (Short Press)	Play/Pause Music

Button/Action	Function
Play/Pause Button (Long Press)	Activate Voice Assistant (if supported by connected device)
Mode Button (Short Press)	Switch between Bluetooth, AUX, and TF Card modes.

2. LED Light Modes

The speaker features dynamic LED ambient lighting.



Image: Multiple speakers displaying various LED light colors, highlighting the customizable ambient lighting.

- Press the Light button (if available, otherwise refer to the Mode button or a combination) to cycle through different light modes or turn the lights off.
- The lights can synchronize with the music beat for an enhanced audio-visual experience.

3. Hands-free Calling

When connected via Bluetooth to a smartphone, you can use the speaker for hands-free calls.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button.
- **Reject Call:** Long press the Play/Pause button.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker at least once every three months if not in regular use.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect it to a power source and try again.

Problem	Possible Solution
Cannot pair via Bluetooth.	<ul style="list-style-type: none"> Ensure the speaker is in pairing mode (flashing LED). Make sure Bluetooth is enabled on your device. Move the speaker closer to your device. Forget "ZZB WP-03B" from your device's Bluetooth list and try pairing again. Restart both the speaker and your device.
No sound or low volume.	<ul style="list-style-type: none"> Increase the volume on both the speaker and your connected device. Ensure the speaker is correctly paired or connected via AUX/TF card. Check if the audio source is playing.
Sound distortion.	<ul style="list-style-type: none"> Reduce the volume on both the speaker and your connected device. Move the speaker closer to your Bluetooth device to avoid interference. Ensure the audio file quality is good.
TWS pairing fails.	<ul style="list-style-type: none"> Ensure both speakers are ZZB WP-03B models. Make sure both speakers are fully charged and not connected to any other Bluetooth device. Place speakers close to each other during pairing. Try powering both speakers off and on, then re-attempt TWS pairing.
LED lights are not working.	Press the Light button (or relevant control) to cycle through modes or turn them on.

SPECIFICATIONS

Feature	Detail
Model Name	WP-03B
Brand	ZZB
Speaker Type	Portable Speaker
Connectivity Technology	Bluetooth 5.3
Wireless Range	Up to 100 feet (30 meters)
Waterproof Rating	IPX5 (Splash-proof)
Audio Output Mode	Stereo (with TWS)
Speaker Maximum Output Power	10 Watts
Compatible Devices	Smartphone, Tablet, MP3 Player, Desktop, Television, Projector, Laptop
Power Source	Battery Powered (Corded Electric for charging)
Battery Type	1 Lithium Ion battery (included)

Feature	Detail
Charging Time	Approximately 12 hours
Playtime	Up to 12 hours (varies with volume and content)
Product Dimensions	1.6"D x 2.9"W x 3"H (4.06cm D x 7.37cm W x 7.62cm H)
Item Weight	5.9 ounces (167 grams)
Included Components	Power Cable
Control Method	Buttons, Voice (via connected device's assistant)
Additional Features	LED Ambient Lights, TWS Function, AUX-in, TF Card Support, Built-in Microphone

WARRANTY AND SUPPORT

The ZZB WP-03B Portable Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package or visit the official ZZB website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact ZZB customer service through the contact information provided on the official website or your purchase platform.

Website: www.example.com/zzb-support (Placeholder link, please refer to actual product documentation for correct URL)

© 2025 ZZB. All rights reserved.

Related Documents - WP-03B

	<p>WP-03B Wireless Speaker User Manual and Features</p> <p>Detailed operating instructions for the WP-03B Wireless Speaker, covering button functions, mode switching, TWS pairing, volume control, and FCC compliance information.</p>
	<p>ENLIGHTEN™ Spectroscopy Software Operator's Manual</p> <p>Comprehensive operator's manual for Wasatch Photonics ENLIGHTEN™ spectroscopy software, covering installation, hardware compatibility, operation, troubleshooting, and advanced features for collecting and analyzing spectral data.</p>
	<p>Waterpik Waterflosser WP-660 Series Quick Start Guide</p> <p>A quick start guide for the Waterpik Waterflosser WP-660, WP-662, WP-663, WP-670, WP-672, WP-673, WP-674, WP-675, and WP-676 models. Learn how to prepare the unit and use it for water flossing.</p>

	<p>Waterpik Waterflosser WP-660 Series Quick Start Guide</p> <p>Concise quick start guide for the Waterpik Waterflosser WP-660 series, covering unit preparation and water flossing instructions. Includes model numbers WP-660, WP-662, WP-663, WP-670, WP-672, WP-673, WP-674, WP-675, WP-676.</p>
	<p>Waterpik Waterflosser WP-440 Series Quick Start Guide</p> <p>A quick start guide for the Waterpik Waterflosser WP-440 series, covering unit preparation and water flossing instructions. Includes model numbers WP-440, 450, 455, 460, 462, 463, 464, 465, and 466.</p>
	<p>Waterpik Waterflosser Quick Start Guide WP-660-676</p> <p>Concise guide to setting up and using your Waterpik Waterflosser, covering unit preparation and water flossing techniques for models WP-660 through WP-676.</p>