

## UX-V3, UX-V5, UX-V30REE, RM-RXUV9RMD

# Generic Replacement Remote Control Instruction Manual

Compatible with JVC UX-V3, UX-V5, UX-V30REE, RM-RXUV9RMD Micro Component Systems

## 1. INTRODUCTION

---

This manual provides instructions for the Generic replacement remote control designed for use with various JVC Micro Component Systems. This remote control is pre-programmed and requires no additional setup or coding. Simply insert batteries, and it is ready for use.



*Image 1: Front view of the Generic Replacement Remote Control. The remote is silver-grey, cylindrical in shape, with a single oval-shaped button or indicator in the middle.*

## 2. PACKAGE CONTENTS

---

- 1 x Generic Replacement Remote Control

**Note:** Batteries and a detailed instruction booklet are not included in the package. Please purchase 2 AAA batteries separately.

## 3. SETUP: BATTERY INSTALLATION

---

To begin using your remote control, you must first install batteries. Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to remove it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



*Image 2: View of the remote control with the battery compartment open, showing slots for two AAA batteries. The battery cover is detached and visible next to the remote.*

## 4. OPERATING INSTRUCTIONS

---

This remote control is designed for immediate use with compatible JVC Micro Component Systems without any programming. After installing the batteries:

- Point the remote control directly at your JVC Micro Component System.
- Press the desired function button (e.g., Power, Volume Up/Down, Play, Stop) to control your device.

The remote operates using infrared (IR) technology, so ensure there are no obstructions between the remote and the component system's IR receiver.

## 5. MAINTENANCE

---

- **Battery Replacement:** Replace batteries when the remote's performance diminishes or it stops responding. Always replace both batteries at the same time with new ones.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using abrasive cleaners or solvents, which can damage the surface.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## 6. TROUBLESHOOTING

---

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the JVC component system.
- Make sure you are within the effective operating range (up to 8 meters).

- **Intermittent operation:**

- This often indicates low battery power. Replace the batteries.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Generic
Special Feature	No Programming Required
Compatible Devices	JVC UX-V3, UX-V5, UX-V30REE, RM-RXUV9RMD Micro Component Systems
Max Number of Supported Devices	1
Connectivity Technology	Infrared (IR)
Maximum Range	8 Meters
Power Source	2 x AAA Batteries (not included)
Color	As shown (typically silver-grey)

## 8. WARRANTY INFORMATION

Specific warranty details for this Generic replacement remote control are not provided in the product information. Please refer to your purchase receipt or contact the seller directly for any warranty-related inquiries.

## 9. CUSTOMER SUPPORT

Contact information for customer support is not available in the provided product details. For assistance, please reach out to the retailer or seller from whom you purchased this remote control.