

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Voice Remote Control Instruction Manual for CHIQ TVs

## ALLIMITY MME-CH230419B1-NP

# ALLIMITY Voice Remote Control Instruction Manual

Model: MME-CH230419B1-NP

## INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY Voice Remote Control, designed for use with various CHIQ TV models. This remote offers full functionality without the need for complex programming or installation. Please read this guide carefully to ensure proper use and to maximize your viewing experience.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.





*Figure 1: Back view of the remote control, indicating the battery compartment.*

## **2. Initial Use**

This ALLIMITY Voice Remote Control is designed for immediate use with compatible CHIQ TV models without any

programming or pairing required. Simply install the batteries, and the remote is ready to operate your television.

## OPERATING INSTRUCTIONS

The remote control features an ergonomic design for comfortable grip and provides stable performance with a long transmission distance. Below is a guide to the main functions of the buttons.






Figure 2: Front and side view of the remote control, showing its layout and dimensions.

## Button Functions

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **SUBT:** Access subtitle options.
- **EXIT:** Exit the current menu or application.
- **Menu Button (≡):** Access the main menu or settings.
- **Settings Button (⚙):** Open TV settings.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **Back Button (←):** Go back to the previous screen or menu.
- **Home Button (△):** Return to the TV's home screen.
- **Voice Control Button (🗨):** Activate voice assistant for commands and search.
- **Volume Up/Down (+/-):** Adjust the TV volume.
- **Mute Button (⏸):** Mute or unmute the TV sound.
- **Channel Up/Down (P↑/P↓):** Change TV channels.
- **Quick Access Buttons (Netflix, YouTube, Prime Video, Google Play, USB):** Direct access to popular streaming services and USB media.
- **INFO:** Display information about the current program or input.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies by application or TV menu.

## Voice Control Functionality

To use the voice control feature, press and hold the Voice Control button (🗨) and speak clearly into the remote's microphone. Release the button when you are finished speaking. This feature allows for hands-free navigation, search, and command execution on your compatible CHIQ TV.

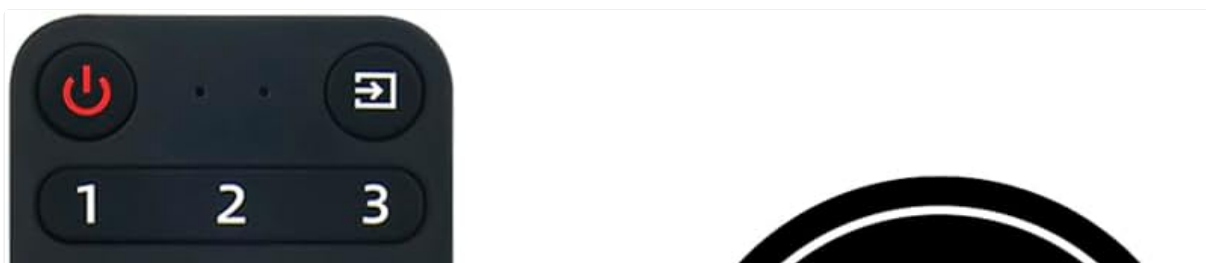

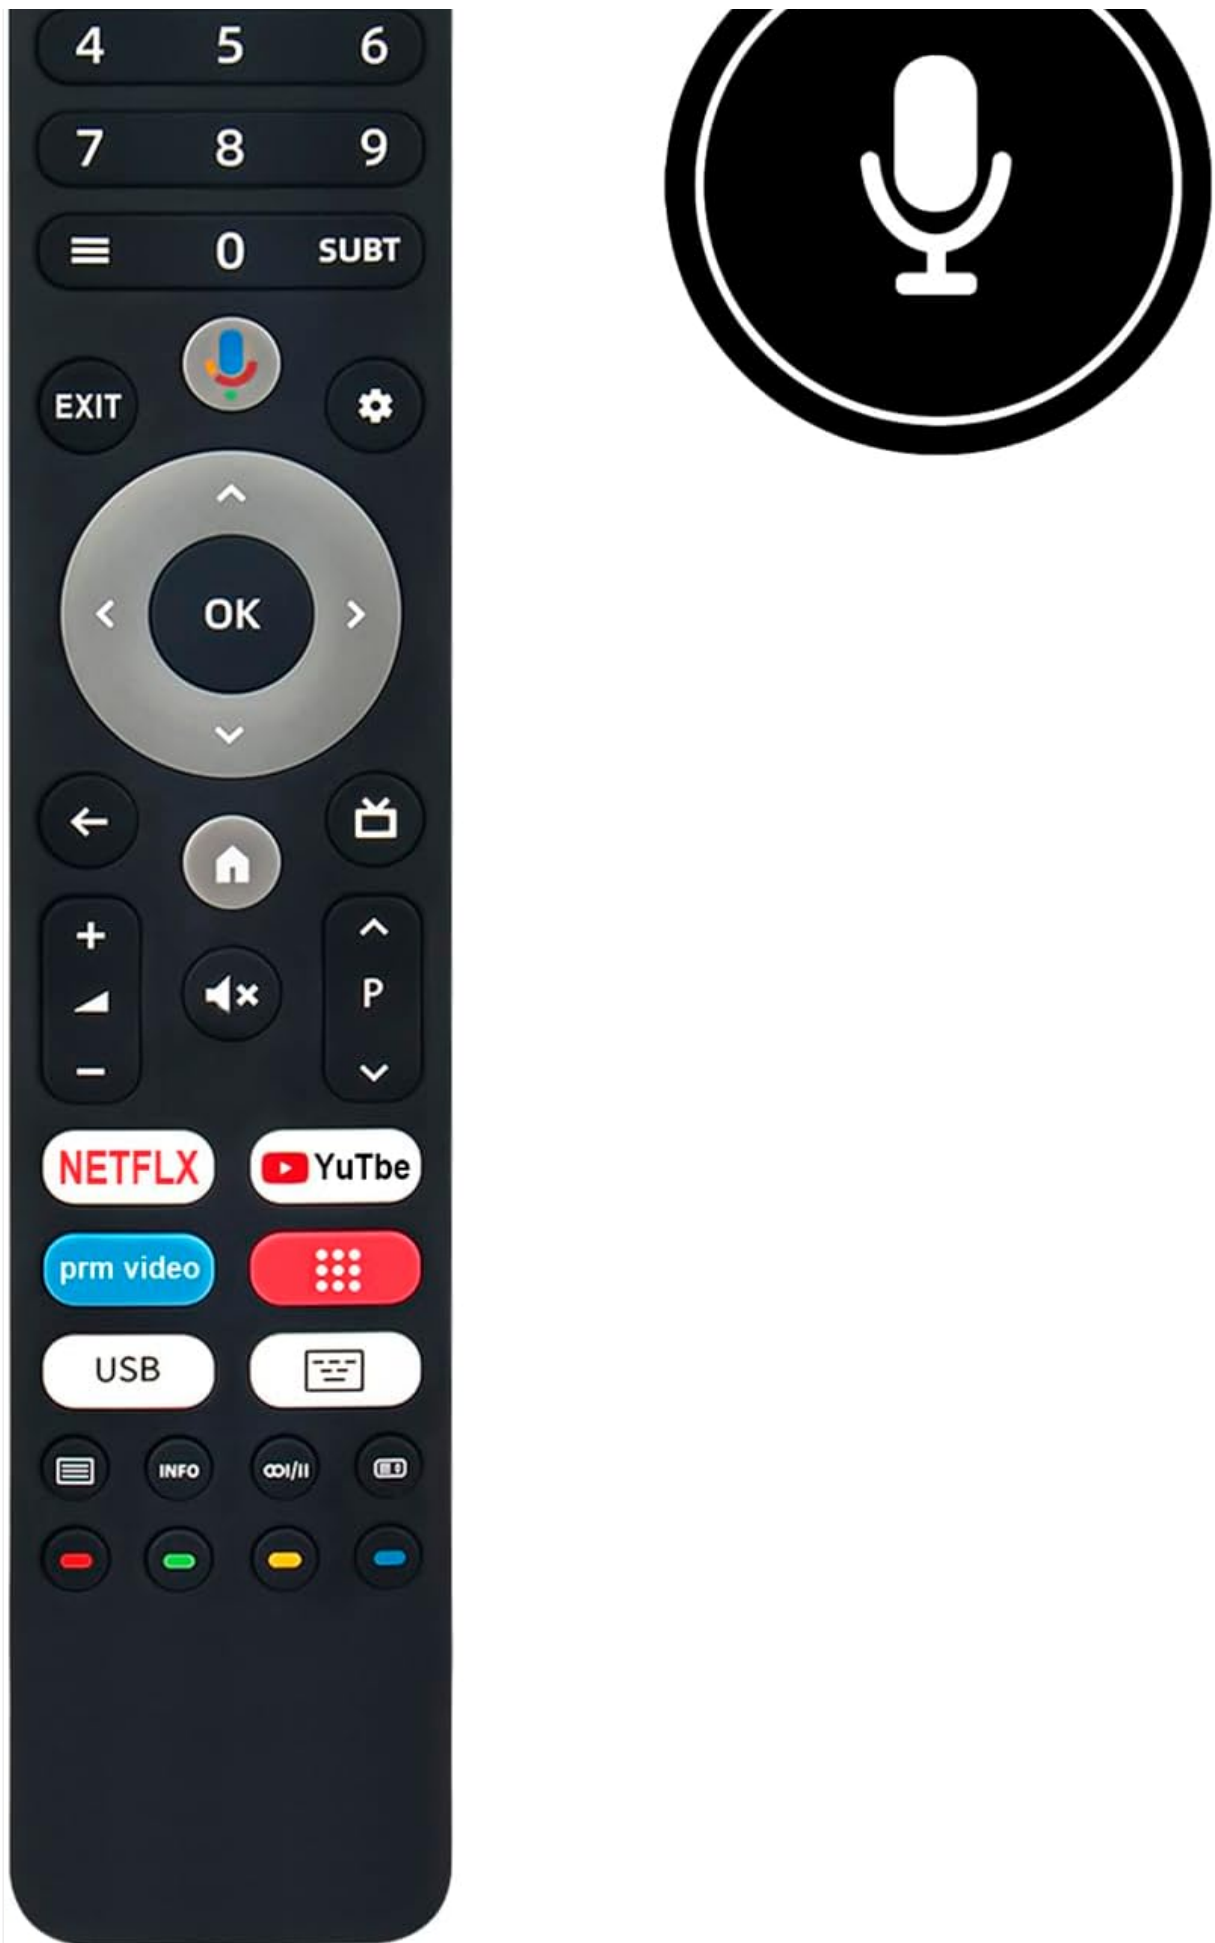


Figure 3: Remote control with the voice control microphone icon highlighted.

## MAINTENANCE

### Cleaning the Remote

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

If the remote control's performance degrades or it stops responding, replace the batteries. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

### Storage

When not in use for extended periods, it is recommended to remove the batteries from the remote control to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

- **Remote not responding:**
  - Ensure the batteries are correctly installed with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote control and the TV's infrared receiver.
  - Confirm that the remote control is pointed directly at the TV.
- **Voice control not working:**
  - Ensure your CHIQ TV model supports voice control and that the feature is enabled in the TV's settings.
  - Press and hold the Voice Control button while speaking.
  - Speak clearly and at a normal volume.
  - Check for any software updates for your TV, as these can sometimes resolve voice control issues.
- **Specific buttons not working:**
  - Clean the remote control, especially around the non-functional buttons, to remove any dirt or debris that might be obstructing them.
  - If only certain buttons are unresponsive, it might indicate a specific internal issue. Consider replacing the remote if other troubleshooting steps fail.

## SPECIFICATIONS

|                    |                                           |
|--------------------|-------------------------------------------|
| Model Number       | MME-CH230419B1-NP                         |
| Brand              | ALLIMITY                                  |
| Product Dimensions | 6.69 x 1.97 x 0.39 inches (17 x 5 x 1 cm) |
| Item Weight        | 2.08 ounces (59 grams)                    |
| Number of Buttons  | 25                                        |

|                           |                                                                                                                                                                                                                                          |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Special Feature</b>    | Ergonomic Design, Voice Control                                                                                                                                                                                                          |
| <b>Compatible Devices</b> | CHIQ TV models: CH230419B1, GTR.EU-CH.10.A-BBT.TL8275, L32G7V, U75QF8TG, U85F8TG, U85QF8TG, U98F8TG, U98QF8TG, L32H7G, L32H8CG, L40G7V, L400H7G, L40QG7V, L40QH7G, U43H7C, U43QM8E, U43QM8G, U50QM8E, U50QM8G, U55QM8E, U55QM8G, U75F8TG |
| <b>Power Source</b>       | 2 x AAA Batteries (not included)                                                                                                                                                                                                         |