

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Homtronics](#) /
- › [Homtronics Electric Spin Scrubber User Manual](#)

Homtronics BHHS3

Homtronics Electric Spin Scrubber User Manual

Model: BHHS3

1. INTRODUCTION

Thank you for choosing the Homtronics Electric Spin Scrubber. This cordless, handheld cleaning tool is designed to simplify your cleaning tasks with its powerful motor, multiple speed settings, and versatile attachments. It is ideal for cleaning various surfaces including floors, glass, grout, metal, plastic, porcelain, stone, tile, vinyl, and wood. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1.1: Homtronics Electric Spin Scrubber with included attachments.

2. PRODUCT FEATURES & COMPONENTS

The Homtronics Electric Spin Scrubber comes equipped with several features and accessories to enhance your cleaning experience:

- **3 Speed Modes:** Adjust the rotational speed for different cleaning needs.
- **2600mAh Large Capacity Battery:** Provides extended working time.
- **Battery Level Display:** Digital display shows current battery percentage.
- **IPX8 Waterproof Rating:** Designed for safe use in wet environments.
- **Versatile Attachments:** Includes 7 replacement heads for various cleaning tasks.



Image 2.1: All components included with the Homtronics Electric Spin Scrubber.

Package Contents:

- Electric Spin Scrubber Unit
- USB-C Charging Cable
- Crevice Brush
- Flat Brush
- Arc Brush
- Cleaning Brush Head (base for pads)
- Large Sponge Brush
- Cloth Bag Sponge
- Towel Cloth
- Cleaning Cloth
- Mesh Storage Bag
- User Manual

3. SETUP

3.1 Charging the Unit

Before first use, fully charge the electric spin scrubber. Locate the USB-C charging port, typically found under a snug, waterproof cover at the base of the handle. Connect the provided USB-C cable to the scrubber and a suitable USB power adapter (not included). The digital display will indicate the charging status.

3.2 Attaching Brush Heads/Pads

The various attachments snap onto the hex head of the scrubber very firmly. To attach, align the attachment with the hex head and push until it clicks into place. To remove, apply firm but gentle pressure to pull the attachment straight off. Ensure the unit is turned off before attaching or removing any accessories.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Speed Selection

Press the ON/OFF button once to power on the scrubber. The digital display will show '1' indicating the first speed mode, followed by the current battery level after 2-3 seconds. Press the button again to cycle through the speed modes:

- **1st Mode:** Rotational Speed: 350 RPM, Working Time: 120 minutes (on full charge)
- **2nd Mode:** Rotational Speed: 400 RPM, Working Time: 108 minutes (on full charge)
- **3rd Mode:** Rotational Speed: 450 RPM, Working Time: 90 minutes (on full charge)

To turn off the unit, continue pressing the button until the display turns off, or hold the button for a few seconds.



Image 4.1: Speed modes and battery life indication.

4.2 Recommended Uses for Attachments

Select the appropriate attachment for the cleaning task. Apply a suitable cleaning solution to the surface or the brush head before operating.

- **Crevice Brush:** Ideal for narrow gaps, corners, and hard-to-reach areas like ceramic tile gaps, faucet gaps, windowsills, shower heads, baseboards, and shoe soles.

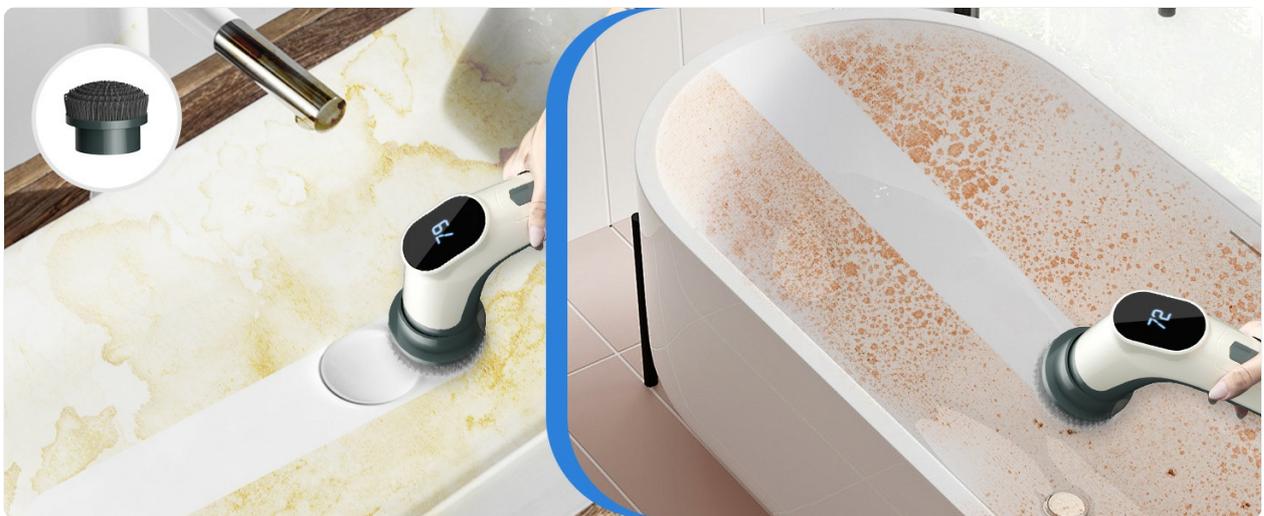


Image 4.2: Cleaning with the Crevice Brush.

- **Flat Brush:** Suitable for larger flat surfaces such as sinks, bathtubs, and countertops.



Image 4.3: Cleaning with the Flat Brush.

- **Arc Brush:** Designed for curved surfaces and general scrubbing of tiles and stove tops.



Image 4.4: Cleaning with the Arc Brush.

- **Sponge/Scouring Pads:** Attach to the cleaning brush head for gentle scrubbing of dishes or more abrasive cleaning of surfaces like oven interiors.



Image 4.5: Cleaning with Sponge and Scouring Pads.

- **Cloth/Towel Pads:** Use for polishing or gentle cleaning of delicate surfaces such as car exteriors or glass.



Image 4.6: Cleaning with Cloth and Towel Pads.

Important Note: When operating, the spinning action of the brush or pad may cause the tool to pull in a certain direction. Maintain a firm grip and control the unit to ensure effective and safe cleaning.

5. MAINTENANCE AND CARE

- **Cleaning the Unit:** After each use, wipe down the main unit with a damp cloth. Due to its IPX8 waterproof rating, the unit can be rinsed under water, but ensure the charging port cover is securely closed.
- **Cleaning Attachments:** Rinse brush heads and pads thoroughly with water after use. For stubborn residue, use a mild soap. Allow all attachments to air dry completely before storing.
- **Storage:** Store the scrubber and its attachments in a clean, dry place, preferably in the provided mesh bag, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the unit frequently. Charge the unit regularly, even if not in use for extended periods.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|------------------------------------|--|
| Scrubber does not turn on. | Battery is depleted. | Charge the unit fully using the provided USB-C cable. Ensure the charging cable and adapter are functioning correctly. |
| Motor slows down significantly under light pressure. | Low battery or excessive pressure. | Ensure the unit is fully charged. Reduce the amount of pressure applied; the scrubber is designed to do the work with minimal force. |
| Attachments are difficult to remove. | Secure fit design. | The attachments are designed to fit firmly. Apply a steady, firm pull straight off the hex head. Do not twist forcefully. |
| Unit makes unusual noises or leaks. | Internal malfunction. | Discontinue use immediately. Contact Homtronics customer support for assistance. Do not attempt to repair the unit yourself. |

7. SPECIFICATIONS

| Feature | Specification |
|---------|---------------|
|---------|---------------|

| Feature | Specification |
|------------------------|--|
| Brand | Homtronics |
| Model Number | BHHS3 |
| Color | Black |
| Handle Material | Plastic |
| Battery Capacity | 2600mAh |
| Waterproof Rating | IPX8 |
| Product Dimensions | 8.9 x 4.33 x 5.75 inches |
| Item Weight | 1.76 pounds |
| Surface Recommendation | Floor, Glass, Grout, Metal, Plastic, Porcelain, Stone, Tile, Vinyl, Wood |
| Included Components | Electric Scrubber, USB-C Cable, Various Attachments, Mesh Bag, Manual |

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the product packaging or contact Homtronics customer service directly. You can also visit the official Homtronics store on Amazon for more details and contact options:

[Visit the Homtronics Store on Amazon](#)

© 2025 Homtronics. All rights reserved.

Related Documents - BHHS3



[Homtronics PROBE PLUS Smart Wireless Thermometer User Manual](#)

User manual for the Homtronics PROBE PLUS Smart Wireless Thermometer, detailing setup, operation, specifications, and warnings for cooking and grilling.