



[Manuals.plus](#) /

> [CINCOM](#) /

> CINCOM Handheld Controller CM-010A Instruction Manual

CINCOM CM-010A

CINCOM Handheld Controller CM-010A Instruction Manual

Model: CM-010A

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your CINCOM Handheld Controller, model CM-010A. Please read this manual thoroughly before operating the device and retain it for future reference. This controller is designed for use with compatible CINCOM massagers.

PRODUCT OVERVIEW

The CINCOM Handheld Controller CM-010A is an intuitive device designed to manage the functions of your CINCOM massager. It features a power button, intensity control, and mode selection for a customized massage experience.

Handheld Controller



Power Button



Intensity control button

3 Intensity levels



Mode Button

2 Modes

Image 1: Front view of the CINCOM Handheld Controller. This image highlights the main control buttons: the circular Power Button at the top, the triangular Intensity Control Button below it (with 3 intensity levels indicated), and the 'M' Mode Button at the bottom (with 2 modes indicated). The controller is shown held in a hand, illustrating its ergonomic design.



Image 2: Side view of the CINCOM Handheld Controller displaying key product specifications. Details include Product Name: CM-010A Handheld Controller, Brand: CINCOM, Input Voltage: AC100-240V 50/60Hz, Output Voltage: DC12V 1.0A, and Rated Power: 12W. This provides essential electrical and identification information for the device.

SETUP

- 1. Unpack the Controller:** Carefully remove the CINCOM Handheld Controller from its packaging. Inspect for any signs of damage.
- 2. Connect to Massager:** Locate the connection port on your compatible CINCOM massager. Insert the connector cable from the handheld controller firmly into this port. Ensure a secure connection.
- 3. Power Connection:** Connect the power adapter (if separate) to the controller and then plug the adapter into a standard electrical outlet (AC100-240V 50/60Hz).

4. **Initial Power On:** Press the Power Button on the controller to turn on the device. The indicator lights should illuminate.

Handheld Controller For Your CINCOM Leg Massager



Image 3: This image demonstrates the CINCOM Handheld Controller in use with a CINCOM leg massager. It shows a person comfortably seated, holding the controller, with the massager cuffs applied to their legs. This illustrates the typical setup and application of the controller with its intended device.

OPERATING INSTRUCTIONS

Follow these steps to operate your CINCOM Handheld Controller:

1. **Power On/Off:** Press the **Power Button** (circular button at the top) to turn the massager on or off.
2. **Select Mode:** Press the **Mode Button** (labeled 'M' or with numbers 1 and 2) to cycle through the available massage modes. The controller offers 2 distinct modes.

3. **Adjust Intensity:** Press the **Intensity Control Button** (triangular button) to adjust the massage intensity. There are 3 intensity levels available. Pressing the button will cycle through these levels.
4. **Session Duration:** The massager typically operates for a preset duration. Refer to your specific massager's manual for details on session length.
5. **After Use:** Once your session is complete, press the Power Button to turn off the massager. Disconnect the power adapter from the outlet.

MAINTENANCE

- **Cleaning:** Disconnect the controller from the power source and massager before cleaning. Wipe the surface of the controller with a soft, dry cloth. Do not use abrasive cleaners or immerse the controller in water.
- **Storage:** Store the controller in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it away from children and pets.
- **Cable Care:** Avoid bending or twisting the connection cable excessively. Do not pull the cable to disconnect; always grasp the plug.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not power on.	<ul style="list-style-type: none"> • Not properly connected to power. • Power outlet issue. • Controller or cable damage. 	<ul style="list-style-type: none"> • Ensure power adapter is securely plugged into the controller and wall outlet. • Test the outlet with another device. • Contact customer support if damage is suspected.
Massager not responding to controller.	<ul style="list-style-type: none"> • Loose connection between controller and massager. • Incompatible massager. 	<ul style="list-style-type: none"> • Check that the controller cable is firmly connected to the massager. • Verify that your massager model is compatible with the CM-010A controller.
Intensity or mode buttons not working.	<ul style="list-style-type: none"> • Controller malfunction. 	<ul style="list-style-type: none"> • Try restarting the controller by powering it off and on. • If the issue persists, contact customer support.

SPECIFICATIONS

Product Name	CM-010A Handheld Controller
Brand	CINCOM
Model Number	CM-010A
Input Voltage	AC100-240V 50/60Hz
Output Voltage	DC12V 1.0A

Rated Power	12W
Product Dimensions	2.68 x 1.9 x 8.01 inches
Item Weight	11.3 ounces
Special Feature	Remote Control
Color	Grey
Max Number of Supported Devices	1
Compatible Devices	Massager

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your primary CINCOM massager unit or visit the official CINCOM website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: CINCOM

Date First Available: July 26, 2024