

MU MU-037

MU Shoe Cabinet with 2 Flip Drawers & Open Storage Space

MODEL: MU-037 | BRAND: MU

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your MU Shoe Cabinet. Designed to maximize shoe storage with two flip drawers, open storage, and integrated LED lighting, this cabinet offers a stylish and functional solution for your entryway. Please read this manual thoroughly before beginning assembly or operation to ensure safe and proper use.



Image: The MU Shoe Cabinet, white with a brown top, featuring two flip-down drawers and an open top compartment with illuminated LED lighting, positioned in an entryway.

Product Features


- **Large Capacity Storage:** Features two flip drawers, each with three tiers, capable of holding up to 24 pairs of shoes (depending on size). A spacious top surface and open storage area provide additional space for accessories, keys, and wallets.
- **Adjustable & Removable Panels:** Includes 8 adjustable panels for versatile storage configurations, accommodating various shoe sizes. Two removable dividers allow for storage of high heels or high boots.
- **Integrated LED Light Strips:** Equipped with RGB LED light strips to add ambiance and color to your entryway. The lights can be adjusted to 7 different color effects using the included remote control.
- **High-Quality Construction:** Crafted from thickened MDF for enhanced durability and longevity. Wooden legs with foot pads protect floors, and an anti-tipping device ensures stability and safety.
- **Oversized Design:** Measuring 47 x 31.5 x 12.5 inches, providing ample space for family shoe storage.

7 Colors Lights

Controlled by Remote Control



Image: The MU Shoe Cabinet showcasing its LED light feature, with examples of different colors (red, green, blue, purple, yellow, white) illuminating the open top compartment.

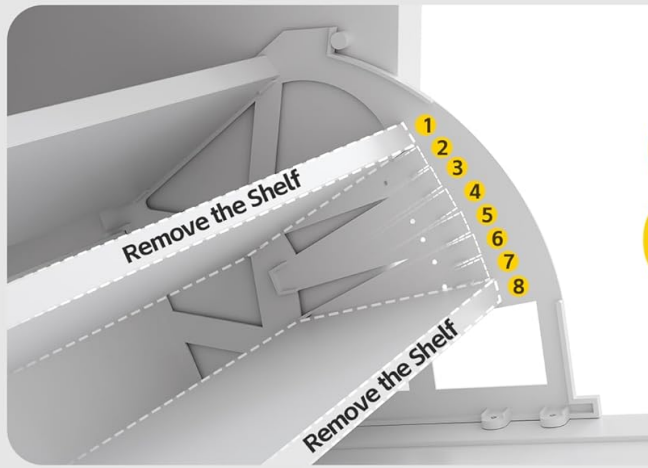

8 - Position Adjustable




2 Removable Shelf

Image: A diagram illustrating the 8-position adjustable shelves and the two removable shelves within the flip drawers, demonstrating how to accommodate different shoe types like high heels and boots.



Black Metal Handles

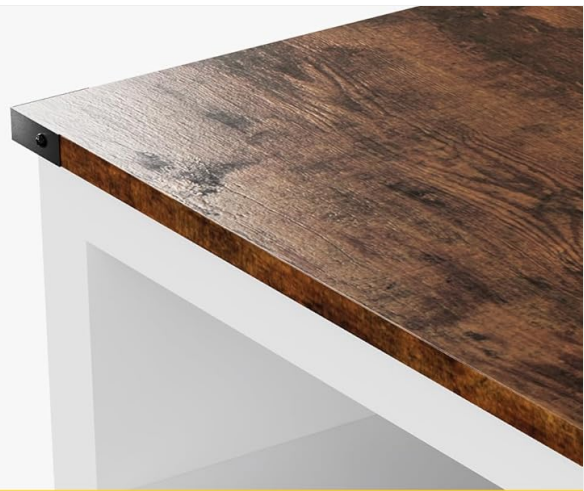

Farmhouse Decoration



Anti-slip Foot Pads



Large Storage Space

Image: Detailed views of the MU Shoe Cabinet, highlighting its black metal handles, the rustic farmhouse-style top, anti-slip foot pads for floor protection, and the illuminated open storage area.

Safety Information

Important Safety Precautions:

- Ensure the cabinet is securely fastened to the wall using the provided anti-tipping device. This is crucial for stability and to prevent accidental tipping, especially in households with children or pets.
- Exercise caution when lifting the cabinet during assembly, as it weighs approximately 68 pounds. It is recommended to have at least two people for lifting and moving the unit.
- Keep all small parts and hardware out of reach of children during assembly to prevent choking hazards.

Setup and Assembly

The MU Shoe Cabinet is designed for easy assembly. All necessary hardware and detailed instructions are included. Parts are pre-labeled to simplify the process.

1. Unpack all components and verify against the parts list provided in the assembly instructions.

2. Follow the step-by-step diagrams and written instructions carefully.
3. Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the material.
4. Install the anti-tipping device as instructed to secure the cabinet to a wall.

Note: If you encounter any difficulties during assembly, please refer to the troubleshooting section or contact customer support.

Operating Instructions

Using the Flip Drawers:

- To open a drawer, gently pull the black metal handle outwards. The drawer will tilt forward, revealing the shoe compartments.
- To close, push the drawer back into the cabinet until it is flush with the front.



Image: The MU Shoe Cabinet with both flip drawers open, showcasing various types of shoes neatly stored within its compartments.

Adjusting Shelves:

- The internal panels within each flip drawer can be adjusted to 8 different positions to accommodate various shoe heights.
- To adjust, carefully lift the panel and reposition it into the desired slot.
- For taller items like high heels or boots, the two main dividers within each flip drawer can be completely removed. Simply lift them out of their slots.

LED Light Operation:

- The RGB LED light strips are located in the open storage space at the top of the cabinet.
- Use the provided remote control to turn the lights on/off, change colors (7 different effects available), and adjust brightness.

Maintenance

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish.
- **Dusting:** Regularly dust the cabinet to maintain its appearance.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **LED Lights:** If the LED lights stop working, check the power connection and the remote control battery.

Troubleshooting

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Not properly secured to the wall; uneven floor; loose connections.	Ensure the anti-tipping device is correctly installed and secured to a wall stud. Check and tighten all assembly screws. Move to a level surface if possible.
Flip drawers do not open/close smoothly or shoes fall out.	Internal panels incorrectly positioned; drawer mechanism obstruction; overfilling.	Verify that internal panels are correctly seated in their slots. Do not overload drawers. Ensure no shoes are obstructing the closing mechanism. Check if the white bracket mechanism is securely attached.
LED lights are not working or flickering.	Power connection issue; remote control battery low/dead; LED strip detached.	Check that the power adapter is securely plugged into both the cabinet and a working outlet. Replace the remote control battery. Re-attach the LED strip if it has come loose.

Specifications

Brand:	MU
Model Number:	MU-037
Product Dimensions (D x W x H):	12.5" x 31.5" x 47"
Item Weight:	68 Pounds
Material:	Thickened MDF (Engineered Wood)

Color:	White
Mounting Type:	Floor Mount (with anti-tipping device)
Special Features:	Adjustable Shelves, LED Lighting, Removable Dividers
Assembly Required:	Yes

PRODUCT SIZE



Image: A detailed diagram illustrating the dimensions of the MU Shoe Cabinet, including its height, width, and depth, as well as internal measurements for shoe storage.

Warranty and Support

MU is committed to providing high-quality home furnishings and ensuring customer satisfaction. If you encounter any issues with your shoe cabinet, our professional support team is ready to assist you.

- **Returns:** This product is eligible for 30-day easy returns. Please refer to your purchase platform's return policy for detailed instructions.
- **Customer Service:** For technical assistance, missing parts, or any other inquiries, please contact MU customer support through the platform where you purchased the product.

