

HOPPUP PREDATORXO7

HOPPUP Predator Xo7 Gaming Earbuds User Manual

Model: PREDATORXO7

1. INTRODUCTION

Thank you for choosing the HOPPUP Predator Xo7 Gaming Earbuds. This manual provides essential information for setting up, operating, and maintaining your new earbuds. Please read it carefully before use to ensure optimal performance and longevity of your device.

2. WHAT'S IN THE BOX

Verify that all items are present in your package:

- HOPPUP Predator Xo7 Gaming Earbuds (Left and Right)
- Charging Case
- Type-C USB Charging Cable
- Ear Cushions (various sizes)
- Eartips (various sizes)
- User Manual (this document)
- Warranty Card

3. PRODUCT OVERVIEW

The HOPPUP Predator Xo7 earbuds are designed for gaming and entertainment, featuring low latency, dynamic drivers, and environmental noise cancellation.



Image: Front view of the HOPPUP Predator X07 Gaming Earbuds and their charging case.



Image: Side view of the HOPPUP Predator X07 Gaming Earbuds and their charging case, highlighting the design.

Key Features:

- **13mm Dynamic Drivers:** For enhanced audio output.
- **Quad Mic ENC (Hush Mode):** Environmental Noise Cancellation for clear calls.
- **35ms Low Latency (Rage Mode):** Optimized for gaming to minimize audio delay.
- **Bluetooth 5.4 (Active Engage):** Stable and efficient wireless connectivity.
- **Up to 70 Hours Playtime:** Extended battery life with the charging case.
- **Rapid Charge:** 10 minutes of charging provides up to 120 minutes of playtime.
- **Touch Control:** Intuitive control over music, calls, and modes.
- **Water Resistant:** IPX4 rating for protection against splashes.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Connect the Type-C USB cable to the charging port on the case and to a power source.
2. The indicator lights on the case will show charging status.
3. Place the earbuds into the charging case. Ensure they are correctly seated to initiate charging.
4. A full charge typically takes approximately 2 hours.



Image: The HOPPUP Predator X07 charging case connected via a Type-C cable, illustrating the rapid charge feature.

4.2 Pairing with a Device (Active Engage)

The earbuds feature Active Engage technology for quick pairing.

1. Open the charging case lid. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for available Bluetooth devices and select "HOPPUP Predator X07" from the list.

- 4. Once connected, you will hear an audio prompt, and the indicator lights on the earbuds will change.
- 5. The earbuds will automatically reconnect to the last paired device when removed from the case and within range.



Image: The HOPPUP Predator X07 earbuds and case illustrating the 'Active Engage' feature with Bluetooth 5.4 and Hall Switch technology for instant connection.

5. OPERATING INSTRUCTIONS

5.1 Touch Controls

The earbuds feature touch-sensitive areas for control. Specific functions may vary slightly based on your device and application.

Action	Function
Single Tap (Left/Right Earbud)	Play/Pause Music, Answer/End Call

Action	Function
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Left/Right Earbud)	Activate Voice Assistant
Long Press (Left/Right Earbud, 2 seconds)	Reject Call
Long Press (Left/Right Earbud, 3 seconds)	Toggle Gaming Mode (Rage Mode) / Normal Mode

5.2 Gaming Mode (Rage Mode)

Activate Rage Mode for a low-latency gaming experience (35ms). This mode minimizes audio delay, providing synchronized sound for competitive gaming.

- To activate: Long press either earbud for 3 seconds. You will hear an audio prompt.
- To deactivate: Long press either earbud for 3 seconds again to return to normal mode.



Image: The HOPPUP Predator X07 earbuds and case highlighting the 'Rage Mode' for 35ms low latency, ideal for gaming.

5.3 Call Management (Hush Mode)

The Quad Mic ENC (Environmental Noise Cancellation) ensures clear voice calls by reducing background noise.

- **Answer Call:** Single tap either earbud.
- **End Call:** Single tap either earbud during a call.
- **Reject Call:** Long press either earbud for 2 seconds.



Image: The HOPPUP Predator X07 earbuds and case showcasing 'Hush Mode' with Quad Mic ENC for clear communication.

6. CHARGING

6.1 Charging the Earbuds

Place the earbuds into the charging case. They will automatically begin charging. The indicator lights on the earbuds will show their charging status.

6.2 Charging the Case

Connect the Type-C USB cable to the charging port on the case and to a 5V/1A power adapter. The case's indicator lights will illuminate to show charging progress. A full charge provides up to 70 hours of total playtime for the earbuds.

6.3 Rapid Charge Feature

The Predator X07 supports rapid charging. A 10-minute charge can provide up to 120 minutes of playtime.

7. MAINTENANCE

7.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Ensure charging contacts on both earbuds and case are free from dust and debris.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.

7.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	◦ Ensure earbuds are charged. ◦ Turn off Bluetooth on your device and turn it back on. ◦ Forget/delete "HOPPUP Predator Xo7" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close the lid, wait a few seconds, then open to re-enter pairing mode.
Only one earbud working	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the charging case, close the lid, then open it again. ◦ Try resetting the earbuds (refer to the full user manual for specific reset instructions if available).
Low volume or poor sound quality	◦ Adjust volume on both your device and the earbuds. ◦ Ensure ear tips are properly sealed in your ear canal. ◦ Clean any debris from the earbud speakers. ◦ Ensure earbuds are fully charged.
Charging issues	◦ Ensure the charging cable is securely connected. ◦ Try a different Type-C cable and power adapter. ◦ Clean the charging contacts on the earbuds and inside the case.

Problem	Possible Solution
Gaming mode latency still noticeable	◦ Ensure Rage Mode is activated (long press earbud for 3 seconds). ◦ Ensure your device's Bluetooth connection is stable and within range (15 meters). ◦ Close other applications running in the background on your device.

9. SPECIFICATIONS

Feature	Detail
Model Name	XO7
Connectivity Technology	Bluetooth 5.4
Bluetooth Range	15 Metres
Audio Driver Size	13 Millimetres
Audio Driver Type	Dynamic Driver
Battery Life	Up to 70 Hours (with charging case)
Charging Time	Approx. 2 Hours (for full charge)
Rapid Charge	10 mins charge = 120 mins playtime
Low Latency	35ms (Rage Mode)
Noise Control	Environmental Noise Cancellation (ENC) - Quad Mic
Control Method	Touch, Voice Control
Water Resistance Level	IPX4 (Water Resistant)
Material	Plastic
Compatible Devices	Cellphones, Desktops, Laptops, Tablets, Television
Product Dimensions (LxWxH)	10 x 10 x 4 cm
Item Weight (with packaging)	800 g
Country of Origin	India

10. WARRANTY INFORMATION

Your HOPPUP Predator Xo7 Gaming Earbuds come with a warranty. Please refer to the included Warranty Card in your package for detailed terms, conditions, and duration of the warranty. Keep your purchase receipt as proof of purchase for any warranty claims.

11. SUPPORT & CONTACT

For further assistance, technical support, or inquiries, please contact HOPPUP customer service:

- **Phone:** +919354256077

- **Email:** help@hoppup.in
- **Manufacturer:** Optimum Technologies Private Limited
- **Address:** UPER G/F, 19, SHIVPURI, East Krishna Nagar, Delhi, 110051, India

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question