

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kitchen Elite](#) /

› [Kitchen Elite 26.4 Qt Air Fryer Toaster Oven Combo User Manual](#)

## Kitchen Elite KE-AFO-103-26QT-AMZ

# Kitchen Elite 26.4 Qt Air Fryer Toaster Oven Combo User Manual

Model: KE-AFO-103-26QT-AMZ

## 1. INTRODUCTION

Thank you for choosing the Kitchen Elite 26.4 Qt Air Fryer Toaster Oven Combo. This appliance is designed to provide versatile cooking options, including air frying, baking, broiling, roasting, and more, with reduced oil for healthier meals. Please read this manual thoroughly before operation to ensure safe and efficient use.

### Important Safety Instructions

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Do not block any ventilation openings.
- Unplug from outlet when not in use and before cleaning.
- Do not operate if the cord or plug is damaged.

## 2. PRODUCT OVERVIEW

The Kitchen Elite Air Fryer Toaster Oven Combo offers a large capacity and multiple functions to simplify your cooking process.

### Components and Features

- **Digital Full Touch Screen:** Intuitive control panel for easy operation.
- **26.4 Qt Capacity:** Large interior suitable for family-sized meals.

- **Stainless Steel Construction:** Durable and easy to clean exterior.
- **360° Airflow Technology:** Ensures even cooking and crispy results.
- **SoftClose Door:** Prevents slamming and ensures smooth operation.
- **Interior Light:** Allows monitoring of cooking progress without opening the door.



Figure 2.1: Front view of the Kitchen Elite Air Fryer Toaster Oven Combo with included accessories (drip tray, mesh basket, wire rack, baking tray).

# High Quality Stainless Steel Design



Figure 2.2: Product dimensions: 15.91 inches (W) x 14.76 inches (D) x 14.17 inches (H).

## 3. SETUP

### Unboxing and Initial Placement

1. Carefully remove the appliance from its packaging.
2. Remove all packing materials, including any protective films or stickers.
3. Place the air fryer toaster oven on a flat, stable, and heat-resistant countertop. Ensure there is

adequate clearance (at least 4 inches) on all sides for proper ventilation.

4. Wipe down the exterior with a damp cloth. Clean all accessories with warm, soapy water before first use.

## Accessory Installation

The appliance comes with several accessories for various cooking needs:

- **Drip Tray:** Always place this at the very bottom of the oven to catch crumbs and drippings.
- **Mesh Basket:** Ideal for air frying foods like fries, chicken wings, and vegetables. Place on the middle or upper rack position.
- **Wire Rack:** Suitable for baking, roasting, or placing oven-safe dishes. Can be used on various rack positions.
- **Baking Tray:** Use for baking cookies, roasting smaller items, or as a base for other accessories.

# 4-Zone

## Cooking Meals in Minutes

Multiple layers can be cooked at the same time, greatly reducing cooking time



Figure 3.1: Illustration of multi-layer cooking with different accessories in the oven.

## 4. OPERATING INSTRUCTIONS

### Control Panel Overview

The digital touch screen provides access to all cooking functions and settings.

# 18 Presets & 1 Preheat

Fully combines the functions of an air fryer & oven



Figure 4.1: Digital control panel displaying various preset cooking modes.

## Using Preset Modes

The appliance features 18 preset cooking modes for common dishes:

- Air Fry, Steak, Bacon, Chicken, Fries, Fish, Shrimp, Wings, Defrost
- Bagel, Bake, Broil, Pizza, Pastry, Warm, Roast, Proof, Toast

1. Plug in the appliance. The display will illuminate.
2. Press the **Power Button** to turn on the unit.
3. Select your desired preset mode by touching the corresponding icon on the screen. The default time and temperature for that mode will appear.

- Adjust the temperature using the **Temperature +/-** buttons and the time using the **Time +/-** buttons if needed.
- Press the **Start/Pause Button** to begin cooking.

## Manual Operation

For custom cooking, you can manually set the temperature and time:

- Press the **Power Button**.
- Touch the **Temperature Icon** (thermometer) to activate temperature adjustment. Use the **+/-** buttons to set the desired temperature (150-450°F).
- Touch the **Time Icon** (clock) to activate time adjustment. Use the **+/-** buttons to set the desired cooking time (1-60 minutes).
- Press the **Start/Pause Button** to begin cooking.

## Additional Functions

- Preheat:** A dedicated preheat function ensures the oven reaches the set temperature before cooking.
- Oven Light:** Press the **Light Icon** to turn the interior light on or off, allowing you to monitor food without heat loss.

## 5. COOKING GUIDE

### General Tips

- For best air frying results, do not overcrowd the mesh basket. Cook in batches if necessary.
- Shake or flip food halfway through cooking for even browning.
- Lightly spray food with oil for extra crispiness, especially for fresh vegetables.

### Cooking Examples (Approximate Times)

Food Item	Preset Mode	Temperature	Time
French Fries	Fries	400°F (204°C)	15-20 min
Chicken Wings	Wings	380°F (193°C)	20-25 min
Steak	Steak	400°F (204°C)	10-15 min
Pizza	Pizza	375°F (190°C)	10-12 min

## 6. MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

## **Daily Cleaning**

1. Unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
3. Remove the drip tray and clean it after each use.

## **Accessory Cleaning**

All accessories, including the frying basket, grill rack, baking tray, and crumb tray, are dishwasher-safe for easy, hassle-free cleaning.

- For stubborn residue, soak accessories in warm, soapy water before washing.
- Use a non-abrasive sponge or brush to prevent scratching.



# Anti-oil Corrosion Easy to clean

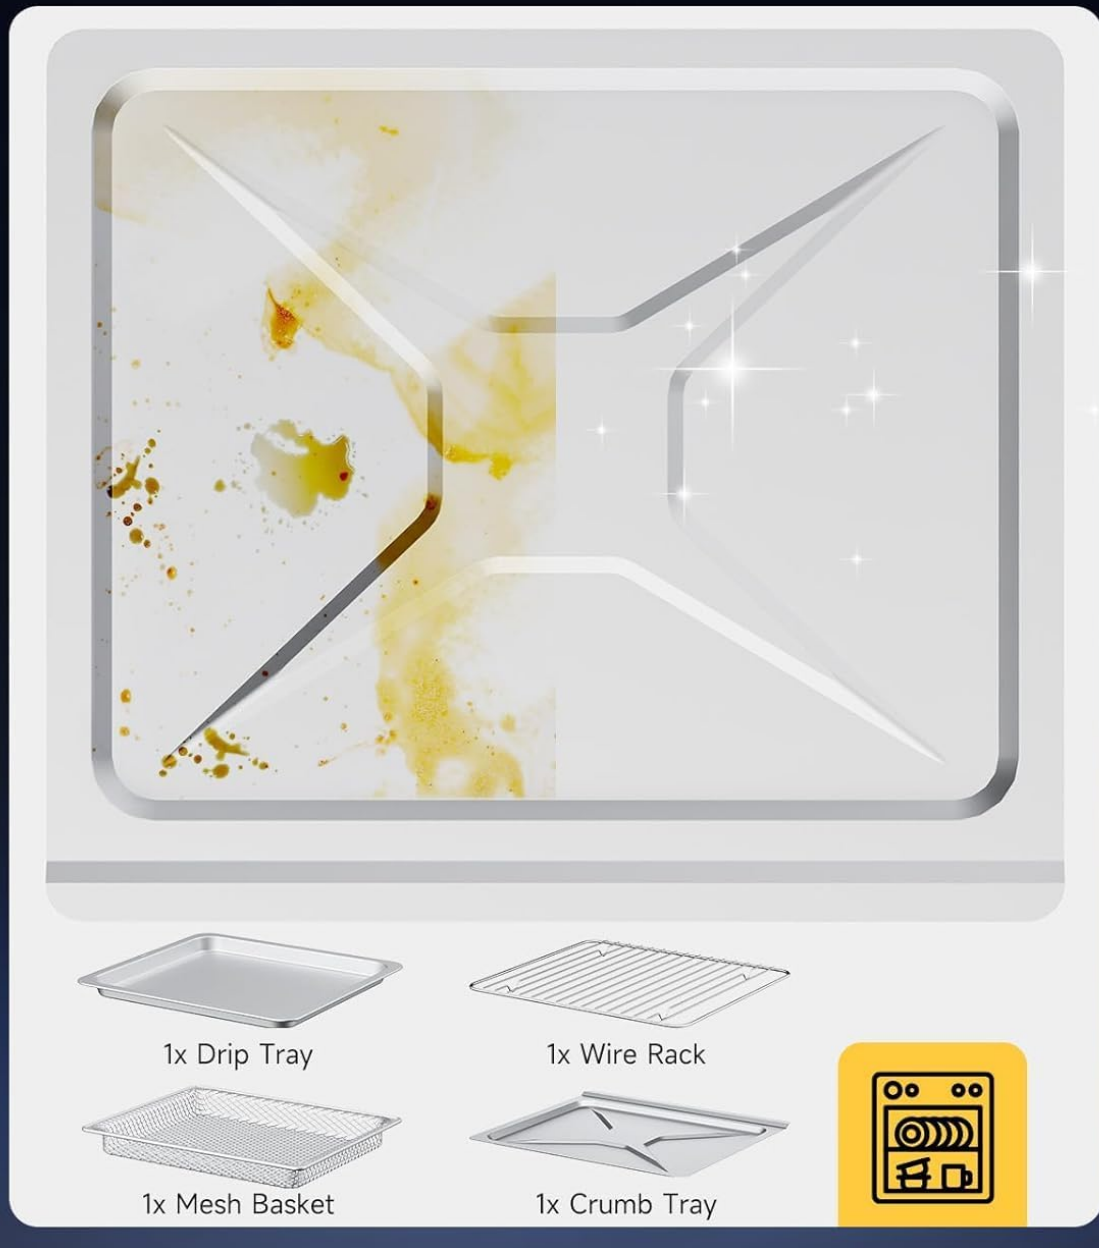


Figure 6.1: Illustration of easy cleaning features and dishwasher-safe accessories.

## 7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet issue	Ensure plug is fully inserted; Test outlet with another appliance.
Food not cooking evenly	Overcrowding; Incorrect temperature/time	Cook in smaller batches; Adjust temperature/time as needed; Flip food halfway.
White smoke from appliance	Grease/food residue on heating elements	Unplug and let cool; Clean interior and accessories thoroughly.
Digital display unresponsive	Temporary electronic glitch	Unplug the unit for 5 minutes, then plug back in.

## 8. SPECIFICATIONS

- **Model:** KE-AFO-103-26QT-AMZ
- **Rated Power:** 1700W
- **Capacity:** 26.4 QT
- **Temperature Range:** 150-450°F
- **Time Range:** 1-60 minutes (up to 90 minutes for some functions)
- **Dimensions:** 15.91"W x 14.76"D x 14.17"H
- **Power Supply:** AC 120V, 60Hz (for US/Canada)
- **Material:** Stainless Steel
- **Control Method:** Touch Control
- **Dishwasher Safe Accessories:** Yes

## 9. WARRANTY & SUPPORT

Kitchen Elite provides a 1-year warranty for this product. If you experience any issues or have questions regarding your Air Fryer Toaster Oven Combo, please contact our customer service team. Your satisfaction is our priority.

For support, please visit the [Kitchen Elite Store on Amazon](#) or refer to the contact information provided with your purchase.

