



Manuals.plus /

› ZWP /

› User Manual for ZWP R7115S Replacement Remote Control

## ZWP BWA17AA005

# User Manual for ZWP R7115S Replacement Remote Control

Compatible with Blackweb BWA17AA005 CD Player Stereo Audio System

## 1. INTRODUCTION

Thank you for choosing the ZWP R7115S Replacement Remote Control. This remote is designed to be fully compatible with the Blackweb BWA17AA005 CD Player Stereo Audio System, providing seamless control over your audio experience. It is made of high-quality, wear-resisting ABS material for comfortable handling and durability. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new remote control.



Image 1: ZWP R7115S Replacement Remote Control. This image shows the front view of the dark-colored remote control with all its buttons clearly visible, including power, volume, playback controls, and preset EQ.

## 2. SETUP

### 2.1 Battery Installation

The ZWP R7115S remote control requires button batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery cover open in the direction indicated by the arrow or 'OPEN' label.
3. Insert the button batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings

inside the compartment.

4. Close the battery cover securely until it clicks into place.



Image 2: Battery Installation. This image displays the back of the remote control with the battery compartment open, next to a 3V lithium button battery, illustrating where the battery should be placed.

## 2.2 Initial Use

This replacement remote control requires **no programming or pairing**. Once the batteries are correctly installed, it is ready to operate your Blackweb BWA17AA005 CD Player Stereo Audio System immediately.

**No programming or pairing needed.  
work right out of box after putting batteries!**



Image 3: No Programming Needed. This image shows the remote control positioned next to a television screen, with text indicating that no programming or pairing is required for operation.

### 3. OPERATING INSTRUCTIONS

To operate your Blackweb BWA17AA005 CD Player Stereo Audio System, point the remote control directly at the system's infrared receiver. Ensure there are no obstructions between the remote and the audio system.

#### 3.1 Button Functions

The remote control features standard buttons for common audio system functions:

- **ON/STANDBY:** Powers the system on or puts it into standby mode.
- **PRESET EQ:** Cycles through various equalizer presets (e.g., Rock, Pop, Jazz, Classic).
- **VOL + / -:** Increases or decreases the volume level.
- **Mute:** Silences the audio output.
- **Playback Controls (Play/Pause, Stop, Skip Forward/Backward):** Controls CD playback.

- **PROG/MEM:** Used for programming tracks or storing radio station presets.
- **MEM. UP:** Navigates through stored memory presets.
- **Bluetooth Button:** Activates or switches to Bluetooth mode.
- **Source/Input Button:** Changes the audio input source (e.g., CD, FM, Bluetooth, AUX).
- **Sleep Timer Button:** Sets a timer for the system to automatically turn off.
- **Repeat Button:** Repeats the current track or album.

### 3.2 Optimal Range

The remote control utilizes infrared technology for precise control. It can effectively operate the audio system from a distance of up to 10 meters (approximately 33 feet), provided there is a clear line of sight.

## Long distance precise control

Strongest signal by Infrared technology, further transmission for multi-angle induction. Precisely control far from 10 meters / 33 feet.



Image 4: Long Distance Control. This image illustrates the remote control being used to operate a device from a distance, highlighting its effective range of up to 33 feet.

## 4. MAINTENANCE

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as they may damage the remote's surface or buttons.

### 4.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or it stops functioning. Refer to Section 2.1 for battery installation instructions. Always dispose of used batteries responsibly according to local regulations.

## 5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Check battery orientation or replace with new batteries.
Remote control has limited range or intermittent response.	Obstruction between remote and audio system; weak batteries.	Ensure clear line of sight. Replace batteries if they are old.
Specific buttons not responding.	Dirt or debris under the button; internal malfunction.	Clean the remote surface. If problem persists, contact support.

## 6. SPECIFICATIONS

Below are the technical specifications for the ZWP R7115S Replacement Remote Control:

Feature	Detail
Model Number	R7115S (Compatible with BWA17AA005)
Brand	ZWP
Compatible Devices	Blackweb BWA17AA005 CD Player Stereo Audio System
Color	Black
Material	High-quality ABS
Item Weight	2.4 ounces
Package Dimensions	10 x 3 x 1 inches
Power Source	Button Batteries (not included)
Special Feature	Ergonomic design



Image 5: Remote Control Dimensions. This image provides a detailed view of the remote control, showing its length (3.54 inches), width (1.57 inches), and thickness (0.39 inches).

## 7. WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your ZWP R7115S Replacement Remote Control, please do not hesitate to contact the seller directly. We are committed to helping you resolve any problems you may encounter. Please refer to your purchase documentation or the seller's information on the platform where you purchased the product for specific warranty details and contact methods.