

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Bosch](#) /

› Bosch Base Plate for Belt Sanders PBS 75A and Other Models - Instruction Manual

Bosch 1619X06361

Bosch Base Plate for Belt Sanders

Model: 1619X06361

INTRODUCTION

This instruction manual provides essential information for the proper installation, use, and maintenance of the Bosch Base Plate, model 1619X06361. This component is designed as a replacement or spare part for compatible Bosch belt sanders, ensuring optimal performance and longevity of your tool. Please read this manual thoroughly before installation and use.

PRODUCT OVERVIEW



The image displays the Bosch Base Plate, model 1619X06361. It is a gray, rectangular component made of steel, featuring specific cutouts and mounting points designed to fit compatible Bosch belt sanders. This base plate serves as the foundation for the sanding belt, providing stability and support during operation.

Compatibility

This base plate is compatible with the following Bosch belt sander models:

- **Bosch PBS 75 AE**
- **Bosch PBS 75 A**

Ensure your belt sander model matches one of the listed compatible models before attempting installation.

SETUP AND INSTALLATION

Installing the base plate requires careful attention to detail. Always ensure the power tool is disconnected from the power source before beginning any installation or maintenance.

1. **Safety First:** Disconnect the belt sander from the electrical outlet to prevent accidental startup.
2. **Access the Old Plate:** Depending on your specific sander model (PBS 75 AE or PBS 75 A), locate the existing base plate. This may involve removing the sanding belt and potentially some screws or clips that secure the plate. Refer to your belt sander's specific user manual for detailed disassembly instructions.
3. **Remove Old Plate:** Carefully detach the worn or damaged base plate. Note the orientation and how it was secured.

4. **Clean Area:** Clean any dust or debris from the area where the new base plate will be installed.
5. **Install New Plate:** Position the new Bosch Base Plate (Model 1619X06361) in the correct orientation. Align any mounting holes or clips.
6. **Secure Plate:** Re-insert and tighten any screws or re-attach clips that secure the base plate. Do not overtighten.
7. **Reassemble Sander:** Reinstall the sanding belt and any other components that were removed during the process.
8. **Test:** Once fully reassembled, connect the sander to power and perform a brief test run to ensure the base plate is securely in place and the belt runs smoothly.

OPERATING CONSIDERATIONS

The base plate itself does not have operational controls. Its function is passive, providing a stable surface for the sanding belt. Proper operation of the belt sander with the new base plate involves:

- **Belt Tracking:** Ensure the sanding belt tracks correctly over the base plate. Adjust the belt tracking mechanism on your sander if the belt drifts to one side.
- **Even Pressure:** Apply even pressure when sanding to distribute wear uniformly across the base plate and sanding belt.
- **Avoid Overheating:** Prolonged heavy use can generate heat. Allow the sander to cool down periodically to prevent excessive wear on the base plate and other components.

MAINTENANCE

Regular maintenance of the base plate contributes to the longevity and efficiency of your belt sander.

- **Cleaning:** After each use, disconnect the sander from power and use compressed air or a brush to remove dust and debris from around the base plate and belt area. Accumulation of dust can hinder belt movement and cause premature wear.
- **Inspection:** Periodically inspect the base plate for signs of wear, such as grooves, uneven surfaces, or cracks. A worn base plate can lead to poor sanding results and increased belt wear.
- **Replacement:** Replace the base plate if significant wear or damage is observed. Continuing to use a damaged base plate can harm the sander and compromise safety.

TROUBLESHOOTING

Issues related to the base plate are typically mechanical. Here are common problems and their solutions:

Problem	Possible Cause	Solution
Sanding belt not tracking correctly.	Base plate not installed correctly or worn unevenly.	Ensure base plate is securely and evenly installed. Check for wear and replace if necessary. Adjust belt tracking on the sander.
Poor sanding performance or uneven finish.	Worn or damaged base plate.	Inspect the base plate for grooves or unevenness. Replace if damaged.
Excessive noise or vibration from belt area.	Loose base plate or foreign object.	Disconnect power, inspect base plate for secure fit. Remove any debris.

SPECIFICATIONS

Manufacturer	Bosch
Model Number	1619X06361
Item Weight	98 grams
Color	Gray
Material	Steel
Included Components	Base Plate
Power Source Type	None (Passive component for powered tool)
Batteries Required	No

WARRANTY AND SUPPORT

For specific warranty information regarding your Bosch Base Plate (Model 1619X06361), please refer to the documentation provided with your original Bosch belt sander or contact Bosch customer support directly. As a replacement part, its warranty may be tied to the original tool's warranty or a separate parts warranty.

For technical support, spare parts, or service inquiries, please visit the official Bosch website or contact their authorized service centers. Always provide the model number (1619X06361) and the model of your belt sander (e.g., PBS 75 AE) when seeking assistance.