

ASHATA ASHATAqbwt8f2unm

ASHATA Underwater Fishing Camera (Model ASHATAqbwt8f2unm) User Manual

1. INTRODUCTION

The ASHATA Underwater Fishing Camera is a high-definition imaging system designed for various underwater observation activities. It features a 5MP sensor delivering 1080P images with a 220° wide-angle view, allowing for comprehensive underwater scene observation and effortless fish location.

The system includes a 4.3-inch high-definition screen with a maximum brightness of 2000 nits, complemented by a three-sided sunshade for clear visibility even in bright sunlight. The camera is connected via a durable four-core tensile wire, capable of withstanding up to 100kg of pulling force, ensuring longevity and reliability. Its plug-and-play design eliminates the need for complex installation or rewiring, making it user-friendly for immediate operation.


This versatile camera is suitable for raft fishing, stall fishing, ice fishing, aquaculture monitoring, well exploration, and other underwater tasks.

2. WHAT'S IN THE BOX

Upon unboxing, please ensure all components are present and in good condition:

- Underwater Camera with Cable
- 4.3-inch HD Display Screen with Sunshade
- Cable Reel
- Power Adapter/Charging Cable
- User Manual (this document)

4800D White Denier Strong Tension Wire

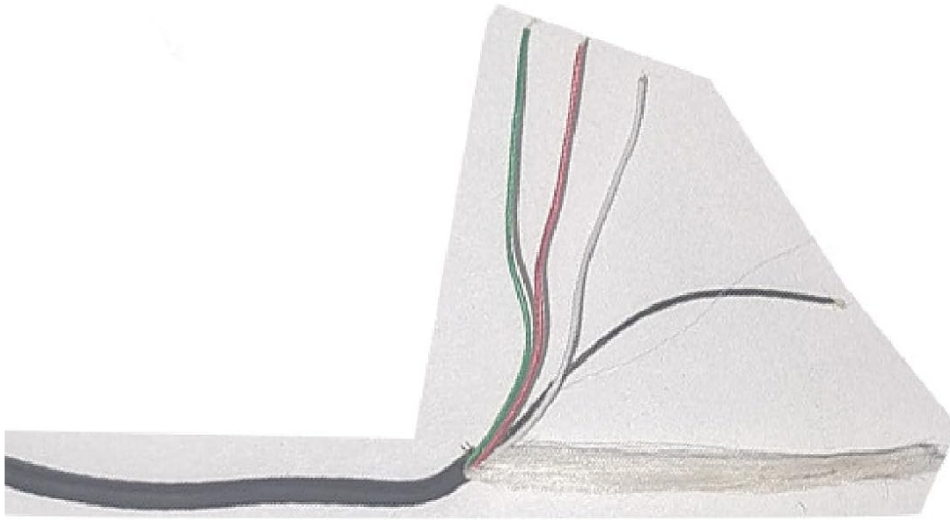

White positive
Black negative
Green video
White light wire

Image: Main components of the ASHATA Underwater Fishing Camera system.

3. SETUP INSTRUCTIONS

The ASHATA Underwater Fishing Camera is designed for quick and easy setup, requiring no complex installation.

1. **Charge the Display Unit:** Before first use, ensure the 4.3-inch display unit is fully charged using the provided power adapter. The battery indicator on the screen will show charging status.
2. **Connect the Camera Cable:** Locate the camera cable with the anti-bend plug. Insert this plug firmly into the corresponding port on the side of the 4.3-inch display unit. Ensure a secure connection.

High Toughness Video Cable



Image: Connecting the camera cable to the display unit.

3. **Unwind the Cable:** Carefully unwind the desired length of the camera cable from the reel. The cable is designed for high tensile strength and durability.
4. **Deploy the Camera:** Gently lower the camera head into the water. The camera is waterproof and designed for underwater use.
5. **Power On:** Press the power button on the display unit to turn it on. The screen should immediately display the live underwater feed from the camera.

No installation required



Image: Detailed view of the camera head.



Image: The cable reel for managing the camera cable.

4. OPERATING INSTRUCTIONS

Once the camera is deployed and the display unit is powered on, you can begin observing the underwater environment.

1. **Viewing the Feed:** The 4.3-inch screen will show a live, high-definition video feed from the camera. Adjust the sunshade for optimal viewing in various lighting conditions.
2. **Navigating the Camera:** Gently move the camera cable to change the camera's position and viewing angle underwater. The 220° wide-angle lens captures a broad perspective.
3. **Identifying Fish:** Use the clear 1080P video feed to identify fish, underwater structures, and other points of interest.
4. **Adjusting Settings (if applicable):** Refer to the buttons on the display unit for any available settings adjustments, such as brightness or contrast.



Image: Live underwater view on the display screen.

Your browser does not support the video tag.

Video: Demonstration of the ASHATA Underwater Fishing Camera in use, showing deployment and live underwater footage on the screen.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your ASHATA Underwater Fishing Camera.

- **Cleaning the Camera Lens:** After each use, gently wipe the camera lens with a soft, clean cloth to remove any debris or residue. Avoid abrasive materials that could scratch the lens.
- **Cleaning the Display Screen:** Use a soft, lint-free cloth to clean the display screen. Do not use harsh chemicals or sprays directly on the screen.
- **Cable Care:** Always wind the cable neatly onto the reel after use to prevent tangles and damage. Avoid sharp bends or kinks in the cable. The cable is designed to be highly durable and resistant to fracture.



Image: Illustrating the high toughness of the video cable.

- **Storage:** Store the camera system in a dry, cool place away from direct sunlight and extreme temperatures.
- **Battery:** For long-term storage, ensure the display unit's battery is partially charged (around 50%) to maintain battery health.



Image: The fracture-resistant plug design.

6. TROUBLESHOOTING

If you encounter issues with your ASHATA Underwater Fishing Camera, please refer to the following common problems and solutions:

- **No Image on Screen:**
 - Ensure the display unit is powered on and fully charged.
 - Check that the camera cable is securely connected to the display unit.
 - Verify the camera is submerged in water.
- **Poor Image Quality:**

- Clean the camera lens for any dirt or debris.
- Check water clarity; very murky water will reduce visibility.
- Adjust screen brightness/contrast if available.

• **Short Battery Life:**

- Ensure the unit is fully charged before use.
- Battery performance can decrease in extremely cold conditions.

• **Cable Damage:**

- Inspect the cable for any visible cuts or damage. Avoid pulling the cable excessively or against sharp objects.

7. SPECIFICATIONS

Feature	Specification
Model Name	ASHATAqbw8f2unm
Effective Still Resolution	5 MP
Video Capture Resolution	1080p
Screen Size	4.3 Inches
Water Resistance Level	Waterproof
Cable Tensile Strength	Up to 100kg
Battery Average Life	12 Hours
Connectivity Technology	USB
Media Type	SD Card (for recording, if supported by specific model variant)
File Format	JPEG, MP4
Item Weight	982 Grams
Sensor Type	CMOS
Viewfinder Type	LCD screen
Focus Type	Fixed Focus
Camera Flash	Built-In

8. WARRANTY AND SUPPORT

The ASHATA Underwater Fishing Camera (Model ASHATAqbw8f2unm) comes with a manufacturer warranty for 90 days from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any inquiries regarding your product, please contact ASHATA customer service through the retailer where the product was purchased or visit the official ASHATA brand store online.

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question