

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Genérico](#) /

› [Genérico 8177 WiFi Full HD 1080P IP Camera User Manual](#)

Genérico 8177

Genérico 8177 WiFi Full HD 1080P IP Camera User Manual

Model: 8177

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Genérico 8177 WiFi Full HD 1080P IP Camera. Please read this manual carefully before using the product to ensure proper functionality and to prevent damage. Keep this manual for future reference.

The Genérico 8177 is a versatile surveillance camera designed for home or office security. It features Full HD 1080P resolution, night vision capabilities, motion detection, and two-way audio communication, all accessible via WiFi connectivity and a dedicated mobile application.

2. PRODUCT OVERVIEW

2.1. Package Contents

- Genérico 8177 IP Camera
- User Manual
- Mounting Accessories (if applicable, check packaging)

2.2. Camera Components and Features

Familiarize yourself with the various parts of your camera:



Image 1: Genérico 8177 IP Camera Components and Dimensions. This diagram highlights key features such as the E27 bulb socket for power, the integrated speaker and microphone for two-way audio, HD lens, LED lights for night vision, a light sensor, and the location of the SD card slot and reset button. Dimensions are also indicated.

- **E27 Socket:** Standard screw-in base for power connection.
- **HD Lens:** Captures Full HD 1080P video.
- **LEDs:** Infrared LEDs for black and white night vision, and white LEDs for color night vision.
- **Light Sensor:** Automatically detects ambient light levels to switch between day and night modes.
- **Microphone:** For audio input and two-way communication.
- **Speaker:** For audio output and two-way communication.
- **SD Card Slot:** Supports local storage of video recordings.
- **Reset Button:** Used to restore factory settings.

3. SETUP

3.1. Physical Installation

The Genérico 8177 camera is designed for easy installation, similar to screwing in a light bulb.

1. Ensure the power to the light fixture is turned off at the main switch.
2. Carefully screw the camera into a standard E27 light bulb socket.
3. Ensure the camera is securely fastened but do not overtighten.
4. Turn on the power to the light fixture. The camera will power on and initiate its startup sequence.



Image 2: Easy Installation. This image demonstrates the simple process of installing the camera by screwing it into a standard E27 light bulb socket.

3.2. App Download and Account Registration

The camera operates with the Yoosee application. Download the app from your device's app store (iOS App Store or Android Google Play Store).

1. Search for "Yoosee" in your app store.
2. Download and install the application.
3. Open the Yoosee app and follow the on-screen instructions to register a new account or log in if you already have one.

3.3. Connecting the Camera to WiFi

After physical installation and app setup, connect your camera to your home WiFi network (2.4GHz only).



Image 3: Camera Connected to App. This image shows the camera alongside a smartphone displaying its live video feed, illustrating the successful connection and remote viewing capability.

1. Open the Yoosee app and tap the "+" icon to add a new device.
2. Select the option to add a new camera (e.g., "Add device via WiFi").
3. Follow the app's instructions, which typically involve scanning a QR code on the camera or listening for an audio prompt from the camera.
4. Enter your 2.4GHz WiFi network name (SSID) and password when prompted.
5. Wait for the camera to connect to the network. Once connected, the camera will usually emit a confirmation sound, and its status indicator light will change.
6. Name your camera for easy identification (e.g., "Living Room Camera").

4. OPERATING INSTRUCTIONS

4.1. Live View and Pan/Tilt Control

Once connected, you can access the live video feed from your camera.

- In the Yoosee app, select your camera from the device list to view its live feed.
- Use the on-screen controls to pan (move horizontally) and tilt (move vertically) the camera lens to adjust the viewing angle.

4.2. Two-Way Audio

The camera supports two-way audio, allowing you to listen and speak through the camera.

- Tap the microphone icon in the live view to speak through the camera's speaker.
- Tap the speaker icon to listen to audio from the camera's surroundings.

4.3. Motion Detection and Alerts

The camera can detect motion and send alerts to your phone.



Image 4: Intelligent Motion Detection. This image depicts the camera's ability to detect movement, triggering an alert that is sent to the user's smartphone as a notification.

- Navigate to the camera settings in the Yoosee app.
- Enable "Motion Detection" and adjust sensitivity levels as needed.
- Configure alert notifications (e.g., push notifications to your phone).

4.4. Night Vision Modes

The camera offers both infrared and color night vision for clear monitoring in low-light conditions.

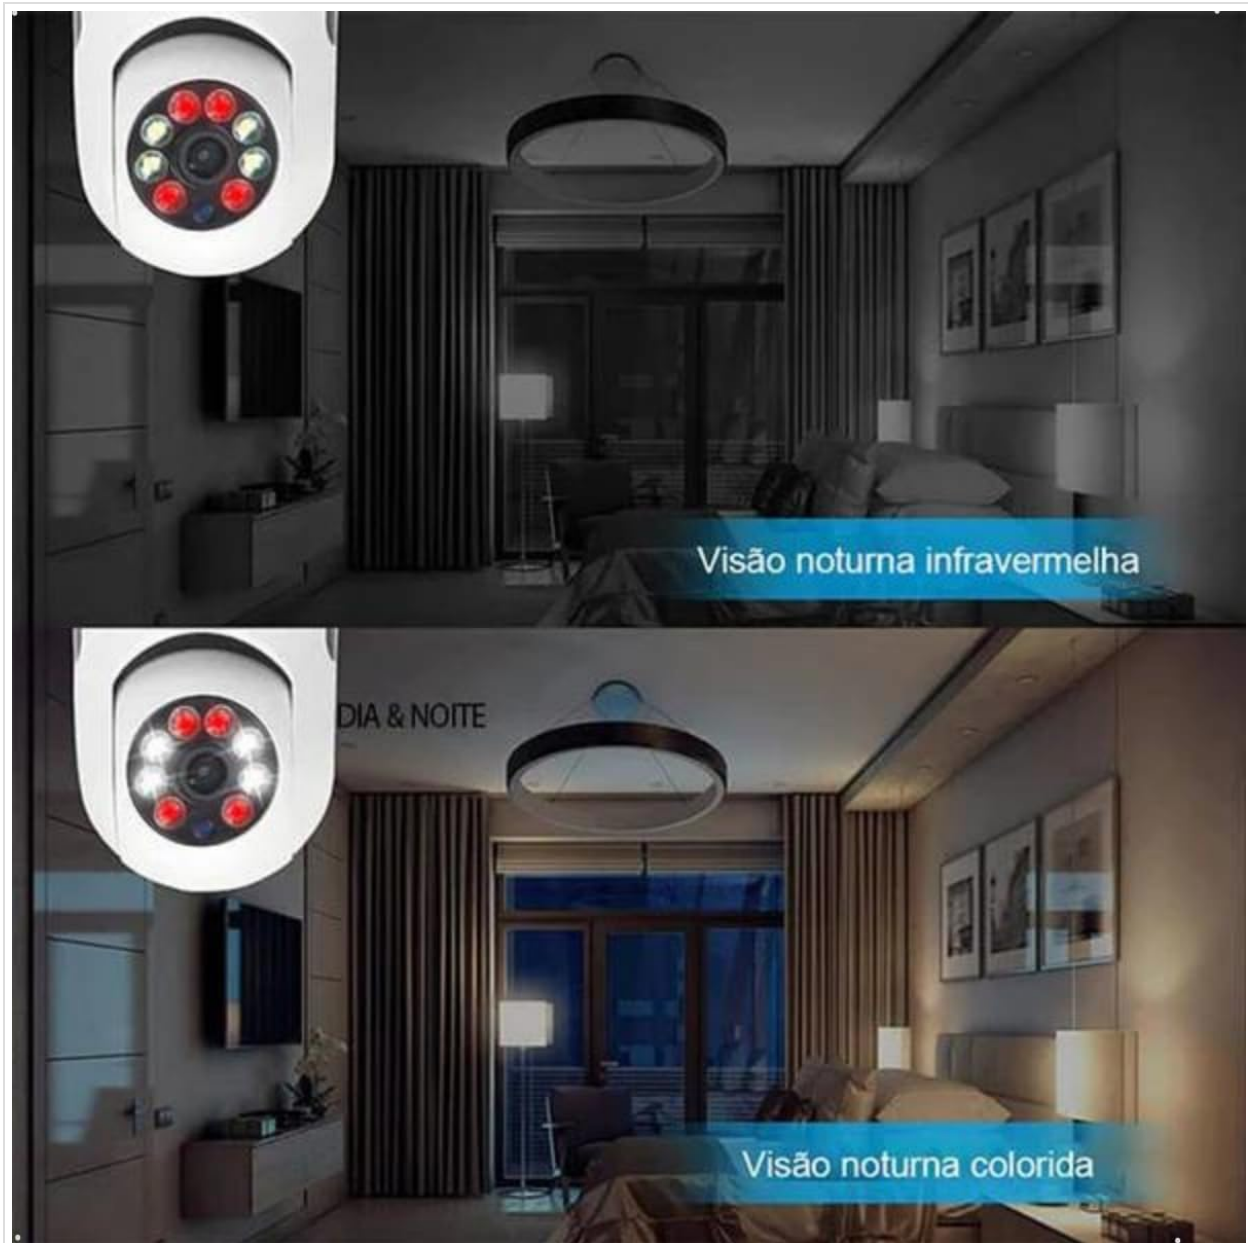


Image 5: Infrared and Color Night Vision. This image illustrates the two night vision modes: traditional infrared (black and white) and enhanced color night vision, providing clear visibility in dark environments.

- The camera automatically switches to night vision mode when ambient light is low.
- Depending on settings, it can use infrared LEDs for black and white vision or white LEDs for color night vision.

4.5. Recording and Playback

Insert a microSD card (not included) into the SD card slot for local video storage.

- Ensure the camera is powered off before inserting or removing the microSD card.
- In the app settings, configure recording options (e.g., continuous recording, motion-triggered recording).
- Access recorded footage via the "Playback" section in the Yoosee app.

4.6. Multi-Platform Support

The camera supports viewing and control from various devices.

Suporte multiplataforma

Compartilhe momentos com outras pessoas através da conexão a diversos dispositivos.



Image 6: Multi-Platform Support. This image illustrates that the camera's feed and controls can be accessed from various devices, including iOS and Android smartphones, tablets, and computers.

- The Yoosee app is available for iOS and Android smartphones and tablets.
- A desktop client may also be available for computer access (check Yoosee official website for details).

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and body. Do not use harsh chemicals or abrasive cleaners.
- **Firmware Updates:** Periodically check the Yoosee app for available firmware updates to ensure optimal performance and security. Follow the app's instructions for updating.
- **SD Card Management:** Regularly back up important recordings from the microSD card. Format the SD card periodically through the app to maintain performance.

6. TROUBLESHOOTING

- **Camera not connecting to WiFi:**

- Ensure your WiFi network is 2.4GHz. The camera does not support 5GHz networks.
 - Check your WiFi password for accuracy.
 - Move the camera closer to your WiFi router.
 - Reset the camera using the reset button and try the setup process again.
- **No image or poor image quality:**
 - Check the power connection to the camera.
 - Ensure the camera lens is clean and free from obstructions.
 - Verify your internet connection speed.
- **Motion detection not working:**
 - Ensure motion detection is enabled in the app settings.
 - Adjust the sensitivity level.
 - Check the notification settings on your phone to ensure the Yoosee app is allowed to send alerts.
- **Two-way audio issues:**
 - Ensure microphone and speaker permissions are granted to the Yoosee app on your phone.
 - Check the volume settings on your phone and within the app.

7. SPECIFICATIONS

Feature	Specification
Model	8177
Resolution	Full HD 1080P
Connectivity	WiFi (2.4GHz only)
Night Vision	Infrared and Color Night Vision
Audio	Two-Way Audio (Built-in Microphone and Speaker)
Storage	MicroSD Card Slot (card not included)
Power Supply	E27 Bulb Socket
Motion Detection	Supported with App Alerts
App Compatibility	Yoosee (iOS, Android)
Product Dimensions	18 x 9 x 8 cm
Item Weight	220 g
Number of Channels	4 (as per product specifications)

8. WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided by your retailer at the time of purchase. Keep your proof of purchase for any warranty claims.

For technical support or further assistance, please contact the retailer or manufacturer through the contact

information provided with your product packaging or on their official website. You can also refer to the help section within the Yoosee application for common queries and solutions.