

**PDP 049-044**

# **PDP Solis Xbox Gaming Media Remote Control User Manual**

Model: 049-044

## **INTRODUCTION**

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your PDP Solis Xbox Gaming Media Remote Control. This remote is officially licensed by Microsoft for use with Xbox Series X|S and Xbox One consoles, offering convenient control over media applications and console functions.





Image: Front view of the PDP Solis Xbox Gaming Media Remote Control.

## PACKAGE CONTENTS

- PDP Solis Xbox Gaming Media Remote Control
- USB-C Charging Cable
- User Manual (this document)

## SETUP


### 1. Initial Charging

The PDP Solis remote features a built-in rechargeable battery that can be charged via solar power or USB-C. For first-time use, it is recommended to fully charge the remote using the included USB-C cable.

- **USB-C Charging:** Connect the small end of the USB-C cable to the remote's charging port (located at the bottom) and the other end to a powered USB port (e.g., Xbox console, wall adapter).
- **Solar Charging:** Place the remote with its solar panel (located on the back) facing a light source. Ensure the panel is not obstructed. Solar charging is a continuous process and helps maintain battery life.

# SOLAR & USB-C CHARGING

Two Planet-Friendly Options

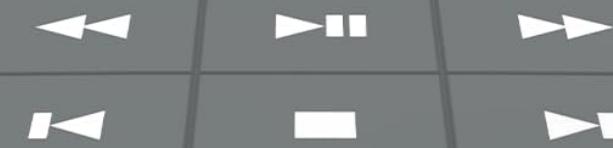

POP



Image: Back view of the remote, highlighting the solar panel.

# SIMPLE CONTROLS

Volume, Play/Pause, A, B, X, Y, & more



Image: Bottom view of the remote, showing the USB-C charging port.

## 2. Connecting to Xbox

The PDP Solis remote connects to your Xbox console via infrared (IR). No manual pairing process is typically required. Simply ensure your Xbox console's IR receiver has a clear line of sight to the remote.

- Point the remote towards your Xbox console.
- Press the Xbox button (X) on the remote to power on your console or navigate the dashboard.

## OPERATING INSTRUCTIONS

The PDP Solis remote provides intuitive controls for media playback and Xbox navigation.

### Button Functions

# EASILY NAVIGATE

Xbox Apps & More



Image: Overview of the PDP Solis remote's button layout.

- **Xbox Button (X):** Powers on/off the console, opens the Guide menu.
- **View Button (□):** Accesses additional information or options within apps.
- **Menu Button (Ξ):** Opens context-sensitive menus.
- **Directional Pad (D-Pad):** Navigates menus and selections.
- **A, B, X, Y Buttons:** Perform actions as indicated by on-screen prompts, similar to a game controller.
- **Volume Up/Down (+/-):** Adjusts TV volume.
- **Channel Up/Down (↑ / ↓):** Changes TV channels.
- **Mute Button:** Mutes TV audio.
- **Media Playback Controls:**
  - **Rewind (⟨⟨):** Skips backward or rewinds media.
  - **Play/Pause (暂停):** Plays or pauses media.
  - **Fast Forward (⟩⟩):** Skips forward or fast forwards media.
  - **Previous Track (⟨):** Skips to the beginning of the current track or previous track.
  - **Stop (停止):** Stops media playback.

- **Next Track ( )**: Skips to the next track.



Image: Close-up of the media playback controls.



Image: Close-up of the A, B, X, Y action buttons.

## Motion-Activated Backlight

The remote features motion-activated backlit buttons. When the remote is moved or picked up in a low-light environment, the buttons will illuminate automatically for a few seconds, enhancing visibility.



Image: The remote displaying its motion-activated backlit buttons.

## MAINTENANCE

### Charging

To ensure optimal performance, regularly charge your remote using either the solar panel or the USB-C port. Consistent exposure to light will help maintain the battery level through solar charging.

### Cleaning

Wipe the remote with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the surface or internal components.

### Environmental Responsibility

The PDP Solis remote is constructed using 50% recycled plastics, contributing to reduced environmental waste. Please dispose of the product and its battery responsibly according to local regulations.

## TROUBLESHOOTING

- **Remote not responding:**

- Ensure the remote is charged. Connect it to a USB-C power source for at least 30 minutes.
- Verify there is a clear line of sight between the remote and the Xbox console's IR receiver. Obstructions can block the signal.
- Confirm the Xbox console is powered on and not in a deep sleep mode that might disable IR reception.

- **Backlight not activating:**

- The backlight is motion-activated and designed for low-light conditions. Ensure the room is sufficiently dim for the feature to engage.
- Check battery level; a very low battery might prevent the backlight from activating.

- **Volume controls not working with TV:**

- The remote's volume controls are designed to operate your TV. Ensure your Xbox console is configured to send IR signals to your TV for volume control. This setting is typically found within the Xbox's TV & OneGuide settings.
- Some TV models may have limited compatibility with universal IR remotes.

- **Remote feels sluggish or unresponsive:**

- Ensure the remote is fully charged.
- Minimize interference from other electronic devices.

## SPECIFICATIONS

Feature	Detail
Model Number	049-044
Product Dimensions	2.56 x 1.3 x 6.77 inches
Item Weight	3.52 ounces
Power Source	1 Lithium Ion battery (included), Solar, USB-C

Compatible Devices	Xbox Series X, Xbox Series S, Xbox One
Special Features	Lightweight, Rechargeable, Universal, Motion-activated Backlight
Material	Made from 50% recycled plastics

## WARRANTY INFORMATION

For detailed warranty information, please refer to the official PDP website or contact their customer support. Keep your proof of purchase for any warranty claims.

## SUPPORT

If you encounter issues not covered in this manual or require further assistance, please visit the official PDP support website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

**Online Resources:** [www.pdp.com](http://www.pdp.com)

© 2024 PDP. All rights reserved. Xbox, Xbox Series X|S, and Xbox One are registered trademarks of Microsoft Corporation.

## Related Documents

<small>Deutsch Français English Español - América Español - Latinoamérica Español - España Português - Brasil Português - Portugal Italiano Nederlands Polski Português - África do Sul</small>	<p><a href="#"><u>Nemesis Media Remote for Xbox Series X S: User Guide &amp; Setup</u></a></p> <p>Comprehensive guide to the Nemesis Media Remote for Xbox Series X S, covering button functions, setup procedures, and charging options via USB-C and solar power.</p>
---	---

	<p><a href="#">Solis Media Remote for Xbox: Quick Start Guide</a>  A comprehensive guide to the Solis Media Remote for Xbox, covering button functions, setup, and charging.</p>
	<p><a href="#">PDP Afterglow Wave USB Gamepad for PC and Xbox - Wired, Multi-Color LED</a>  Explore the PDP Afterglow Wave USB Gamepad, a wired controller designed for PC and Xbox gaming. It features analog/digital control, vibrant multi-color LED backlighting, and a USB Type-C connection, compatible with Windows 10 and 11.</p>
	<p><a href="#">PDP Wired Controller for Xbox Quick Start Guide and Warranty Information</a>  Get started with your PDP Wired Controller for Xbox. This guide provides quick setup instructions, details on volume and microphone control, and comprehensive limited warranty information.</p>

Documents - PDP – 049-044

Deutsch  
Dansk  
English  
Español—Mexico  
Español  
Français—Canada  
Français  
Italiano  
Nederlands  
Norwegian  
Polski  
Português—Brasileiro  
Português  
Svenska

### [Solis Media Remote for Xbox: Quick Start Guide](#)

A comprehensive guide to the Solis Media Remote for Xbox, covering button functions, setup, and charging.

lang:de score:24 filesize: 541.62 K page\_count: 15 document date: 2024-08-12