

## XND-006

# Generic Portable Camping Stove (Model XND-006) Instruction Manual

## PRODUCT OVERVIEW

The Generic Portable Camping Stove (Model XND-006) is a lightweight and compact single-burner butane gas stove designed for outdoor use. It offers precise temperature control with an adjustable burner and features an Instastart ignition for automatic, matchless lighting. With a heat output of 8,530 BTU, it provides efficient cooking with less fuel. The stove includes a porcelain-coated grate for easy cleanup and a wind baffle to help shield the flame. It is ideal for camping, picnics, roadside cooking, and as an emergency backup during power outages.

## Key Features:

- Portable Design:** Lightweight and compact with an included carrying case for easy transport.
- Precise Temperature Control:** Single adjustable burner allows for fine-tuning of heat.
- Easy to Clean:** Features a removable porcelain-coated grate and a dripping tray for quick maintenance.
- Matchless Lighting:** Instastart ignition for convenient, automatic lighting.
- Wind Protection:** Integrated wind baffle helps maintain flame stability in breezy conditions.
- High Heat Output:** Delivers 8,530 total BTUs of cooking power.

## PACKAGE CONTENTS

- Generic Portable Camping Stove (Model XND-006)
- Carrying Case

## SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating this appliance. Failure to follow these instructions may result in fire, explosion, serious injury, or death.

- **FOR OUTDOOR USE ONLY:** This stove is designed for outdoor use in well-ventilated areas. Do not use indoors, in tents, or in unventilated enclosures.
- **FUEL:** Use only 8 oz butane gas canisters. Ensure the canister is correctly installed and locked before ignition.
- **LEAKS:** Check for gas leaks before each use. Apply soapy water to connections; bubbles indicate a leak. Do not use if a leak is detected.
- **CLEARANCE:** Maintain adequate clearance from combustible materials.
- **CHILDREN & PETS:** Keep children and pets away from the stove during operation.
- **HOT SURFACES:** Stove surfaces become hot during use. Allow to cool completely before handling or storing.
- **STORAGE:** Always remove the butane canister from the stove before storage. Store canisters in a cool, dry, well-ventilated area away from direct sunlight and heat sources.

## SETUP

Follow these steps to set up your portable camping stove:

1. Open the carrying case and remove the stove.
2. Ensure the stove is placed on a stable, level, non-combustible surface.
3. Open the fuel compartment cover on the side of the stove.
4. Ensure the fuel lock lever is in the 'UNLOCK' (upward) position and the control knob is in the 'OFF' position.
5. Align the collar of an 8 oz butane gas canister with the regulator guide inside the compartment and push the canister firmly into place.
6. Push the fuel lock lever down to the 'LOCK' position to secure the canister and engage the gas flow mechanism.
7. Close the fuel compartment cover.



Image: Close-up of the Generic Portable Camping Stove, highlighting the model number XND-006 and the fuel lock mechanism. This view helps in identifying the product and understanding the fuel insertion area.

Video: This video demonstrates the assembly and disassembly process for the butane tank on a portable stove. It shows how to correctly insert the butane canister and secure it, as well as how to safely remove it after use.

## OPERATING

Once the stove is set up with the butane canister, follow these steps to operate it:

1. Turn the control knob counter-clockwise to the 'IGNITION' position. You should hear a click and the burner should ignite.
2. If the burner does not ignite on the first attempt, return the knob to 'OFF' and repeat the ignition process.
3. Adjust the flame intensity by turning the control knob between 'MIN' and 'MAX' to achieve your desired cooking temperature.
4. To turn off the stove, turn the control knob clockwise to the 'OFF' position. Ensure the flame is completely extinguished.
5. After use, always lift the fuel lock lever back to the 'UNLOCK' position to disengage the canister and prevent gas leakage during storage.



Image: The Generic Portable Camping Stove with a visible blue flame, demonstrating the stove in active operation. This image illustrates the ignition and burning process.



Image: A detailed view of the control knob on the portable camping stove, clearly showing the markings for 'OFF', 'MIN', 'MAX', and 'IGNITION'. This helps users understand how to adjust the flame and ignite the stove.

Video: This video provides a demonstration on how to use a stainless steel portable gas stove, including the steps for igniting the burner and adjusting the flame. It offers visual guidance for safe and effective operation.

## MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your stove:

- **Cleaning:** The porcelain-coated grate is removable for easy cleaning. Wipe down the enamel surface and dripping tray after each use to prevent buildup. Use mild soap and water.
- **Storage:** Always remove the butane canister before storing the stove. Store the stove in its carrying case in a cool, dry place away from direct sunlight and heat.
- **Inspection:** Periodically inspect the gas connections and hoses for any signs of wear, damage, or leaks. Replace any damaged parts immediately.

## TROUBLESHOOTING

If you encounter issues with your stove, refer to the following common problems and solutions:

- **Stove does not ignite:**

- Ensure the butane canister is correctly installed and the fuel lock lever is in the 'LOCK' position.
- Check if the butane canister is empty and replace if necessary.
- Verify the control knob is turned fully to the 'IGNITION' position.

- **Flame is weak or inconsistent:**

- Check the fuel level in the butane canister.
- Ensure the fuel lock lever is fully engaged.
- Clean the burner head if it appears clogged.

- **Gas leak detected:**

- Immediately turn off the stove and disengage the butane canister.
- Move the stove to a well-ventilated area.
- Do not use the stove until the leak is identified and repaired by a qualified professional.

## SPECIFICATIONS

Feature	Detail
Model Number	XND-006
Brand	Generic
Color	Black
Material	Aluminum
Heating Elements	1
Controls Type	Knob
Burner Type	Open
Power Source	Gas Powered
Product Dimensions	14.6 x 12.4 x 4.2 inches
Item Weight	5 pounds

## WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Specific warranty terms and conditions may vary.

© 2024 Generic. All rights reserved.