

[Manuals.plus](#) /

› [BANGE](#) /

› BANGE 40L Travel Backpack User Manual

BANGE 3029

BANGE 40L Travel Backpack User Manual

Model: 3029

Brand: BANGE

INTRODUCTION

Welcome to the user manual for your BANGE 40L Travel Backpack. This versatile backpack is designed for travel, business trips, hiking, and daily use, offering ample storage and smart organization features. Please read this manual carefully to understand all functionalities and ensure optimal use and longevity of your backpack.



Figure 1: Front view of the BANGE 40L Travel Backpack.

KEY FEATURES

The BANGE 40L Travel Backpack is equipped with several features designed for convenience and organization:

1. Large Capacity & Organization

With approximately 40 liters of capacity and dimensions of 19.5 x 13.2 x 8 inches, this backpack is ideal for 3-5 days of travel. It features three spacious main compartments to organize your belongings efficiently.

40L LARGE CAPACITY

MULTIFUNCTIONAL BACKPACK

Mesh Pocket

Independent
Shoe Compartment



Main Compartment

Dry And Wet Separation Bag

Figure 2: Overview of the backpack's large capacity and internal organization, including mesh pockets and main compartment.

2. Dedicated Shoe Compartment

A dedicated shoe compartment is located at the bottom of the backpack, allowing you to store shoes separately from your clothes and other items, maintaining hygiene and organization. This compartment includes a venting hole to help with air circulation.

INDEPENDENT SHOE COMPARTMENT



Figure 3: The independent shoe compartment with a venting hole for improved air flow.

3. Dry-Wet Separated Compartment

The top compartment features a dry-wet separation design, perfect for storing toiletries, wet clothes, or other items you wish to keep separate from dry belongings.



Figure 4: The dry and wet separation layer, ideal for toiletries or damp items.

4. Laptop and Tablet Compartment

A dedicated, separated laptop compartment can securely hold up to a 17-inch notebook and a 9.7-inch tablet. This compartment features a 180° opening design, which facilitates quick security checks at airports.

SEPARATED LAPTOP COMPARTMENT



Figure 5: The 180° opening laptop compartment, designed for easy access and airport security.

5. Flight Approved Design

The backpack's dimensions are within the maximum limits for IATA flights carry-on luggage, allowing it to be stowed under the seat as a personal item.

6. Water Bottle Holder & Front Pocket

Two side pockets are available to hold your water bottle or umbrella. An adjustable side buckle can tighten items in the main compartment and secure the bottle. A convenient front pocket allows for quick storage and retrieval of frequently used small items.

PRODUCT DETAILS



1 Durable handle



2 Hidden zipper



3 Water bottle
Umbrella pocket



4 Fastening buckle



5 Front pocket

Figure 6: Key features including the water bottle pocket and front pocket.

7. Comfortable & Easy Carry

The backpack features a 3D padded back panel and contoured thick shoulder straps for superior ergonomic comfort. A top handle allows for hand-carrying, and a luggage pass-through strap on the back enables convenient attachment to rolling luggage.



Figure 7: Ergonomic design elements for comfortable carrying, including the luggage strap.

SETUP AND USAGE

Your BANGE 40L Travel Backpack is designed for intuitive use. Here are some guidelines for setting up and using its various features:

1. **Adjusting Shoulder Straps:** Loosen or tighten the adjustable shoulder straps to ensure the backpack sits comfortably on your back, distributing weight evenly.
2. **Utilizing the Luggage Strap:** For easier transport with rolling luggage, slide the backpack's luggage strap over the handle of your suitcase.

- 3. **Packing the Main Compartment:** Use the spacious main compartment for clothing and larger items. The 180° opening allows for easy packing and unpacking, similar to a suitcase.
- 4. **Using the Shoe Compartment:** Place your shoes in the dedicated bottom compartment to keep them separate from other belongings. Ensure the compartment is zipped securely.
- 5. **Securing Laptop/Tablet:** Place your laptop (up to 17 inches) and tablet (up to 9.7 inches) in their respective padded sleeves within the dedicated compartment. Zip securely.
- 6. **Dry-Wet Separation:** Store toiletries, damp towels, or other items that might leak in the dry-wet separated compartment to protect electronics and dry clothes.
- 7. **Water Bottle/Umbrella Storage:** Use the side pockets for quick access to your water bottle or umbrella. Adjust the side buckle to secure taller items.
- 8. **Front Pocket Access:** The front pocket is ideal for small items like passports, tickets, or a phone that you need to access frequently.

Your browser does not support the video tag.

Video 1: A demonstration of the BANGE 40L Travel Backpack's features, including compartment usage, water bottle storage, and laptop sleeve access.

MAINTENANCE

Proper care will extend the life of your BANGE 40L Travel Backpack.

- **Cleaning:** For general cleaning, wipe the exterior with a damp cloth and mild soap. Do not machine wash or tumble dry. Air dry completely before storing.
- **Stain Removal:** For stubborn stains, use a soft brush with a small amount of mild detergent. Rinse thoroughly with a damp cloth.
- **Zipper Care:** Keep zippers free of dirt and debris. If zippers become stiff, apply a small amount of zipper lubricant or wax.
- **Storage:** Store the backpack in a cool, dry place away from direct sunlight when not in use. Ensure it is completely dry to prevent mold or mildew.
- **Avoid Overloading:** Do not exceed the backpack's capacity to prevent strain on zippers, seams, and straps.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Zippers sticking or difficult to close.	Dirt, debris, or lack of lubrication.	Clean zippers with a small brush. Apply zipper lubricant or wax.
Backpack feels uncomfortable or heavy.	Improper weight distribution or strap adjustment.	Adjust shoulder straps for a snug fit. Distribute heavier items closer to your back. Avoid overloading.
Items in shoe compartment smell.	Lack of ventilation.	Ensure the venting hole is clear. Air out the compartment regularly. Consider using shoe deodorizers.

Problem	Possible Cause	Solution
Water seepage (minor).	Exposure to heavy rain or prolonged wet conditions.	While the backpack has water resistance, it is not fully waterproof. For heavy rain, consider using a rain cover. Ensure zippers are fully closed.

SPECIFICATIONS

- **Model Number:** 3029
- **Product Dimensions:** 8 x 13 x 19.5 inches
- **Item Weight:** 3.14 pounds
- **Capacity:** Approximately 40 Liters
- **Laptop Compatibility:** Fits up to 17-inch laptops
- **Material:** Durable, water-resistant fabric
- **Color:** Black (as per current product variant)
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please visit the official BANGE website or contact their customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: BANGE

Official BANGE Store: [Visit BANGE Store on Amazon](#)

© 2025 BANGE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question